

Budgit Electric Hoist

Wiring Diagrams

1 - Phase	Without Transformer	115 Volt	333211 Sheet 1
		230 Volt	333211 Sheet 2
	With Transformer	115 Volt	333211 Sheet 3
		230 Volt	333211 Sheet 4

3 - Phase	1-Speed	230 Volt	333213 Sheet 1
		460 Volt	333213 Sheet 2
		208 & 575 Volt	333213 Sheet 3
	2-Speed	208, 230, 460 & 575 Volt	333213 Sheet 4

Clearance Diagrams

1/4 & 1/2 Ton	Hook	No Trolley	234700 Sheet 1
	Lug	No Trolley	234700 Sheet 5
		Motor Driven Trolley	234700 Sheet 17
		Standard Push Trolley	234700 Sheet 9
		Heavy Duty Push Trolley	234700 Sheet 13

1 Ton	Hook	No Trolley	234700 Sheet 2
	Lug	No Trolley	234700 Sheet 6
		Motor Driven Trolley	234700 Sheet 18
		Standard Push Trolley	234700 Sheet 10
		Heavy Duty Push Trolley	234700 Sheet 14

2 Ton	Hook	No Trolley	234700 Sheet 3
	Lug	No Trolley	234700 Sheet 7
		Motor Driven Trolley	234700 Sheet 19
		Standard Push Trolley	234700 Sheet 11
		Heavy Duty Push Trolley	234700 Sheet 15

3 Ton	Hook	No Trolley	234700 Sheet 4
	Lug	No Trolley	234700 Sheet 8
		Motor Driven Trolley	234700 Sheet 20
		Standard Push Trolley	234700 Sheet 12
		Heavy Duty Push Trolley	234700 Sheet 16