


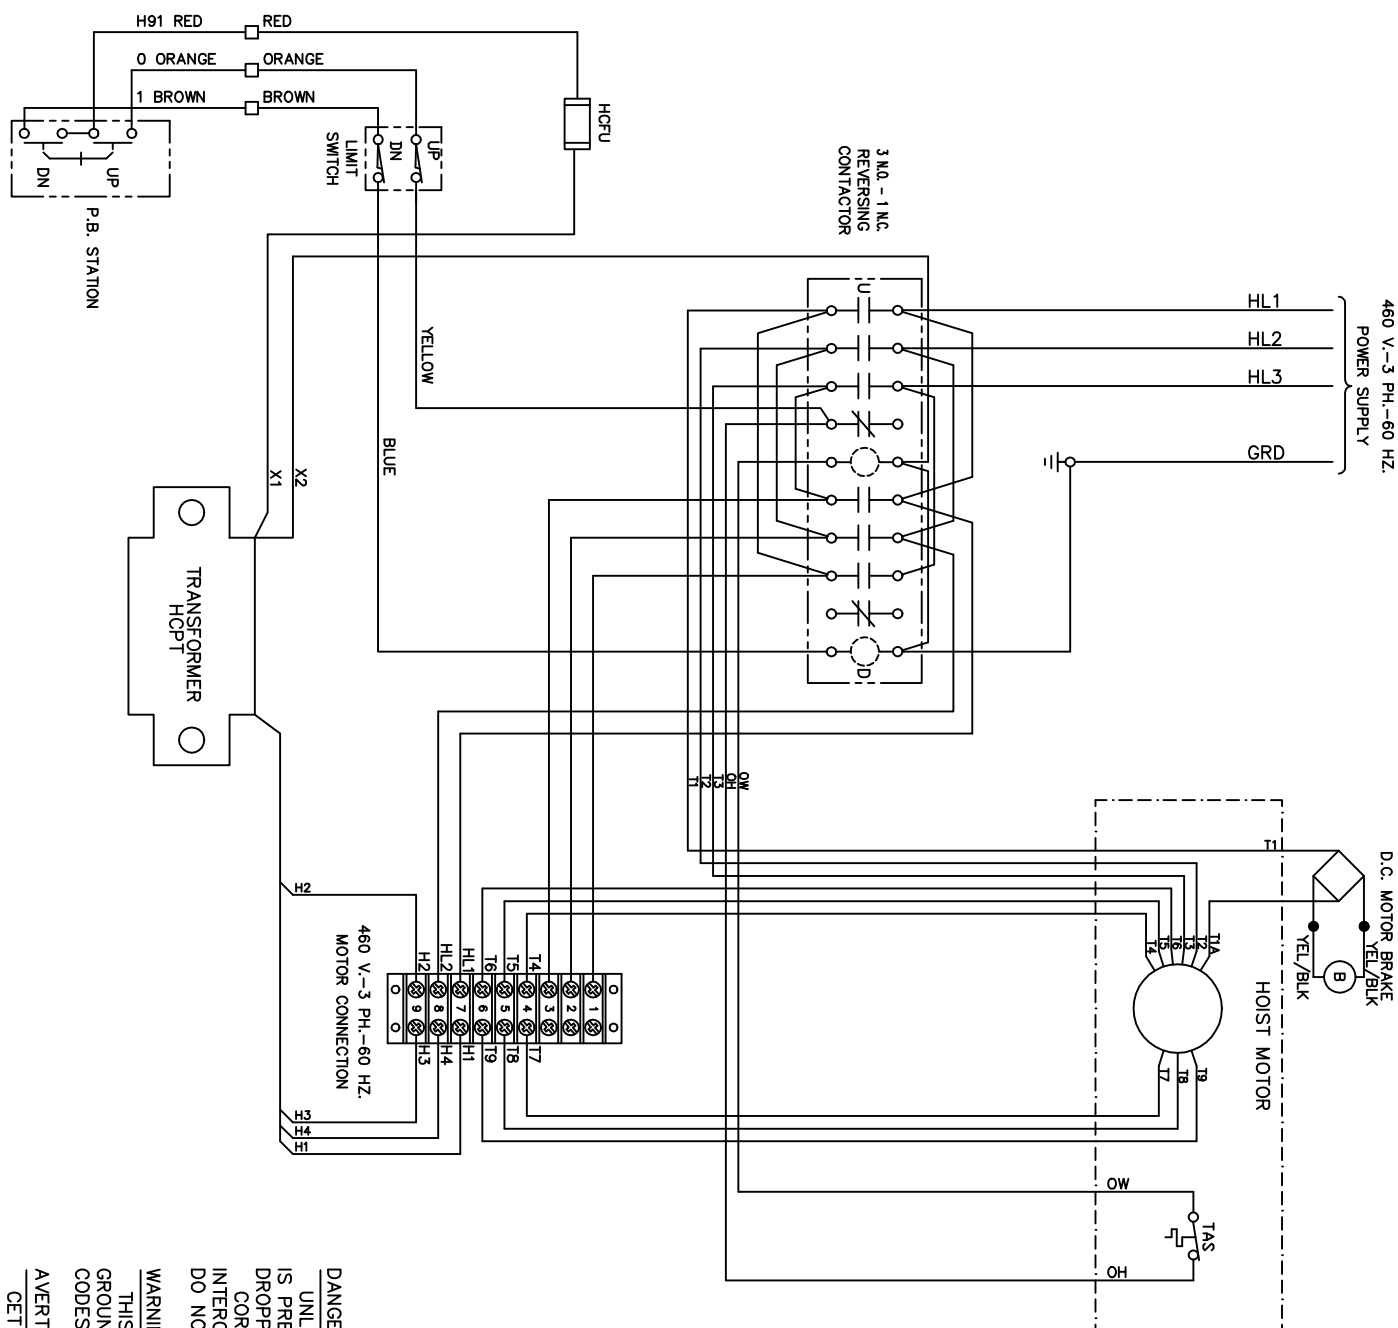

DANGER:

UNLESS HOOK RAISES WHEN "UP" BUTTON IS PRESSED SEVERE HOIST DAMAGE AND A DROPPED LOAD MAY RESULT.
CORRECT IMPROPER HOOK DIRECTION BY INTERCHANGING INPUT POWER L1 AND L3 DO NOT CHANGE PUSHBUTTON WIRING.

WARNING

THIS EQUIPMENT MUST BE EFFECTIVELY
GROUNDED ACCORDING TO APPLICABLE
CODES.

AVERTISSEMENT

CET EQUIPMENT DOIT ETRE MIS A LA TERRE EN ACCORDANCE AVEC LES NORMES EN VIGUEUR.

NO.	CHANGE	DATE	ITL.	WIRING DIAGRAM	460 VOLT
				3 PHASE RECONNECTABLE	
				D.C. SOLENOID BRAKE	
				BUDGIT ELECTRIC HOIST	
				SC. -----	
				DA. 7/19/04	
				DR. RITTER	
				CK.	



YALE • LIFT-TECH
division of Columbus McKinnon Corporation
 Muskegon, Michigan 49443

SHEET 2 OF 4 SHEETS

333173