


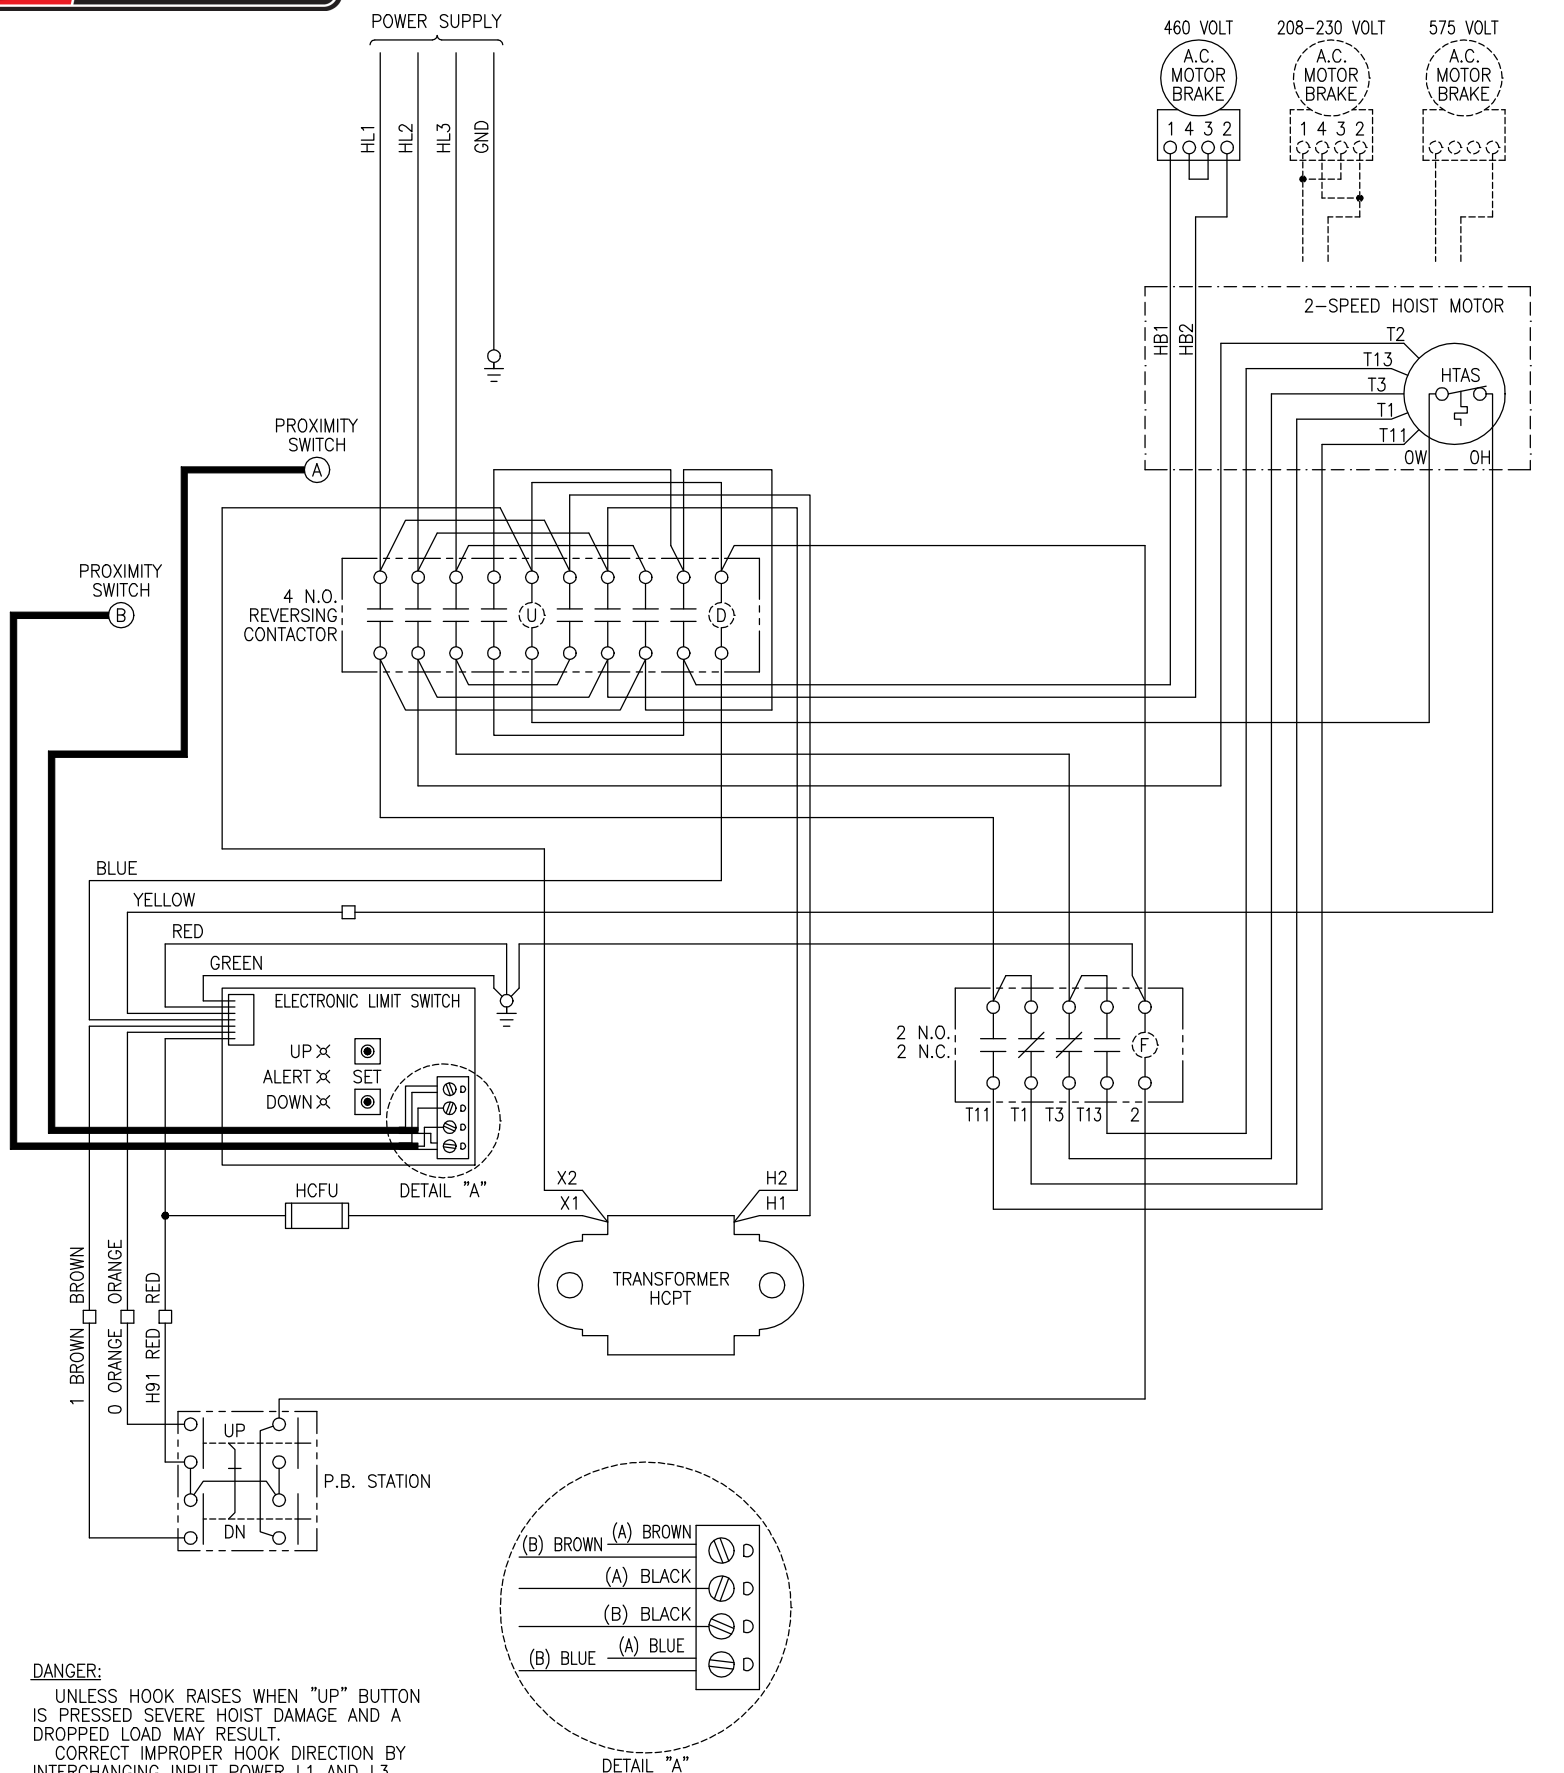

DANGER:

UNLESS HOOK RAISES WHEN "UP" BUTTON IS PRESSED SEVERE HOIST DAMAGE AND A DROPPED LOAD MAY RESULT.

CORRECT IMPROPER HOOK DIRECTION BY
INTERCHANGING INPUT POWER L1 AND L3
DO NOT CHANGE PUSHBUTTON WIRING.

WARNING

THIS EQUIPMENT MUST BE EFFECTIVELY
GROUNDED ACCORDING TO APPLICABLE
CODES.

AVERTISSEMENT

CET EQUIPMENT DOIT ETRE MIS A'LA TERRE
EN ACCORDANCE AVEC LES NORMES EN
VIGUEUR.

NO.	CHANGE	DATE	ITL.	WIRING DIAGRAM	208, 230, 460 or 575 VOLT
				3 PHASE 2-SPEED	
				A.C. SOLENOID BRAKE	
				BUDGIT ELECTRIC HOIST	
				SC. -----	 YALE • LIFT-TECH division of Columbus McKinnon Corporation Muskegon, Michigan 49443
				DA. 8/17/06	
				DR. RITTER	
				CK.	
					SHEET 4 OF 4 SHEETS 333213