

EVERY DAY SINCE 1946

LR Motor Shop Repairs

Job Number 101572

Prepared for Splash Car Wash

9500 Rodney Parham Little Rock AR 72227

Table of Contents

AC Inspection as Found - MOTOR SHOP LR

1.0



AC Inspection as Found

Splash Car Wash 9500 Rodney Parham

Little Rock, AR 72227

AC Inspection - Rev. 2

Location:	MOTOR SHOP LR	
Serial Number:	F2104015337	

Description:15HP BALDOR 3600RPM 254TZ

Hi-Speed Job Number:	101572
Manufacturer:	Baldor
Spec/ID #:	07K090R841G2
Serial Number:	F2104015337
HP/kW:	15 (HP)
RPM:	3500 (RPM)
Frame:	254TZ
Voltage:	230 / 460
Current:	33.8/16.9
Phase:	Three
Hz:	60 (Hz)
Service Factor:	1.15
Enclosure:	TENV
J-box Included:	Complete
Coupling/Sheave:	None
Bearing RTDs:	No
Stator RTDs:	No
Repair Stage:	Final
Heaters:	No
Winding Type :	Random Wound
Bearing Type:	Rolling Element

Priorities Found: **5 - High**

igh 🛛 🕘 2 - Good

Overall Condition

- 1. Report Date
 - 2. Nameplate Picture



3. Photos of all six sides of the machine.

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

> FolderID: 101572 FormID: 17210568











	4.	Describe the Overall Condition of the Equipment as Received		
In	Initial Mechanical/Electrical			
	5.	Does Shaft Turn Freely?	(Yes) Yes	
	6.	Does Shaft Have Visible Damage?	(No) No	
	7.	Assembled Shaft Runout		
	8.	Assembled Shaft End Play		
	9.	Air Gap Variation <10%		
	10.	Lead Condition	(P) Pass	
	11.	Lead Length		

12.	Frame Condition		
13.	Fan Condition		(N) NA
14.	Broken or Missing Components		j-box
	Electrical Inspection		
	Insulation Resistance/Megger		
	Winding Resistance		
	1-2	1-3	2-3
17.	Perform Surge Test		(NA) Not Applicable
	Windings blown		
18.	Number of Stator Slots		
19.	Stator Condition		
20.	Stator Thermistors/Ohms		
21.	Stator Overloads/Ohms		
lech	anical Inspection		
22.	Drive End Bearing Brand		
23.	Drive End Bearing Number-		
24.	Drive End Bearing Qty.		
25.	Drive End Bearing Type		
26.	Drive End Lubrication Type		
27.			
28.	Drive End Wavy Washer/Snap-	Ring Other Retention Device?	
29.	Drive End Bearing Condition		water contamination
30.	Opposite Drive End Bearing Bra	and	
31.	Opposite Drive End Bearing Nu	mber-	
32.	Opposite Drive End Bearing Qt	у.	
33.	Opposite Drive End Bearing Ty	ре	
34.	Opposite Drive End Lubrication	Туре	
35.	Opposite Drive End Bearing Ins	sulation or Grounding Device?	
36.	Opposite Drive End Wavy Wasl	her/Snap-Ring Other Retention Device?	
37.	Opposite Drive End Bearing Co	ndition	water contamination
38.	Drive End Seal		
39.	Opposite Drive End Seal		
Rotor	Inspection		
40.	Rotor Type/Material		
41.	Growler Test		
42.	Number of Rotor Bars		
43.	Rotor Condition		
44.	List the Parts needed for the Re	epair Below	
45.	Signature of Technician that Dis	sassembled Motor	
/lech	anical Fits- Rotor		
46.	Shaft Runout		
47.	Rotor Runout		
	Drive End Bearing Fit	Rotor Body	Opposite Drive End Bearing

48.	Coupling Fit Closest to Bearing Housing			
	0 Degrees	90 Degrees	120 Degrees	
49.	Coupling Fit Closest to the end of the	Shaft		
	0 Degrees	60 Degrees	120 Degrees	
50.	Drive End Bearing Shaft Fit			
	0 Degrees	60 Degrees	120 Degrees	
5 4				
	Drive End Bearing Shaft Fit Condition			
52.	Opposite Drive End Bearing Shaft Fit			
	0 Degrees	60 Degrees	120 Degrees	
53	Opposite Drive End Bearing Shaft Fit	Condition		
	Shaft Air Seal Fits	Condition		
54.	Drive End Air Seal	Opposite Drive End Air Seal		
	Drive End All Seal	Opposite Drive End All Seal		
Mecha	anical Fits- Bearing Housings			
	Drive End - Endbell Bearing Fit			
	0 Degrees	60 Degrees	120 Degrees	
	0 2091000	00 209,000	120 2091000	
56.	Drive End - Endbell Bearing Fit Condi	tion		
	Opposite Drive End - Endbell Bearing			
	0 Degrees	60 Degrees	120 Degrees	
	, ,	<u> </u>	, , , , , , , , , , , , , , , , , , ,	
58.	Opposite Drive End - Endbell Bearing	Fit Condition		
59.	Bearing Cap Condition			
	Drive End Bearing Cap	Opposite Drive End Bearing Cap		
60.	End Bell Air Seal Fits			
	Drive End Air Seal	Opposite Drive End Air Seal		
61	List Machine Work Needed Below			
	Technician			
-				
-	mic Balance Report Rotor Weight and Balance Grade			
63.	-	Balance Grade		
	Rotor Weight	Balance Grade		
64	Initial Balance Readings			
011	Drive End	Opposite Drive End		
65.	Final Balance Readings			
	Drive End	Opposite Drive End		
66.	Technician			
Rewin	nd			
67.	Core Test Results - Watts loss per Po	und		
	Pre-Burnout	Post Burnout		

Pre-Burnout Post-Burnout 69. Post Rewind Electrical Test-Insulation Resistance	68.	Core Hot Spot Test		
70. Post Rewind Polarization Index 71. Post Rewind Winding Resistance 1-2 1-3 2-3 72. Post Rewind Surge Test 7. 73. Post Rewind H-Pot 7. 74. Technician 7. Root Cause of Failure 9. 75. Failure locations 7. 9. 76. Root cause of failure 7. Windings and bearings 7. 9. 76. Root cause of failure 7. Water contamination 7. Mechanical Fits- Rotor - Post Repair 7. 77. Shaft Runout Post Repair 7. 78. Rotio Runout Post Repair 7. 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 9. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 9. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 9. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 9. Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 9. Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Air Seal Opposite Drive End Air Seal		·	Post-Burnout	
70. Post Rewind Polarization Index 71. Post Rewind Winding Resistance 1-2 1-3 2-3 72. Post Rewind Surge Test 7. 73. Post Rewind H-Pot 7. 74. Technician 7. Root Cause of Failure 9. 75. Failure locations 7. 9. 76. Root cause of failure 7. Windings and bearings 7. 9. 76. Root cause of failure 7. Water contamination 7. Mechanical Fits- Rotor - Post Repair 7. 77. Shaft Runout Post Repair 7. 78. Rotio Runout Post Repair 7. 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 9. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 9. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 9. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 9. Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 9. Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Air Seal Opposite Drive End Air Seal				
71. Post Rewind Winding Resistance 1-2 1-3 2-3 72. Post Rewind Surge Test 73. Post Rewind Hi-Pot 74. Technician 74. Technician 75. Failure locations 77. Shaft Ruou Post Repair 77. Shaft Ruour Post Repair 77. Shaft Ruour Post Repair 77. Shaft Ruour Post Repair 78. Rotor Cause of failure 77. Shaft Ruour Post Repair 77. Shaft Ruour Post Repair 78. Rotor Runout Post Repair 77. Shaft Runour Post Repair 77. Shaft Runour Post Repair 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 91. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Repair Sign-off 120 Degrees 60 Degrees 120 Degrees	69.	Post Rewind Electrical Test- Insulatio	n Resistance	
1-2 1-3 2-3 72. Post Rewind Surge Test				
72. Post Rewind Hi-Pot 73. Post Rewind Hi-Pot 74. Technician Root Cause of Failure • 75. Failure locations Windings and bearings • 76. Root cause of failure Water contamination Mechanical Fits- Root - Post Repair 77. Shaft Runout Post Repair 78. Root Runoul Post Repair 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 90 Degrees 90 Degrees 91. Obgrees 60 Degrees 92. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 92. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 93. Shaft Air Seal Fits Post Repair 0 Degrees 60 Degrees 94. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 94. Shaft Repair Sign-off Mechanical Fits-Bearing Housings - Post Repair 0 Degrees 60 Degrees 85. Drive End Air Seal 86. Opposite Drive End Bearing Fit Post Repair 85. Drive End - Endbell Bearing Fit Post Repair 86. Opposite D	71.	Post Rewind Winding Resistance		
73. Post Rewind Hi-Pot 74. Technician Root Cause of Failure 75. Failure locations Windings and bearings 76. Root cause of failure Water contamination Mechanical Fits- Rotor - Post Repair 77. Shaft Runout Post Repair 78. Rotor Runout Post Repair 77. Shaft Runout Post Repair 78. Rotor Runout Post Repair 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 90 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 83. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees		1-2	1-3	2-3
73. Post Rewind Hi-Pot 74. Technician Root Cause of Failure 75. Failure locations Windings and bearings 76. Root cause of failure Water contamination Mechanical Fits- Rotor - Post Repair 77. Shaft Runout Post Repair 78. Rotor Runout Post Repair 77. Shaft Runout Post Repair 78. Rotor Runout Post Repair 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 90 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 83. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees	72.	Post Rewind Surge Test		
Root Cause of Failure • 75. Failure locations Windings and bearings • 76. Root cause of failure Water contamination Mechanical Fits- Rotor - Post Repair 77. Shaft Runout Post Repair The Root Runout Post Repair 78. Rotor Runout Post Repair The Root Runout Post Repair 79. Coupling Fit Closest to Bearing Housing Post Repair Opposite Drive End Bearing 0 Degrees 90 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair ODegrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair ODegrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair ODegrees 60 Degrees 83. Shaft Air Seal Fits Post Repair Opposite Drive End Air Seal 120 Degrees 84. Shaft Repair Sign-off Mechanical Fits-Bearing Housings - Post Repair 120 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell				
 75. Failure locations Windings and bearings 76. Root cause of failure Water contamination Mechanical Fits- Rotor - Post Repair 77. Shaft Runout Post Repair 78. Rotor Runout Post Repair 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees <l< th=""><th>74.</th><th>Technician</th><th></th><th></th></l<>	74.	Technician		
Windings and bearings • 76. Root cause of failure Water contamination Mechanical Fits- Rotor - Post Repair 77. Shaft Runout Post Repair 78. Rotor Runout Post Repair 78. Rotor Runout Post Repair 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 90 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 83. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 94. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 0 Degrees 60 Degrees 120 Degrees	Root	Cause of Failure		
 76. Root cause of failure Water contamination Mechanical Fits- Rotor - Post Repair 77. Shaft Runout Post Repair 78. Rotor Runout Post Repair 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 0 Degrees 60 Degrees 120 Degrees 120 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 	• 75.	Failure locations		
Water contamination Mechanical Fits- Rotor - Post Repair 77. Shaft Runout Post Repair 78. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 79. Coupling Fit Closest to Bearing Housing Post Repair 0 0 Degrees 90 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 0 Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 0 Degrees 0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 0 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 0 97. Drive End Air Seal Opposite Drive End Air Seal 0 84. Shaft Repair Sign-off 0 0 0 Mechanical Fits- Bearing Housings - Post Repair 0 0 0 0 85. Drive End - Endbell Bearing Fit Post Repair 0 0 0 </th <th></th> <th>Windings and bearings</th> <th></th> <th></th>		Windings and bearings		
Mechanical Fits- Rotor - Post Repair 77. Shaft Runout Post Repair 78. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 0 Degrees 90 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 120 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End -	76.			
77. Shaft Runout Post Repair 78. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body 0 Degrees 90 Degrees 120 Degrees 90 Degrees 120 Degrees 90 Degrees 120 Degrees 120 Degrees 120 Degrees 60 Degrees 120 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair Drive End Air Seal 90 Pegrees 60 Degrees 120 Degrees 84. Shaft Repair Sign-off 120 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 0 Degrees 60 Degrees				
78. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 79. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 120 Degrees 120 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 0 Degrees<		•		
Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 79. Coupling Fit Closest to Bearing Housing Post Repair 0 0 Degrees 90 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 0 Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Drive End Air Seal Opposite Drive End Air Seal 84. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 0 0 Degrees 60 Degrees 120 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees 87.		•		
79. Coupling Fit Closest to Bearing Housing Post Repair 0 0 Degrees 90 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 0 Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Degrees 94. Shaft Repair Sign-off Opposite Drive End Air Seal 84. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 0 Degrees 60 Degrees 120 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees 120 Degrees	78.	· ·		
0 Degrees 90 Degrees 120 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 0 0 Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 0 Degrees 60 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 0 Degrees 60 Degrees 120 Degrees 84. Shaft Repair Sign-off Opposite Drive End Air Seal Opposite Drive End Air Seal 120 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 0 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees 120 Degrees		Drive End Bearing Fit	Rotor Body	Opposite Drive End Bearing
80. Coupling Fit Closest to the end of the Shaft Post Repair 0 0 Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 0 0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Degrees 0 Drive End Air Seal Opposite Drive End Air Seal 84. Shaft Repair Sign-off 0 Mechanical Fits- Bearing Housings - Post Repair 0 9 Degrees 60 Degrees 120 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 87. Bearing Cap Condition Post Repair 80 Degrees 120 Degrees 120 Degrees	79.	Coupling Fit Closest to Bearing Housi	ng Post Repair	
0 Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Degrees 120 Degrees 84. Shaft Repair Sign-off 0 Degrees 0 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees 120 Degrees		0 Degrees	90 Degrees	120 Degrees
0 Degrees 60 Degrees 120 Degrees 81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Degrees 120 Degrees 84. Shaft Repair Sign-off 0 Degrees 0 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees 120 Degrees	80.	Coupling Fit Closest to the end of the	Shaft Post Repair	
81. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 83. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal Opposite Drive End Air Seal 84. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 0 Degrees 60 Degrees 120 Degrees 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees 120 Degrees			•	120 Degrees
0 Degrees 60 Degrees 120 Degrees 82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair Drive End Air Seal 0 84. Shaft Repair Sign-off Opposite Drive End Air Seal 0 85. Drive End - Endbell Bearing Fit Post Repair 0 0 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 0 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 0 87. Bearing Cap Condition Post Repair 120 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees 120 Degrees		5	<u> </u>	5
82. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 83. Shaft Air Seal Fits Post Repair Drive End Air Seal 84. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 87. Bearing Cap Condition Post Repair	81.	Drive End Bearing Shaft Fit Post Rep	air	
0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Drive End Air Seal Opposite Drive End Air Seal 84. Shaft Repair Sign-off 10 Mechanical Fits- Bearing Housings - Post Repair 85. Drive End - Endbell Bearing Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees		0 Degrees	60 Degrees	120 Degrees
0 Degrees 60 Degrees 120 Degrees 83. Shaft Air Seal Fits Post Repair 0 Drive End Air Seal Opposite Drive End Air Seal 84. Shaft Repair Sign-off 10 Mechanical Fits- Bearing Housings - Post Repair 85. Drive End - Endbell Bearing Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees	82.	Opposite Drive End Bearing Shaft Fit	Post Repair	
83. Shaft Air Seal Fits Post Repair Drive End Air Seal 0pposite Drive End Air Seal 84. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 87. Bearing Cap Condition Post Repair			·	120 Degrees
Drive End Air Seal Opposite Drive End Air Seal 84. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 87. Bearing Cap Condition Post Repair				
84. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 87. Bearing Cap Condition Post Repair	83.	· ·		
Mechanical Fits- Bearing Housings - Post Repair 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 87. Bearing Cap Condition Post Repair		Drive End Air Seal	Opposite Drive End Air Seal	
 85. Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 	84.	Shaft Repair Sign-off		
0 Degrees 60 Degrees 120 Degrees 86. Opposite Drive End - Endbell Bearing Fit Post Repair 120 Degrees 0 Degrees 60 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees	Mecha	anical Fits- Bearing Housings - P	ost Repair	
86. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 87. Bearing Cap Condition Post Repair	85.	Drive End - Endbell Bearing Fit Post	Repair	
0 Degrees 60 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees		0 Degrees	60 Degrees	120 Degrees
0 Degrees 60 Degrees 120 Degrees 87. Bearing Cap Condition Post Repair 120 Degrees	86.	Opposite Drive End - Endbell Bearing	Fit Post Repair	
87. Bearing Cap Condition Post Repair				120 Degrees
		5	5	Ŭ
Drive End Bearing Cap Opposite Drive End Bearing Cap	87.	Bearing Cap Condition Post Repair		
		Drive End Bearing Cap	Opposite Drive End Bearing Cap	

88.	End Bell Air Seal Fits Post Repair		
	Drive End Air Seal	Opposite Drive End Air Seal	
	End Bell Repair Sign-off		
Assen	nbly		
90.	QC Check All Parts for Cleanliness Pr	ior to Assembly	
91.	Photograph All Major Components price	or to assembly	
92.	Final Insulation Resistance Test		
93.	Assembled Shaft Endplay		
94.	Assembled Shaft Runout		
95.	Test Run Voltage		
	Volts	Volts	Volts
96.	Test Run Amperage		
	Amps	Amps	Amps
07	Drive End Vibration Readings - Inches	Par Second	
97.	Horizontal	Vertical	Axial
	Holizofilai	venical	Axiai
98.	Opposite Drive End Vibration Readings - Inches Per Second		
	Horizontal	Vertical	Axial
	Honzontai	Ventiour	
99.	Ambient Temperature - Fahrenheit		
100.	Drive End Bearing Temps - Fahrenheit		
	5 Minutes	10 Minutes	15 Minutes
101.	Opposite Drive End Bearing Temps - I	Fahrenheit	
	5 Minutes	10 Minutes	15 Minutes
	Document Final Condition with Picture	es after paint	
103.	Final Pics and QC Review		



STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. <u>APPLICABILITY.</u> The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. <u>SCOPE OF GOODS AND/OR SERVICES.</u> The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only be effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. DELIVERY OF GOODS AND/OR SERVICES. Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- 6. DELIVERY SITE AND TIME FOR PERFORMANCE. Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

TermsAndConditions

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. LIMITATION OF DAMAGES. HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY</u>. The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. <u>GOVERNING LAW AND JURISDICTION.</u> Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER</u>. No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. <u>ASSIGNMENT.</u> The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. <u>NO INDIVIDUAL LIABILITY</u>. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.