

EVERY DAY SINCE 1946

LR Motor Shop Repairs

Job Number 102095

Prepared for Worldwide Electric Corporation

One Grove St. Suite 201B Pittsford NY 14534

Table of Contents

AC Inspection as Found - Motor Shop



Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

> FolderID: 102095 FormID: 18463558

AC Inspection as Found

Worldwide Electric Corporation One Grove St. Suite 201B Pittsford, NY 14534

AC Inspection - Rev. 2

Location:	Motor Shop
Serial Number:	R0222410004 KD

Description:100HP WORLDWIDE 3600RPM 365TS

Hi-Speed Job Number:	102095
Manufacturer:	Louis Allis
Product Number:	ODP100-36-365TS
Serial Number:	R0222410004 KD
HP/kW:	100 (HP)
RPM:	3562 (RPM)
Frame:	365TS
Voltage:	230 / 460
Current:	221.2/110.6
Phase:	Three
Hz:	60 (Hz)
Service Factor:	1.0
Enclosure:	ODP
J-box Included:	Complete
Coupling/Sheave:	None
Bearing RTDs:	No
Stator RTDs:	No
Repair Stage:	Final
Heaters:	No
Winding Type :	Random Wound
Bearing Type:	Rolling Element


Priorities Found: **5 - High**

🔵 5 - Good

Overall Condition

1. Report Date

2. Nameplate Picture

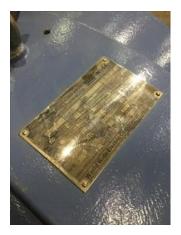

3. Photos of all six sides of the machine.











































4.	Describe the Overall Condition of the Equipment as Received	
	Dirty	
Initial	Mechanical/Electrical	
5.	Does Shaft Turn Freely?	(Yes) Yes
6.	Does Shaft Have Visible Damage?	(No) No
7.	Assembled Shaft Runout	Inches
	Na	
8.	Assembled Shaft End Play	inches
	Na	










9.	Air Gap Variation <10%	
	Na	
10.	Lead Condition	(P) Pass
11.	Lead Length	12 Inches
12.	Lead Numbers	1-9
13.	Frame Condition	pass
14.	Fan Condition	(N) NA
15.	Broken or Missing Components	na
Initia	Electrical Inspection	
16.	Insulation Resistance/Megger	Megohms

- 16. Insulation Resistance/Megger
- Щ. Pass

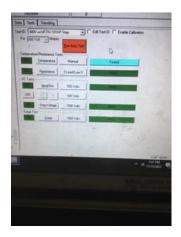

17. Winding Resistance 1-2 1-3 2-3 Щ. Pass ata Tests Transforg Hanud T

18. Perform Surge Test

	ANDETTAL 1215		Edit Test ID IF Enable Calibration
		Bat Auto Tour	D
	Temperature	Hanual	Taxial
	Passares	Vaulties	The state of the s
C3ain	MagDan	5001081	-
DH	821 - 1	500 Notes	
	-Dep Voltage	1500 mate	No. of Concession, name
lage to	- Sep-	1000 Mar 1	
			- 74
		and the second	EXP Constant Party
			A 4 1/100

19.	Number of Stator Slots	36
20.	Stator Condition	pass
21.	Stator Thermistors/Ohms	
-	Na	
22.	Stator Overloads/Ohms	
	Na	
Mecha	anical Inspection	
23.	Drive End Bearing Brand	
	Na	
	110	
24.	Drive End Bearing Number-	6314
		6314 1
24.	Drive End Bearing Number-	
24. 25.	Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type	1
24. 25. 26.	Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type	1 (Ball) Ball Bearing
24. 25. 26. 27.	Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type Drive End Lubrication Type	1 (Ball) Ball Bearing (Grease) Grease Lubricated







31.	Opposite Drive End Bearing Brand	
	Na	
32.	Opposite Drive End Bearing Number-	6212
33.	Opposite Drive End Bearing Qty.	1
34.	Opposite Drive End Bearing Type	(Ball) Ball Bearing

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Powered by INSPECTALL

(Grease) Grease Lubricated	35. Opposite Drive End Lubrication Type
na	36. Opposite Drive End Bearing Insulation or Grounding Device?
wavy washer	37. Opposite Drive End Wavy Washer/Snap-Ring Other Retention Device?
signs of frosting and chemical contamination	38. Opposite Drive End Bearing Condition

39.	Drive End Seal		
	Na		
40.	Opposite Drive End Seal		
	Na		
Rotor	r Inspection		
41.	Rotor Type/Material		(Squirrel Aluminum) Squirrel Cage Aluminum Die Cast
42.	Growler Test		(Pass) Pass
43.	Number of Rotor Bars		34
44.	Rotor Condition		pass
45.	List the Parts needed for the Re	pair Below	
	6212 6314 Bearing sleeve for ODE end bell	bearing fit	
46.	Signature of Technician that Dis	sassembled Motor	Cw
(/ Mª	las	
Mech	anical Fits- Rotor		
	anical Fits- Rotor Shaft Runout		0.001 inches
47.			0.001 inches
47.	Shaft Runout	Rotor Body	0.001 inches Opposite Drive End Bearing
47.	Shaft Runout Rotor Runout	Rotor Body	
47.	Shaft Runout Rotor Runout	Rotor Body	
47. 48.	Shaft Runout Rotor Runout Drive End Bearing Fit Na		
47. 48.	Shaft Runout Rotor Runout Drive End Bearing Fit Na		
47. 48.	Shaft Runout Rotor Runout Drive End Bearing Fit <i>Na</i> Coupling Fit Closest to Bearing	Housing	Opposite Drive End Bearing

	50.	Coupling Fit Closest to the end of the	Shaft		
		0 Degrees	60 Degrees	120 Degrees	
	-	Na			
	51.	Drive End Bearing Shaft Fit			
		0 Degrees	60 Degrees	120 Degrees	
		2.7562	2.7562	2.7561	
		Drive End Bearing Shaft Fit Condition			(P) Pass
	53.	Opposite Drive End Bearing Shaft Fit			
		0 Degrees	60 Degrees	120 Degrees	
		2.3615	2.3611	2.3617	
	54.	Opposite Drive End Bearing Shaft Fit	Condition		(F) Fail
	55.	Shaft Air Seal Fits			
		Drive End Air Seal	Opposite Drive End Air Seal		
	-	Na			
N		anical Fits- Bearing Housings			
	56.	Drive End - Endbell Bearing Fit			
		0 Degrees	60 Degrees	120 Degrees	
		5.9065	5.9064	5.9064	
		Drive End - Endbell Bearing Fit Condi			(P) Pass
	58.	Opposite Drive End - Endbell Bearing			
		0 Degrees	60 Degrees	120 Degrees	
		4.3319	4.3322	4.332	
				41002	
	59.	Opposite Drive End - Endbell Bearing		-1002	(F) Fail
٠		Opposite Drive End - Endbell Bearing Bearing Cap Condition	Fit Condition	1002	(F) Fail
٠		Opposite Drive End - Endbell Bearing		1002	(F) Fail
	60.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap	Fit Condition	1002	(F) Fail
	60.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass	Fit Condition		(F) Fail
•	60.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits	Fit Condition Opposite Drive End Bearing Cap		(F) Fail
	60.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass	Fit Condition		(F) Fail
	60.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal	Fit Condition Opposite Drive End Bearing Cap		(F) Fail
	60. 61.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na	Fit Condition Opposite Drive End Bearing Cap		(F) Fail
	60. •	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below	Fit Condition Opposite Drive End Bearing Cap		(F) Fail
	60. 61. 62.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit	Fit Condition Opposite Drive End Bearing Cap		
	60. 61. 62.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit Technician	Fit Condition Opposite Drive End Bearing Cap Opposite Drive End Air Seal		(F) Fail
	60. 61. 62.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit Technician	Fit Condition Opposite Drive End Bearing Cap Opposite Drive End Air Seal		
	60. 61. 62.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit	Fit Condition Opposite Drive End Bearing Cap Opposite Drive End Air Seal		
	60. 61. 62.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit Technician	Fit Condition Opposite Drive End Bearing Cap Opposite Drive End Air Seal		
	60. 61. 62. 63.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit Technician	Fit Condition Opposite Drive End Bearing Cap Opposite Drive End Air Seal		
	60. 61. 62. 63.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit Technician	Fit Condition Opposite Drive End Bearing Cap Opposite Drive End Air Seal		
	60. 61. 62. 63.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit Technician Mathematical Condition Inic Balance Report Rotor Weight and Balance Grade	Fit Condition Opposite Drive End Bearing Cap Opposite Drive End Air Seal		
	60. 61. 62. 63.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit Technician	Fit Condition Opposite Drive End Bearing Cap Opposite Drive End Air Seal		
	60. 61. 62. 63. (ynar 64.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit Technician	Fit Condition Opposite Drive End Bearing Cap Opposite Drive End Air Seal		
	60. 61. 62. 63.	Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap Pass End Bell Air Seal Fits Drive End Air Seal Na List Machine Work Needed Below ODE shaft and end bell bearing fit Technician Mathematical Condition Inic Balance Report Rotor Weight and Balance Grade	Fit Condition Opposite Drive End Bearing Cap Opposite Drive End Air Seal		

Drive End Opposite Drive End 67. Technician Rewind 68. Core Test Results - Watts loss per Pound Post Burnout 69. Core Hot Spot Test Pre-Burnout Pre-Burnout Post-Burnout 70. Post Rewind Electrical Test- Insulation Resistance	66.	Final Balance Readings					
67. Technician Rewind 68. Core Test Results - Watts loss per Pound Pre-Burnout Post Burnout 69. Core Hot Spot Test Pre-Burnout Post-Burnout 69. Core Hot Spot Test Pre-Burnout Post-Burnout 70. Post Rewind Electrical Test-Insulation Resistance 11. Post Rewind Polarization Index 72. Post Rewind Vinding Resistance 1-2 1-3 73. Post Rewind Surge Test 74. Post Rewind Fleit 75. Technician Root Cause of Failure 76. Failure Iocations 77. Root cause of failure 77. Root cause of failure 77. Root Runout Post Repair 77. Root R		-	Opposite Drive End				
Revind Pre-Burnout Post Burnout Pre-Burnout Post Burnout Pre-Burnout Post Burnout Pre-Burnout Post Revind Electrical Test- Insulation Resistance 70. Post Revind Polarization Index 71. Post Revind Polarization Index 72. Post Revind Winding Resistance 72. Post Revind Surge Test 74. Post Revind Surge Test 74. Post Revind Surge Test 75. Technician 76. Failure Footations 77. Root Cause of Failure 77. Root cause of Failure 77. Root cause of Failure 78. Shaft Runoul Post Repair 30 Degrees<			all serve a server s				
68. Core Test Results - Watts loss per Pound Pre-Burnout Post Burnout 69. Core Hot Spot Test Pre-Burnout Post-Burnout 70. Post Rewind Electrical Test- Insulation Resistance	67.	Technician					
Pre-Burnout Post Burnout 69. Core Hot Spot Test Pre-Burnout Post-Burnout 70. Post Rewind Electrical Test- Insulation Resistance 71. Post Rewind Polarization Index 72. Post Rewind Winding Resistance 73. Post Rewind Winding Resistance 74. Post Rewind Hi-Pot 75. Technician Root Cause of Failure 76. Failure locations 77. Root cause of failure 77. Root cause of failure 77. Root cause of failure 78. Shaft and end bil bearing fits and bearings need to find out if motor is ran off of VFD is so needs an and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an and go sign in staind 78. Shaft Runout Post Repair 78. Rotor Runout Post Repair 79. Rotor Runout Post Repair 79. Rotor Runout Post Repair 0 Degrees 90 Degrees 90 Degrees 90 Degrees 90 Degrees 60 Degrees 90 Degrees 60 Degrees	Rewir	nd					
 69. Core Hot Spot Test Pre-Burnout Post-Burnout Post-Burnout Post Rewind Electrical Test-Insulation Resistance 70. Post Rewind Electrical Test-Insulation Resistance 71. Post Rewind Delarization Index 72. Post Rewind Winding Resistance 1-2 1-3 2-3 73. Post Rewind Winding Resistance 74. Post Rewind Hi-Pot 75. Technician Root Cause of Failure 77. Root cause of Failure 77. Root cause of failure 77. Root cause of failure 78. Shaft Runout Post Repair 79. Roitor Root or Post Repair 79. Root Rout nost Repair Fits 79. Root Runout Post Repair 79. Root Cause of failure 79. Root Cause of failure 79. Root Cause of failure 79. Root Runout Post Repair 79. Root Cause of Specific Repair 79. Root Runout Post Repair 70. Degrees 70. Coupling Fit Closest to Bearing Houtsing Post Repair 70. Degrees 70. Coupling Fit Runout Post Repair 70. Degrees 70. Root Runout Post Repair 70. Degrees 70. Root Runout Post Repair 70. Root Runout Post Repair 70. Degrees 70. Coupling Fit Runout Post Repair 70. Root Runout Post Runout Post Runout 70. Root Runout Post Runout Post Runout 70. Root Runout Post Runo	68.	Core Test Results - Watts loss per Pe	bund				
Pre-Burnout Post-Burnout 70. Post Rewind Electrical Test- Insulation Resistance 71. Post Rewind Polarization Index 72. Post Rewind Winding Resistance 73. Post Rewind Surge Test 74. Post Rewind Winding Resistance 75. Teshrinician Tother Rewind Hi-Pot 75. Teshrinician Tother Rewind Hi-Pot 76. Failure locations ODE shaft and end bel bearing fits and bearings Teshrinician Tother Test Rotor - Post Repair ODE shaft and end bel bearing fits and bearings need to find out if motor is ran off of VFD is so needs an aegis fing installed ODE shaft and not possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis fing installed ODE shaft and not possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis fing installed ODE shaft and not possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis fing installed ODE gearing Fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis fing installed 0 Degrees 90 Degrees <th></th> <th>Pre-Burnout</th> <th>Post Burnout</th> <th></th>		Pre-Burnout	Post Burnout				
Pre-Burnout Post-Burnout 70. Post Rewind Electrical Test- Insulation Resistance 71. Post Rewind Polarization Index 72. Post Rewind Winding Resistance 73. Post Rewind Surge Test 74. Post Rewind Winding Resistance 75. Teshrinician Tother Rewind Hi-Pot 75. Teshrinician Tother Rewind Hi-Pot 76. Failure locations ODE shaft and end bel bearing fits and bearings Teshrinician Tother Test Rotor - Post Repair ODE shaft and end bel bearing fits and bearings need to find out if motor is ran off of VFD is so needs an aegis fing installed ODE shaft and not possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis fing installed ODE shaft and not possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis fing installed ODE shaft and not possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis fing installed ODE gearing Fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis fing installed 0 Degrees 90 Degrees <th>00</th> <th></th> <th></th> <th></th>	00						
 Post Rewind Electrical Test- Insulation Resistance Post Rewind Polarization Index Post Rewind Polarization Index Post Rewind Winding Resistance 1-2 1-3 2-3 Post Rewind Surge Test Post Rewind Hi-Pot To Enhician Root Cause of Failure Post Read end bell bearing fits and bearings Post Read end bell bearing fits and bearings in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed Root Cause of Reading Tist went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed Root Runout Post Repair Rotor Runout Post Repair Rotor Runout Post Repair Drive End Bearing Fit Root Root Post Repair O Degrees 00 Degrees<	69.	·	Deet Dura eut				
71. Post Rewind Polarization Index 72. Post Rewind Winding Resistance 1-2 1-3 2-3 73. Post Rewind Surge Test - 74. Post Rewind Hi-Pot - - 75. Technician Rott Cause of Failure - 76. Failure locations - - 0DE shaft and end bel bearing fits and bearings - - 77. Rot cause of failure - - 0DE bearing fits went down and possible trosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed - Mechanical Fits-Rotor - Post Repair - - 77. Rotor Runout Post Repair - - 78. Shaft Runout Post Repair - - 79. Rotor Runout Post Repair - - 0 Degrees 90 Degrees 120 Degrees 10 Degrees 60 Degrees 120 Degrees 11. Coupling Fit Closest to the end of the Shaft Post Repair - - 0 Degrees 60 Degrees 120 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair - - - 0 Degrees 60 Degrees 1		Pre-Bumoul	Post-Bumoul				
72. Post Rewind Winding Resistance 1-3 2-3 73. Post Rewind Surge Test - 74. Post Rewind Hi-Pot - 75. Technician - Roto Cause of Failure Roto Cause of Failure 76. Failure locations - 0DE shaft and end bell bearing fits and bearings - 77. Rot cause of failure - 0DE carring fits went down and possible trosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed Methamilie Methamilie To Rotor Cause of failure 0DE gearing fits went down and possible trosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed Methamilie Methamilie To Rotor Runout Post Repair 0 Rotor Runout Post Repair Opposite Drive End Bearing Fit 0 Degrees 90 Degrees 120 Degrees 0 Degrees 60 Degrees 120 Degrees <th>70.</th> <th>Post Rewind Electrical Test- Insulation</th> <th>on Resistance</th> <th></th>	70.	Post Rewind Electrical Test- Insulation	on Resistance				
1-2 1-3 2-3 73. Post Rewind Surge Test	71.	Post Rewind Polarization Index					
73. Post Rewind Surge Test	72.	Post Rewind Winding Resistance					
74. Post Rewind Hi-Pot 75. Technician Root Cause of Failure 76. Failure locations ODE shaft and end bell bearing fits and bearings 77. Root cause of failure ODE bearing fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed Mechanical Fits- Root - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair 79. Degrees 90 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 79. Degrees 60 Degrees 70. Degrees 60 Degrees 70. Degrees 60 Degrees 71. Opposite Drive End Bearing Shaft Fit Post Repair 70. Degrees 60 Degrees 70. Degrees		1-2	1-3	2-3			
74. Post Rewind Hi-Pot 75. Technician Root Cause of Failure 76. Failure locations ODE shaft and end bell bearing fits and bearings 77. Root cause of failure ODE bearing fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed Mechanical Fits- Root - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair 79. Degrees 90 Degrees 80. Coupling Fit Closest to the end of the Shaft Post Repair 79. Degrees 60 Degrees 70. Degrees 60 Degrees 70. Degrees 60 Degrees 71. Opposite Drive End Bearing Shaft Fit Post Repair 70. Degrees 60 Degrees 70. Degrees							
75. Technician Root Cause of Failure • 76. Failure locations <i>ODE shaft and end bell bearing fits and bearings</i> • 77. Root cause of failure <i>ODE bearing fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair 79. Rotor Runout Post Repair 70. 70. 70. 70. 71. 72. 73. 74. 75. 75. 76. 77. 78. 79. 70. 70. 71. 71. 72. 73. 74. 75. 75. 75. 75. 75. 76. 77. 77. 77. 77. 77. 77. 77. 77</i>							
Root Cause of Failure • 76. Failure locations ODE shaft and end bell bearing fits and bearings • 77. Root cause of failure ODE bearing fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aregistring installed Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair 0 Degrees 90 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 84. Shaft Air Seal Fits Post Repair 0 Degrees 60 Degrees 84. Shaft Air Seal Fits Post Repair 0 Drive End Air Seal 0 Drive End Ai							
 76. Failure locations <i>ODE shaft and end bell bearing fits and bearings</i> 77. Root cause of failure <i>ODE bearing fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed</i> Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair 70. Coupling Fit Closest to Bearing Housing Post Repair 70. Degrees 90 Degrees 120 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 70. Degrees 60 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 73. Opgosite Drive End Bearing Shaft Fit Post Repair 74. Shaft Air Seal Fits Post Repair 75. Shaft Air Seal Fits Post Repair 76. Degrees 77. Coupling Fit Seal Fits Post Repair 78. Opposite Drive End Air Seal 78. Opposite Drive End Air Seal 79. Opposite Drive End Air Seal 70. Degrees	-						
ODE shaft and end bell bearing fits and bearings • 77. Root cause of failure ODE bearing fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed • Mecharical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair 79. Rotor Runout Post Repair 0 Degrees 90 Degrees 90 Degrees 90 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 91. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 84. Shaft Air Seal Fits Post Repair 0 Degrees 60 Degrees 90 Degrees 120 Degrees 85. Shaft Repair Sign-off							
 77. Root cause of failure ODE bearing fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair 79. Rotor Runout Post Repair 70. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 90 Degrees 120 Degrees) 76.		1 hoorings				
ODE bearing fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs an aegis ring installed Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair 79. Rotor Runout Post Repair 0 Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair 120 Degrees 85. Shaft Repair Sign-off Opposite Drive End Air Seal	7 7		i bearings				
Meci-sector - Post Repair78.Shaft Runout Post Repair79.Rotor Runout Post Repair79.Drive End Bearing FitRotor BodyOpposite Drive End Bearing80.Coupling Fit Closest to Bearing HoussPost Repair80.Coupling Fit Closest to Bearing HoussPost Repair120 Degrees81.Coupling Fit Closest to the end of the Shaft Post Repair120 Degrees82.Opegrees60 Degrees120 Degrees83.Opegrees60 Degrees120 Degrees83.Opposite Drive End Bearing Shaft Fit Post Repair120 Degrees83.Opposite Drive End Bearing Shaft Fit Post Repair120 Degrees84.Shaft Air Seal Fits Post Repair120 Degrees85.Shaft Repair Sign-offOpposite Drive End Air Seal	• 11.	ODE bearing fits went down and possible frosting in both bearings need to find out if motor is ran off of VFD is so needs					
79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Opposite Drive End Air Seal Staft Repair Sign-off	Mecha	anical Fits- Rotor - Post Repair					
Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 120 Degrees 80. Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 120 Degrees 84. Shaft Air Seal Fits Post Repair 120 Degrees 84. Shaft Air Seal Fits Post Repair 120 Degrees 90 Degrees 0 Opposite Drive End Air Seal 120 Degrees 85. Shaft Repair Sign-off 120 Degrees	78.	Shaft Runout Post Repair					
80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair 0 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair 0 Degrees 120 Degrees 85. Shaft Repair Sign-off Opposite Drive End Air Seal 0	79.	Rotor Runout Post Repair					
0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 120 Degrees 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair 120 Degrees 0 Drive End Air Seal Fits Post Repair 0 Degrees 120 Degrees 85. Shaft Repair Sign-off 0 Opposite Drive End Air Seal		Drive End Bearing Fit	Rotor Body	Opposite Drive End Bearing			
81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair 0 Degrees 120 Degrees 85. Shaft Repair Sign-off 0 Opposite Drive End Air Seal 120 Degrees	80.	Coupling Fit Closest to Bearing Hous	Coupling Fit Closest to Bearing Housing Post Repair				
0 Degrees60 Degrees120 Degrees82. Drive End Bearing Shaft Fit Post Repair		0 Degrees	90 Degrees	120 Degrees			
0 Degrees60 Degrees120 Degrees82. Drive End Bearing Shaft Fit Post Repair							
82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off	81.		·				
0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 7 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair 7 Drive End Air Seal Opposite Drive End Air Seal 7 85. Shaft Repair Sign-off 7		0 Degrees	60 Degrees	120 Degrees			
83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Shaft Repair Sign-off Staft Repair Sign-off	82.	Drive End Bearing Shaft Fit Post Repair					
0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off		0 Degrees	60 Degrees	120 Degrees			
0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off							
84. Shaft Air Seal Fits Post Repair Drive End Air Seal 85. Shaft Repair Sign-off	83.		·				
Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off		0 Degrees	60 Degrees	120 Degrees			
85. Shaft Repair Sign-off	84.	Shaft Air Seal Fits Post Repair					
· ·		Drive End Air Seal	Opposite Drive End Air Seal				
Mechanical Fits- Bearing Housings - Post Repair	85.	Shaft Repair Sign-off					
	Mecha	anical Fits- Bearing Housings - F	Post Repair				

86. Drive End - Endbell Bearing Fit Post Repair 120 Degrees 0 Degrees 60 Degrees 120 Degrees 87. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 120 Degrees 88. Bearing Cap Condition Post Repair 0 Opposite Drive End Bearing Cap 120 Degrees 88. Bearing Cap Condition Post Repair 0 Opposite Drive End Bearing Cap 120 Degrees 89. End Bell Air Seal Fits Post Repair 0 Doposite Drive End Air Seal 120 Degrees 90. End Bell Repair Sign-off Assembly 120 Degrees 120 Degrees 91. QC Check All Parts for Cleanliness Prior to Assembly 90 91 QC Check All Parts for Cleanliness Prior to assembly 91 92. Photograph All Major Components prior to assembly 92 93 94 Assembled Shaft Endplay 93. Final Insulation Resistance Test 94 4 Assembled Shaft Endplay 95 94. Assembled Shaft Endplay 95 Assembled Shaft Endplay 96 97 95. Assembled Shaft Runout 98 Volts Volts Volts 97. Test Run Amperage Amps Amps Amps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical <t< th=""><th>60 Degrees 120 Degrees Bearing Fit Post Repair 60 Degrees 60 Degrees 120 Degrees tepair Opposite Drive End Bearing Cap opposite Drive End Air Seal Image: Composite Drive End Air Seal iness Prior to Assembly Image: Composite Drive End Air Seal iness Prior to Assembly Image: Composite Drive End Air Seal iness Prior to Assembly Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal </th></t<> <th></th> <th></th> <th></th> <th></th>	60 Degrees 120 Degrees Bearing Fit Post Repair 60 Degrees 60 Degrees 120 Degrees tepair Opposite Drive End Bearing Cap opposite Drive End Air Seal Image: Composite Drive End Air Seal iness Prior to Assembly Image: Composite Drive End Air Seal iness Prior to Assembly Image: Composite Drive End Air Seal iness Prior to Assembly Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal Image: Composite Drive End Air Seal							
87. Opposite Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 88. Bearing Cap Condition Post Repair Drive End Bearing Cap Opposite Drive End Bearing Cap 89. End Bell Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 90. End Bell Repair Sign-off Assembly Image: Sign-off Assembly 91. QC Check All Parts for Cleanliness Prior to Assembly 92. Photograph All Major Components prior to Assembly 92. Photograph All Major Components prior to assembly 93. Final Insulation Resistance Test Image: Sign-off 4. Assembled Shaft Endplay 95. Assembled Shaft Runout Image: Sign-off Image: Sign-off 93. Final Insulation Resistance Test Image: Sign-off Image: Sign-off Image: Sign-off 94. Assembled Shaft Endplay Image: Sign-off Image: Sign-off Image: Sign-off Image: Sign-off 95. Assembled Shaft Runout Image: Sign-off Image: Sign-off Image: Sign-off Image: Sign-off 96. Test Run Voltage Volts Volts Volts Volts Image: Sign-off 97. Test Run Amperage Amps Amps Amps Image: Sign-off Image: Sign-off 98. Drive End Vibrat	Bearing Fit Post Repair 60 Degrees 120 Degrees tepair Opposite Drive End Bearing Cap pair Opposite Drive End Air Seal pair Opposite Drive End Air Seal iness Prior to Assembly inest prior to assembly inter prior	86.	Drive End - Endbell Bearing Fit Post Repair					
0 Degrees 60 Degrees 120 Degrees 88. Bearing Cap Condition Post Repair Drive End Bearing Cap Opposite Drive End Bearing Cap 89. End Bell Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 90. End Bell Repair Sign-off Opposite Drive End Air Seal 91. QC Check All Parts for Cleanliness Prior to Assembly 92 92. Photograph All Major Components prior to Assembly 93 93. Final Insulation Resistance Test 94 94. Assembled Shaft Endplay 95 95. Assembled Shaft Runout 96 96. Test Run Voltage Volts Volts Volts 97. Test Run Amperage Armps Armps Armps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical Vatial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 90. Ambient Temperature - Fahrenheit 10 100. Ambient Temperature - Fahrenheit 5 101. Drive End Bearing Temps - Fahrenheit 15 102. Opposite Drive End Bearing Temps - Fahrenheit 15 102. Opposite Drive End Bearing Temps - Fahrenheit 10	60 Degrees 120 Degrees tepair Opposite Drive End Bearing Cap pair Opposite Drive End Air Seal opposite Drive End Air Seal Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal volts Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal Index prior to assembly Imposite Drive End Air Seal Volts Volts Volts Volts Inches Per Second Imposite Drive End Air Seal Inches Per Second Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal Inheit Imposite Drive End Air Seal Imposite Drive End Air Seal Inheit Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal<		0 Degrees	60 Degrees	120 Degrees			
0 Degrees 60 Degrees 120 Degrees 88. Bearing Cap Condition Post Repair Drive End Bearing Cap Opposite Drive End Bearing Cap 89. End Bell Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 90. End Bell Repair Sign-off Opposite Drive End Air Seal 91. QC Check All Parts for Cleanliness Prior to Assembly 92 92. Photograph All Major Components prior to Assembly 93 93. Final Insulation Resistance Test 94 94. Assembled Shaft Endplay 95 95. Assembled Shaft Runout 96 96. Test Run Voltage Volts Volts Volts 97. Test Run Amperage Armps Armps Armps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical Vatial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 90. Ambient Temperature - Fahrenheit 10 100. Ambient Temperature - Fahrenheit 5 101. Drive End Bearing Temps - Fahrenheit 15 102. Opposite Drive End Bearing Temps - Fahrenheit 15 102. Opposite Drive End Bearing Temps - Fahrenheit 10	60 Degrees 120 Degrees tepair Opposite Drive End Bearing Cap pair Opposite Drive End Air Seal opposite Drive End Air Seal Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal volts Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal iness Prior to Assembly Imposite Drive End Air Seal Index prior to assembly Imposite Drive End Air Seal Volts Volts Volts Volts Inches Per Second Imposite Drive End Air Seal Inches Per Second Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal Inheit Imposite Drive End Air Seal Imposite Drive End Air Seal Inheit Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal Imposite Drive End Air Seal<							
88. Bearing Cap Condition Post Repair Drive End Bearing Cap Opposite Drive End Bearing Cap 89. End Bell Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 90. End Bell Repair Sign-off Assembly 91. QC Check All Parts for Cleanliness Prior to Assembly 92. Photograph All Major Components prior to assembly 92. Photograph All Major Components prior to assembly 93. Final Insulation Resistance Test 94. Assembled Shaft Endplay 95. Assembled Shaft Runout 96. Test Run Voltage Volts 95. Test Run Amperage Amps Amps Amps 97. Test Run Amperage Amps Amps Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical Axial 100. Ambient Temperature - Fahrenheit 10 Minutes 15 Minutes 10 Minutes 15 Minutes	tepair Opposite Drive End Bearing Cap pair Opposite Drive End Air Seal p	87.	Opposite Drive End - Endbell Bearing Fit Post Repair					
Drive End Bearing Cap Opposite Drive End Bearing Cap 89. End Bell Air Seal Fits Post Repair Drive End Air Seal 90. End Bell Repair Sign-off Opposite Drive End Air Seal 91. QC Check All Parts for Cleanliness Prior to Assembly 9 92. Photograph All Major Components prior to assembly 9 93. Final Insulation Resistance Test 9 94. Assembled Shaft Endplay 9 95. Assembled Shaft Runout 9 96. Test Run Voltage Volts Volts Volts 97. Test Run Amperage Amps Amps Amps 98. Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 100. Ambient Temperature - Fahrenheit 10 Minutes 15 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 15 Minutes	Opposite Drive End Bearing Cap ipair Opposite Drive End Air Seal iness Prior to Assembly iness Prior to Assembly inents prior to assembly inents prior to assembly inest Per Second Vertical Axial Readings - Inches Per Second Vertical Axial inest Per Second Intersect Vertical Intersect intersect Intersect		0 Degrees	60 Degrees	120 Degrees			
Drive End Bearing Cap Opposite Drive End Bearing Cap 89. End Bell Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 90. End Bell Repair Sign-off Assembly	Opposite Drive End Bearing Cap ipair Opposite Drive End Air Seal iness Prior to Assembly iness Prior to Assembly inents prior to assembly inents prior to assembly inest Per Second Vertical Axial Readings - Inches Per Second Vertical Axial inest Per Second Intersect Vertical Intersect intersect Intersect							
89. End Bell Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 90. End Bell Repair Sign-off Assembly 91. QC Check All Parts for Cleanliness Prior to Assembly 92 93. Final Insulation Resistance Test 94 94. Assembled Shaft Endplay 95 95. Assembled Shaft Endplay 96 96. Test Run Voltage Volts Volts Volts Volts 97. Test Run Amperage Amps Amps Amps Amps 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Axial 100. Ambient Temperature - Fahrenheit 10 Minutes 15 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 15 Minutes	pair Opposite Drive End Air Seal iness Prior to Assembly inents prior to assembly ist Volts Volts Volts Volts Volts Amps Am	88.						
Drive End Air Seal Opposite Drive End Air Seal 90. End Bell Repair Sign-off Assembly 91. QC Check All Parts for Cleanliness Prior to Assembly 93. Final Insulation Resistance Test 93. Final Insulation Resistance Test 94. Assembled Shaft Endplay 95. Assembled Shaft Endplay 95. Assembled Shaft Endplay 96. Test Run Voltage Volts Volts Volts 97. Test Run Amperage Amps Amps Amps 98. Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 90. Ambient Temperature - Fahrenheit Vertical Axial 100. Ambient Temperature - Fahrenheit 10 Minutes 15 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes	Opposite Drive End Air Seal iness Prior to Assembly nents prior to assembly set Volts Volts Volts Amps Amps - Inches Per Second Vertical Axial Readings - Inches Per Second Vertical Axial nheit ahrenheit 10 Minutes 15 Minutes		Drive End Bearing Cap	Opposite Drive End Bearing Cap				
90. End Bell Repair Sign-off Assembly 91. QC Check All Parts for Cleanliness Prior to Assembly 92. Photograph All Major Components prior to assembly 93. Final Insulation Resistance Test 94. Assembled Shaft Endplay 95. Assembled Shaft Endplay 96. Test Run Voltage Volts Volts 97. Test Run Amperage Amps Amps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 102. Opposite Drive End Bearing Temps - Fahrenheit	iness Prior to Assembly hents prior to assembly est Volts Volts Volts Amps Am	89.	End Bell Air Seal Fits Post Repair					
Assembly 91. QC Check All Parts for Cleanliness Prior to Assembly 92. Photograph All Major Components prior to assembly 93. Final Insulation Resistance Test 94. Assembled Shaft Endplay 95. Assembled Shaft Runout 96. Test Run Voltage Volts Volts 97. Test Run Amperage Amps Amps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 102. Opposite Drive End Bearing Temps - Fahrenheit 103. Minutes 15 Minutes	eents prior to assembly est Volts Volts Volts Amp		Drive End Air Seal	Opposite Drive End Air Seal				
Assembly 91. QC Check All Parts for Cleanliness Prior to Assembly 92. Photograph All Major Components prior to assembly 93. Final Insulation Resistance Test 94. Assembled Shaft Endplay 95. Assembled Shaft Runout 96. Test Run Voltage Volts Volts 97. Test Run Amperage Amps Amps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 102. Opposite Drive End Bearing Temps - Fahrenheit 103. Minutes 15 Minutes	eents prior to assembly est Volts Volts Volts Amp							
91. QC Check All Parts for Cleanliness Prior to Assembly 92. Photograph All Major Components prior to assembly 93. Final Insulation Resistance Test 94. Assembled Shaft Endplay 95. Assembled Shaft Runout 96. Test Run Voltage Volts Volts 97. Test Run Amperage Amps Amps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 102. Opposite Drive End Bearing Temps - Fahrenheit 102. Opposite Drive End Bearing Temps - Fahrenheit 102. Opposite Drive End Bearing Temps - Fahrenheit	eents prior to assembly est Volts Volts Volts Amp	90.	End Bell Repair Sign-off					
92. Photograph All Major Components prior to assembly 93. Final Insulation Resistance Test 94. Assembled Shaft Endplay 95. Assembled Shaft Runout 96. Test Run Voltage Volts Volts 97. Test Run Amperage Amps Amps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes	eents prior to assembly est Volts Volts Volts Amp	Assen	embly					
93. Final Insulation Resistance Test 94. Assembled Shaft Endplay 95. Assembled Shaft Runout 96. Test Run Voltage Volts Volts 97. Test Run Amperage Amps Amps Amps Amps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 102. Opposite Drive End Bearing Temps - Fahrenheit 103. Sinutes 10 Minutes 104. Minutes 15 Minutes	est Volts Volts Amps Amps - Inches Per Second Vertical Axial Readings - Inches Per Second Vertical Axial Readings - Inches Per Second Vertical I Axial Readings - Inches Per Second Vertical I Axial	91.		-				
94. Assembled Shaft Endplay 95. Assembled Shaft Runout 96. Test Run Voltage Volts Volts 97. Test Run Amperage Amps Amps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical Axial 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 103. Opposite Drive End Bearing Temps - Fahrenheit	Volts Volts Amps Amps Amps Amps - Inches Per Second Vertical Vertical Axial Readings - Inches Per Second Vertical Vertical Axial Inheit Image: Comparison of the second of th							
95. Assembled Shaft Runout 96. Test Run Voltage Volts Volts 97. Test Run Amperage Amps Amps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical Axial 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 102. Opposite Drive End Bearing Temps - Fahrenheit	Amps Amps - Inches Per Second Vertical Axial Readings - Inches Per Second Vertical Axial nheit ahrenheit 10 Minutes 15 Minutes 15 Minutes		Final Insulation Resistance Test					
96. Test Run Voltage Volts Volts Volts Volts Volts 97. Test Run Amperage Amps Amps Amps Amps Amps 98. Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 100. Ambient Temperature - Fahrenheit Axial 101. Drive End Bearing Temps - Fahrenheit 15 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 15 Minutes	Amps Amps - Inches Per Second Vertical Axial Readings - Inches Per Second Vertical Axial nheit ahrenheit 10 Minutes 15 Minutes 15 Minutes							
Volts Volts Volts 97. Test Run Amperage Amps Amps Amps Amps Amps 98. Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 100. Ambient Temperature - Fahrenheit 5 Minutes 101. Drive End Bearing Temps - Fahrenheit 15 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 15 Minutes	Amps Amps - Inches Per Second Vertical Axial Readings - Inches Per Second Vertical Axial nheit ahrenheit 10 Minutes 15 Minutes 15 Minutes							
97. Test Run Amperage Amps Amps Amps Amps 98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical Axial 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes	Amps Amps - Inches Per Second Vertical Axial Readings - Inches Per Second Vertical Axial nheit ahrenheit 10 Minutes 15 Minutes 15 Minutes	96.	Test Run Voltage					
Amps Amps Amps 98. Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 100. Ambient Temperature - Fahrenheit Axial 101. Drive End Bearing Temps - Fahrenheit 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 15 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 15 Minutes	- Inches Per Second Vertical Axial Readings - Inches Per Second Vertical Axial nheit ahrenheit 10 Minutes 15 Minutes		Volts	Volts	Volts			
Amps Amps Amps 98. Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 99. Opposite Drive End Vibration Readings - Inches Per Second Axial 100. Ambient Temperature - Fahrenheit Axial 101. Drive End Bearing Temps - Fahrenheit 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 15 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 15 Minutes	- Inches Per Second Vertical Axial Readings - Inches Per Second Vertical Axial nheit ahrenheit 10 Minutes 15 Minutes	97.	Test Run Amperage					
98. Drive End Vibration Readings - Inches Per Second Horizontal Vertical 99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical Axial 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit	- Inches Per Second Vertical Axial Readings - Inches Per Second Vertical Axial nheit ahrenheit 10 Minutes 15 Minutes			Amps	Amps			
Horizontal Vertical Axial 99. Opposite Drive End Vibration Readings - Inches Per Second	Vertical Axial Readings - Inches Per Second Vertical Axial nheit ahrenheit 10 Minutes 10 Minutes Temps - Fahrenheit 10 Minutes 15 Minutes		7	741100	, unpo			
99. Opposite Drive End Vibration Readings - Inches Per Second Horizontal Vertical 100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes	Readings - Inches Per Second Vertical Axial nheit ahrenheit 10 Minutes 15 Minutes remps - Fahrenheit 10 Minutes 15 Minutes	98.	Drive End Vibration Readings - Inches Per Second					
Horizontal Vertical Axial 100. Ambient Temperature - Fahrenheit - 101. Drive End Bearing Temps - Fahrenheit - 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes	Vertical Axial Nheit Ahrenheit 10 Minutes 15 Minutes Temps - Fahrenheit 10 Minutes 15 Minutes		Horizontal	Vertical	Axial			
Horizontal Vertical Axial 100. Ambient Temperature - Fahrenheit - 101. Drive End Bearing Temps - Fahrenheit - 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes	Vertical Axial Nheit Ahrenheit 10 Minutes 15 Minutes Temps - Fahrenheit 10 Minutes 15 Minutes							
100. Ambient Temperature - Fahrenheit 101. Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes	nheit ahrenheit 10 Minutes Temps - Fahrenheit 10 Minutes 15 Minutes	99.	39. Opposite Drive End Vibration Readings - Inches Per Second					
101. Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes	ahrenheit 10 Minutes Temps - Fahrenheit 10 Minutes 15 Minutes		Horizontal	Vertical	Axial			
101. Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes	ahrenheit 10 Minutes Temps - Fahrenheit 10 Minutes 15 Minutes	100.	Ambient Temperature - Fahrenheit					
5 Minutes10 Minutes15 Minutes102. Opposite Drive End Bearing Temps - Fahrenheit5 Minutes15 Minutes5 Minutes10 Minutes15 Minutes	10 Minutes15 MinutesTemps - Fahrenheit10 Minutes10 Minutes15 Minutes							
102. Opposite Drive End Bearing Temps - Fahrenheit 5 Minutes 10 Minutes 15 Minutes	Temps - Fahrenheit 10 Minutes 15 Minutes		- ·		15 Minutes			
5 Minutes 10 Minutes 15 Minutes	10 Minutes 15 Minutes							
		102.	Opposite Drive End Bearing Temps - Fahrenheit					
103. Document Final Condition with Pictures after paint	h Pictures after paint		5 Minutes	10 Minutes	15 Minutes			
103. Document Final Condition with Pictures after paint	h Pictures after paint							
				es after paint				
104. Final Pics and QC Review		104.	Final Pics and QC Review					



STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. <u>APPLICABILITY.</u> The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. <u>SCOPE OF GOODS AND/OR SERVICES.</u> The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only be effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. DELIVERY OF GOODS AND/OR SERVICES. Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- 6. DELIVERY SITE AND TIME FOR PERFORMANCE. Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

TermsAndConditions

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. LIMITATION OF DAMAGES. HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY</u>. The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. <u>GOVERNING LAW AND JURISDICTION.</u> Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER</u>. No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. <u>ASSIGNMENT.</u> The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. <u>NO INDIVIDUAL LIABILITY</u>. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.