

Motor Shop Repairs

Job Number 98637

Prepared for SAGE

5901 SLOAN DRIVE LITTLE ROCK AR 72206

Table of Contents



Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Printed on 8/30/2021 Powered by INSPECTALL Table of Contents



FolderID: 98637 FormID: 11428576



AC Recondition Repair Report

5901 SLOAN DRIVE LITTLE ROCK, AR 72206

Priorities Found: 3 - High

9 - Good

1 Horitio	or ound. Tingii		
Gene	General		
1.	Job Number	98637	
2.	Report Date	8/24/2021	
3.	Customer	Sage V Foods	
Name	Plate Information		
4.	Manufacturer	Pentair	









5.	Model	64SD750M4-4
6.	Serial Number	10556507
7.	Horsepower	7.5
8.	KW	
9.	Volts	460

10.	Amps	12.6
11.	RPM	1750
12.	Frame	
13.	Enclosure	
14.	Cycles	60
15.	Phase	3
16.	Service Factor	1.2
17.	Motor Mount Position	Intake Down
Initial	Inspection	
18.	Number of Leads	3
19.	Lead Length	10 Inches
20.	Lead Size	
21.	Lead Condition	(F) Fail
22.	Lead Markings	1 2 3
23.	Lug Size, Condition, and Type	
24.	Winding RTD's	
25.	Winding Rtd's Condition	
26.	Shaft Run Out	0.001
27.	Does Shaft Turn Freely	yes
28.	Does Shaft Have Visible Damage	no



	29.	. Bearing Rtd's	
	30.	. Bearing Rtd's Condition	
	31.	. Contamination	
	32.	. Frame Condition	(P) Pass
	33.	. Fan Condition	(NA) Not Applicable
	34.	. Broken or missing components	
In	itial	I Electric Test	
	35.	. Resistance to Ground	500 Mohm
	36.	. Winding Resistance 1-2	
	37.	. Winding Resistance 2-3	
	38.	. Winding Resistance 1-3	
	39.	. Resistive Imbalance	
	40.	. Hi-Pot	
	41.	. Surge Test	(F) Fail

42. Stator Condition shorted windings



43.	Failure Location	in slot
Initial	Rotor Inspection	
44.	Rotor Type	cast aluminum
45.	Air Gap <10% Variation	
46.	Number of Rotor Bars	48
47.	Number of Broken Rotor Bars	0
48 .	Growler Test	(P) Pass
4 9.	Rotor Condition	(P) Pass



Mechanical Inspection

50. Bearing Manufacture





51. Bearing DE Size	6307 2Z
52. Bearing DE Type	ball



53. DE Bearing Qty.	1
54. Bearing ODE Size	6303 2Z
55. Bearing ODE Type	ball



56. ODE Bearing Qty.	1
57. Insulated Bearing	
58. Lubrication Type	oil
59. Grease Condition	

60. Bearing Retainers 61. Shaft Grounding Device 62. DE Seal Yee/Size pump seals 63. DE Seal Type/Size pump seals 64. ODE Seal 65. ODE Seal Seal Seal Seal Seal Seal Seal Seal	00	Describer Details and	
62. DE Seal (Y) Yes 63. DE Seal Type/Size pump seals 1.875x1.25 quantity of 2. Carbon ceramic 64. ODE Seal 65. ODE Seal Type/Size Root Cause of Failure 66. Component Failure 67. Cause of Failure 68. Comments 69. Service Technician Trevor Hall Machine Fit Inspection Report 70. Shaft Run Out 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 3 76. DE Initial Shaft Bearing Fit Size 1 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 1 79. DE Finial Shaft Bearing Fit Size 1 79. DE Finial Shaft Bearing Fit Size 2 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 3 82. ODE Initial Shaft Bearing Fit Size 3 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Bearing Fit Size 3 88. ODE Finial Shaft Bearing Fit Size 3 89. ODE Finial Shaft Bearing Fit Size 3 80. ODE Finial Shaft Bearing Fit Size 3 81. ODE Finial Shaft Bearing Fit Size 3 82. ODE Finial Shaft Bearing Fit Size 3 83. ODE Finial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Finial Air Seal Shaft Fit 80. DE Finial Shaft Bearing Fit Size 3		•	
63. DE Seal Type/Size pump seals 1.875x1.25 quantity of 2. Carbon ceramic 6. ODE Seal Type/Size Root Cause of Failure 6. Component Failure windings, bearings, pump cords 67. Cause of Failure 68. Comments 69. Service Technician Trevor Hall Machine Fit Inspection Report 70. Shaft Run Out (P) Pass 71. Initial Shaft Bearing Fit Size 1 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. De Initial Shaft Bearing Fit Size 2 75. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 80. ODE Bearing Shaft Fit 81. DE Initial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 1 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Initial Shaft Bearing Fit Size 2 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Bearing Fit Size 2 88. ODE Finial Shaft Bearing Fit Size 2 89. DE Finial Shaft Bearing Fit Size 3 80. DE Finial Shaft Bearing Fit Size 3 81. ODE Initial Shaft Bearing Fit Size 3 82. ODE Initial Shaft Bearing Fit Size 3 83. DE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. DE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Shaft Fit 89. DE Finial Shaft Fit		-	00 W
### 1.875x1.25 quantity of 2. Carbon ceramic 64. ODE Seal 65. ODE Seal Type/Size Root Cause of Failure 66. Component Failure 67. Cause of Failure 68. Comments 69. Service Technician **Trevor Hall **Machine Fit Inspection Report** **To Shaft Run Out **To Shaft Run S			
64. ODE Seal 65. ODE Seal Type/Size ROOT Cause of Failure 66. Component Failure 67. Cause of Failure 68. Comments 69. Service Technician 69. Service Technician 69. Trevor Hall 60. Trevor Hall 61. Trevor Hall 62. Trevor Hall 63. Trevor Hall 64. Trevor Hall 65. Trevor Hall 66. Comments			pump seals
Root Cause of Failure 66. Component Failure windings, bearings, pump cords 67. Cause of Failure 68. Comments 69. Service Technician Trevor Hall 69. This Pass Till Institute The Technician Trevor Hall 69. The Technician Trevor Hall 60. The Technician Trevor Hall 61. The Technician Trevor Hall 62. The Technician Trevor Hall 63. The Technician Trevor Hall 64. The Technician Trevor Hall 65. The Technician Trevor Hall 66. The Technician Trevor Hall 67. The Technician Trevor Hall 68. De Initial Shaft Bearing Fit Size 1 69. The Technician Trevor Hall 69. The Technician Trevor Hall 60. The Technician Trevor Hall 61. The Technician Trevor Hall 61. The Technician Trevor Hall 62. The Technician Trevor Hall 63. The Technician Trevor Hall 64. The Technician Trevor Hall 65. The Technician Trevor Hall 66. The Technician Trevor Hall 66. The Technician Trevor Hall 67. The Technician Trevor Hall 67. The Technician Trevor Hall 68. The Technician Trevor Hall 69. The Technician Trevor Hall 69. The			
Root Cause of Failure 6. Component Failure windings, pump cords 6. Cause of Failure 6. Cord got twisted and shorted windings 6. Comments 6. Service Technician Trevor Hall 6. Initial Shaft Run Out 7. Shaft Run Out 7. Initial Shaft Run Out 7. Initial Shaft Run Out 7. De Bearing Shaft Fit 7. De Initial Shaft Bearing Fit Size 1 7. De Initial Shaft Bearing Fit Size 2 7. De Initial Shaft Bearing Fit Size 3 7. De Finial Shaft Bearing Fit Size 1 7. De Finial Shaft Bearing Fit Size 2 7. De Finial Shaft Bearing Fit Size 3 8. De De Bearing Shaft Fit 8. De Finial Shaft Bearing Fit Size 2 9. De Finial Shaft Bearing Fit Size 3 8. De De Bearing Shaft Fit 8. De Finial Shaft Bearing Fit Size 2 8. De De Finial Shaft Bearing Fit Size 2 8. De De Finial Shaft Bearing Fit Size 3 8. De De Finial Shaft Bearing Fit Size 3 8. De De Finial Shaft Bearing Fit Size 2 8. De De Finial Shaft Bearing Fit Size 3 8. De De Finial Shaft Bearing Fit Size 2 8. De Finial Shaft Bearing Fit Size 3 8. De De Finial Shaft Bearing Fit Size 3 8. De Finial Shaft Bearing Fit Size 4			
66. Component Failure Card got twisted and shorted windlings 68. Comments 69. Service Technician Trevor Hall Machine Fit Inspection Report 70. Shaft Run Out 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 1 77. DE Finial Shaft Bearing Fit Size 2 78. DE Initial Shaft Bearing Fit Size 1 79. DE Finial Shaft Bearing Fit Size 2 70. DE Initial Shaft Bearing Fit Size 3 71. DE Finial Shaft Bearing Fit Size 1 72. DE Finial Shaft Bearing Fit Size 1 73. DE Perinal Shaft Bearing Fit Size 2 74. DE Initial Shaft Bearing Fit Size 3 75. DE Finial Shaft Bearing Fit Size 3 76. DE Initial Shaft Bearing Fit Size 1 77. DE Finial Shaft Bearing Fit Size 2 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 3 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 2 85. ODE Finial Shaft Bearing Fit Size 3 86. DE Finial Shaft Bearing Fit Size 3 87. DE Finial Shaft Bearing Fit Size 3 88. DE Air Seal Shaft Fit 89. DE Finial Shaft Sear Shaft Fit 80. DE Finial Shaft Bear Shaft Size 80. DE Finial Shaft Sea Shaft Size			
67. Cause of Failure Cord got twisted and shorted windlings 68. Comments 69. Service Technician Trevor Hall Machine Fit Inspection Report 70. Shaft Run Out 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 75. DE Initial Shaft Bearing Fit Size 1 76. DE Initial Shaft Bearing Fit Size 2 77. DE Finial Shaft Bearing Fit Size 3 78. DE Initial Shaft Bearing Fit Size 1 79. DE Finial Shaft Bearing Fit Size 2 70. DE Finial Shaft Bearing Fit Size 2 71. DE Finial Shaft Bearing Fit Size 2 72. DE Finial Shaft Bearing Fit Size 2 73. DE Finial Shaft Bearing Fit Size 1 74. DE Finial Shaft Bearing Fit Size 2 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 2 77. DE Finial Shaft Bearing Fit Size 2 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Size 88. DE Finial Shaft Sear Shaft Size 89. DE Finial Air Seal Shaft Size 80. ODE Air Seal Shaft Fit 80. DE Air Seal Shaft Fit			
Cord got twisted and shorted windings 68. Comments 69. Service Technician Trevor Hall Machine Fit Inspection Report 70. Shaft Run Out (P) Pass 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 3 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Initial Shaft Bearing Fit Size 2 81. ODE Initial Shaft Bearing Fit Size 2 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Size 88. DE Initial Air Seal Shaft Size 89. DE Finial Air Seal Shaft Size 80. DE Finial Air Seal Shaft Size 80. DE Finial Air Seal Shaft Size 80. DE Finial Air Seal Shaft Size		·	
68. Comments 69. Service Technician Trevor Hall Machine Fit Inspection Report 70. Shaft Run Out (P) Pass 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 2 77. DE Finial Shaft Bearing Fit Size 2 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Bearing Shaft Fit 80. DDE Bearing Shaft Fit 80. DDE Bearing Shaft Fit 80. DDE Initial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Initial Shaft Bearing Fit Size 3 85. ODE Initial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. ODE Initial Shaft Bearing Fit Size 2 88. ODE Finial Shaft Bearing Fit Size 3 89. ODE Finial Shaft Bearing Fit Size 3	67.		
Machine Fit Inspection Report 70. Shaft Run Out 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 75. DE Initial Shaft Bearing Fit Size 1 76. DE Initial Shaft Bearing Fit Size 2 77. DE Finial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Initial Shaft Bearing Fit Size 2 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Finial Shaft Bearing Fit Size 3 88. ODE Initial Shaft Bearing Fit Size 3 89. ODE Initial Shaft Bearing Fit Size 3 80. ODE Finial Shaft Bearing Fit Size 3 80. DE Finial Shaft Fit		Cord got twisted and shorted windings	
Machine Fit Inspection Report 70. Shaft Run Out 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Finial Shaft Bearing Fit Size 2 85. ODE Finial Shaft Bearing Fit Size 1 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Fit 89. DE Finial Air Seal Shaft Fit 80. ODE Air Seal Shaft Fit 81. ODE Air Seal Shaft Fit 82. ODE Air Seal Shaft Fit	68.	Comments	
70. Shaft Run Out 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 1 83. ODE Initial Shaft Bearing Fit Size 1 84. ODE Initial Shaft Bearing Fit Size 2 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Finial Shaft Bearing Fit Size 3 88. ODE Finial Shaft Bearing Fit Size 3 89. ODE Finial Shaft Bearing Fit Size 3 80. ODE Finial Shaft Bearing Fit Size 3 81. ODE Initial Shaft Bearing Fit Size 3 82. ODE Initial Shaft Bearing Fit Size 3 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit	69.	Service Technician	Trevor Hall
70. Shaft Run Out 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 1 83. ODE Initial Shaft Bearing Fit Size 1 84. ODE Initial Shaft Bearing Fit Size 2 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Finial Shaft Bearing Fit Size 3 88. ODE Finial Shaft Bearing Fit Size 3 89. ODE Finial Shaft Bearing Fit Size 3 80. ODE Finial Shaft Bearing Fit Size 3 81. ODE Initial Shaft Bearing Fit Size 3 82. ODE Initial Shaft Bearing Fit Size 3 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit		7-71	
71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. ODE Finial Shaft Bearing Fit Size 1 88. ODE Finial Shaft Bearing Fit Size 3 89. ODE Finial Shaft Bearing Fit Size 3 80. ODE Finial Shaft Bearing Fit Size 3 81. ODE Finial Shaft Bearing Fit Size 3 82. ODE Finial Shaft Bearing Fit Size 3 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 89. ODE Air Seal Shaft Fit		•	
72. Final Shaft Run Out 73. DE Bearing Shaft Fit (P) Pass 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 1 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. ODE Finial Air Seal Shaft Size 80. ODE Air Seal Shaft Fit	0 70.	Shaft Run Out	(P) Pass
73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 1 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Finial Shaft Bearing Fit Size 3 88. DE Finial Shaft Bearing Fit Size 3 89. DE Finial Shaft Bearing Fit Size 3 80. ODE Finial Shaft Bearing Fit Size 2 81. ODE Finial Shaft Bearing Fit Size 3 82. ODE Finial Shaft Bearing Fit Size 3 83. ODE Finial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Finial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit	71.	Initial Shaft Run Out	0.001 "
74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 1 86. ODE Finial Shaft Bearing Fit Size 1 87. DE Finial Shaft Bearing Fit Size 2 88. DE Finial Shaft Bearing Fit Size 3 89. DE Finial Shaft Bearing Fit Size 3 80. ODE Finial Shaft Bearing Fit Size 1 81. ODE Finial Shaft Bearing Fit Size 1 82. ODE Finial Shaft Bearing Fit Size 3 83. ODE Finial Shaft Bearing Fit Size 1 84. ODE Finial Shaft Bearing Fit Size 2 85. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit	72.	Final Shaft Run Out	
75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Finial Shaft Bearing Fit Size 3 88. ODE Finial Shaft Bearing Fit Size 3 89. ODE Finial Shaft Bearing Fit Size 2 80. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size	_		(P) Pass
76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit	74.	DE Initial Shaft Bearing Fit Size 1	1.3784 "
77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit	75.	DE Initial Shaft Bearing Fit Size 2	1.3784 "
78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 1 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit	76.	DE Initial Shaft Bearing Fit Size 3	1.3784 "
79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit	77.	DE Finial Shaft Bearing Fit Size 1	
80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit	78.	DE Finial Shaft Bearing Fit Size 2	
81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit			
82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit	8 0.	ODE Bearing Shaft Fit	(P) Pass
83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit	81.	ODE Initial Shaft Bearing Fit Size 1	0.6694 "
 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 	82.	ODE Initial Shaft Bearing Fit Size 2	0.6694 "
 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 	83.	ODE Initial Shaft Bearing Fit Size 3	0.6694 "
 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 	84.	ODE Finial Shaft Bearing Fit Size 1	
 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 	85.	•	
88. DE Initial Air Seal Shaft Size89. DE Final Air Seal Shaft Size90. ODE Air Seal Shaft Fit	86.	ODE Finial Shaft Bearing Fit Size 3	
89. DE Final Air Seal Shaft Size90. ODE Air Seal Shaft Fit	87.		
90. ODE Air Seal Shaft Fit	88.	DE Initial Air Seal Shaft Size	
	89.	DE Final Air Seal Shaft Size	
91. ODE Initial Air Seal Shaft Size	90.	ODE Air Seal Shaft Fit	
	91.	ODE Initial Air Seal Shaft Size	

92. ODE Final Air Seal Shaft Size

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.





94.	DE Initial Endbell Fit Size 1	3.1503 "
95.	DE Initial Endbell Fit Size 2	3.1503 "
96.	DE Initial Endbell Fit Size 3	3.1503 "
97.	DE Final Endbell Fit Size 1	
98.	DE Finial Endbell Fit Size 2	
99.	DE Final Endbell Fit Size 3	
100.	DE Endbell Fit Insulated	
101.	DE Endbell Air Seal Fit	
102.	Initial Endbell Air Seal Fit Size	
103.	Finial Endbell Air Seal Fit Size	
104.	ODE Endbell Fit	(F) Fail



105. ODE Initial Endbell Fit Size 1	1.8519 "
106. ODE Initial Endbell Fit Size 2	1.8519 "
107. ODE Initial Endbell Fit Size 3	1.8519 "
108. ODE Final Endbell Fit Size 1	
109. ODE Final Endbell Fit Size 2	
110. ODE Final Endbell Fit Size 3	
111. ODE Endbell Fit Insulated	
112. ODE Endbell Air Seal Fit	
113. ODE Initial Endbell Seal Fit Size	
114. ODE Finial Endbell Seal Fit Size	

115. Foot Flatness 116. Foot Condition 117. Flange Condition 118. Service Technician **Trevor Hall** ~ //-**Balancing Report** 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician **Assembly and Final Test** 127. Meggar Testing Reading 128. Surge Test 129. Hi-Pot 130. Winding Resistance 1-2 131. Winding Resistance 2-3 132. Winding Resistance 1-3 133. Test Run Voltage Phase A 134. Test Run Amps A 135. Test Run Voltage Phase B 136. Test Run Amps B 137. Test Run Voltage Phase C 138. Test Run Amps C 139. DE Horizontal Vibration Reading 140. DE Vertical Vibration Reading 141. DE Axial Vibration Reading 142. ODE Horizontal Vibration Reading 143. ODE Vertical Vibration Reading 144. ODE Axial Vibration Reading 145. Ambient Temp at start of Test Run 146. Temp at 5 minutes 147. Temp at 10 minutes 148. Temp at 15 minutes 149. Temp at 20 minutes 150. Temp at 25 minutes 151. Temp at 30 minutes 152. Temp at 35 minutes 153. Temp at 40 minutes 154. Temp at 45 minutes

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

155. Temp at 50 minutes

156. Temp at 55 minutes	
157. Temp at 60 minutes	
158. Motor Paint	
159. Service Technician	



STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. APPLICABILITY. The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. SCOPE OF GOODS AND/OR SERVICES. The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only bee effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. <u>DELIVERY OF GOODS AND/OR SERVICES.</u> Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- **DELIVERY SITE AND TIME FOR PERFORMANCE.** Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have sixty (60) days to cure the alleged discrepancy and/or nonconformance. If Hi-Speed fails to cure in this time period, Buyer shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. <u>LIMITATION OF DAMAGES.</u> HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY.</u> The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. **GOVERNING LAW AND JURISDICTION.** Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. ABANDONED EQUIPMENT. Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER.</u> No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. **ASSIGNMENT.** The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. NO INDIVIDUAL LIABILITY. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.