

EVERY DAY SINCE 1946

Motor Shop Repairs

Job Number 99363

Prepared for MORRILTON PACKING CO,

51 BLUE DIAMOND DRIVE MORRILTON AR 72110

Table of Contents

AC Recondition Repair Report	1.0
Gearbox Repair Report	2.0



Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

AC Recondition Repair Report

MORRILTON PACKING CO, 51 BLUE DIAMOND DRIVE

MORRILTON, AR 72110

Ρ (

Priorities	s Found: 🛑 4 - High	🛑 13 - Good	
Gene	ral		
1.	Job Number		99363
2.	Report Date		2/8/2022
3.	Customer		Morrilton Packing Co
-	Petit Jean Meats		

Name Plate Information

4. Manufacturer









5.	Model	LS90L1
6.	Serial Number	428065 NL002
7.	Horsepower	
8.	KW	1.3

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Leroy Somer

FolderID: 99363 FormID: 12785329

9.	Volts	460	
10.	Amps	2.5	
11.	RPM	1725	
12.	Frame		
13.	Enclosure		
14.	Cycles	60	
15.	Phase	3	
16.	Service Factor		
17.	Motor Mount Position		
Initial	Inspection		
18.	Number of Leads	6	
19.	Lead Length	6 Inches	
20.	Lead Size		
21.	Lead Condition	(P) Pass	



	22.	Lead Markings	
	23.	Lug Size, Condition, and Type	
	24.	Winding RTD's	
	25.	Winding Rtd's Condition	
	26.	Shaft Run Out	0.001
	27.	Does Shaft Turn Freely	yes
	28.	Does Shaft Have Visible Damage	no
	29.	Bearing Rtd's	
	30.	Bearing Rtd's Condition	
	31.	Contamination	
		No	
	32.	No Frame Condition	(P) Pass
•	-		(P) Pass (P) Pass
•	33.	Frame Condition	
• • In	33. 34.	Frame Condition Fan Condition	
• • In	33. 34. itial	Frame Condition Fan Condition Broken or missing components	
• • In	33. 34. itial	Frame Condition Fan Condition Broken or missing components Electric Test Resistance to Ground	
• • In	 33. 34. itial 35. 36. 	Frame Condition Fan Condition Broken or missing components Electric Test Resistance to Ground	
	 33. 34. itial 35. 36. 	Frame Condition Fan Condition Broken or missing components Electric Test Resistance to Ground Winding Resistance 1-2 Winding Resistance 2-3	

40.	Hi-Pot	
41.	Surge Test	(P) Pass
42.		pass
43.	Failure Location	
Initial	Rotor Inspection	
	Rotor Type	cast aluminum
	Air Gap <10% Variation	
	Number of Rotor Bars	28
	Number of Broken Rotor Bars	0
48.	Growler Test	(P) Pass
-	Rotor Condition	(P) Pass
-	anical Inspection	(-)
	Bearing Manufacture	Poland
51.	-	6205 2Z
51.	Bearing DE Type	ball
52.		
53.		6204 2Z
54. 55.	-	ball
56.	ODE Bearing Qty.	1
	Insulated Bearing	no
58.	Lubrication Type	grease
59.		(F) Fail
60.	Bearing Retainers	(N) No
61.	Shaft Grounding Device	(N) No
62.	DE Seal	(Y) Yes
63.	DE Seal Type/Size	25-40-7 lip seal
64.	ODE Seal	(N) No
	ODE Seal Type/Size	
Root (Cause of Failure	
66.	Component Failure	bearings
67.	Cause of Failure	
	Normal wear	
68.	Comments	
69.	Service Technician	
Machi	ne Fit Inspection Report	
70.	Shaft Run Out	(P) Pass
71.	Initial Shaft Run Out	0.001 "
72.	Final Shaft Run Out	
73.	DE Bearing Shaft Fit	(P) Pass
74.	DE Initial Shaft Bearing Fit Size 1	0.9845 "
75.	DE Initial Shaft Bearing Fit Size 2	0.9845 "
76.	DE Initial Shaft Bearing Fit Size 3	0.9846 "
77.	DE Finial Shaft Bearing Fit Size 1	
78.	DE Finial Shaft Bearing Fit Size 2	
	DE Finial Shaft Bearing Fit Size 3	
79.	DE Finial Shart Deaning Fit Size S	
79.	ODE Bearing Shaft Fit	(P) Pass

B2. ODE Initial Shaft Bearing Fit Size 2 0.7877 * B3. ODE Initial Shaft Bearing Fit Size 1 0.7877 * B4. ODE Finial Shaft Bearing Fit Size 1 0.7877 * B5. ODE Finial Shaft Bearing Fit Size 3 0.7877 * B4. ODE Finial Shaft Bearing Fit Size 3 0.7877 * B5. ODE Finial Shaft Size 0 0.7877 * B6. ODE Finial Shaft Size 0 0.7877 * B7. DE Airlial Ar Seal Shaft Size 0 0.7877 * B7. DE Airlial Ar Seal Shaft Size 0 0.7877 * B7. DE Finial Air Seal Shaft Size 0 0.7877 * B7. DE Finial Air Seal Shaft Size 0 0.7877 * B7. DE Finial Air Seal Shaft Size 0 0.7877 * B7. DE Finial Air Seal Shaft Size 1 2.0478 * B7. DE Finial Endbell Fit Size 1 2.0478 * B7. DE Finial Endbell Fit Size 1 2.0478 * B7. DE Finial Endbell Fit Size 3 2.0478 * B7. DE Finial Endbell Fit Size 1 2.0478 * B8. DE Finial Endbell Fit Size 3 2.0478 * B9. DE Finial Endbell Fit Size 3 1.001111111111111111111111111111111111	00		0 7077 "
84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 99. ODE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Final Air Seal Shaft Size 94. DE Initial Air Seal Shaft Size 95. DE Initial Endoell Fit Size 1 96. DE Final Endoell Fit Size 2 97. DE Final Endoell Fit Size 1 98. DE Final Endoell Fit Size 2 99. DE Final Endoell Fit Size 1 99. DE Final Endoell Fit Size 3 100. DE Endoell Fit Size 3 100. DE Endoell Fit Size 3 101. DE Endoell Fit Size 7 102. Final Endoell Fit Size 7 103. Final Endoell Fit Size 7 104. ODE Endoell Fit Size 1 105. ODE Initial Endoell Fit Size 1 106. ODE Initial Endoell Fit Size 3 107. ODE Initial Endoell Fit Size 3 108. ODE Final Endoell Fit Size 3 109. ODE Final Endoell Fit Size 3 1010. ODE Initial Endoell Fit Size 3 10110. ODE Endoel Fit 1 102. ODE Initi		-	
85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Fit 92. ODE Final Air Seal Shaft Fit 93. DE Endebil Fit Size 1 94. DE Initial Endebil Fit Size 1 95. DE Initial Endebil Fit Size 1 96. DE Initial Endebil Fit Size 1 97. DE Final Endebil Fit Size 2 98. DE Final Endebil Fit Size 1 99. DE Final Endebil Fit Size 1 99. DE Final Endebil Fit Size 2 99. DE Final Endebil Fit Size 1 90. DE Endial Endebil Fit Size 3 100. DE Endebil Air Seal Fit Size 1 101. DE Endebil Air Seal Fit Size 1 102. Final Endebil Fit Size 1 103. Finial Endebil Fit Size 1 104. ODE Endebil Air Seal Fit Size 2 105. ODE Initial Endebil Fit Size 1 106. ODE Final Endebil Fit Size 1 107. ODE Final Endebil Fit Size 2 108. ODE Final Endebil Fit Size 2 109. ODE Final Endebil Fit Size 1 101. DE Endebil Fit Size 1 102. ODE Initial Endebil Fit Size 2 103. ODE Final Endebil Fit Size 2 <td< th=""><th></th><th>•</th><th>0.7877 "</th></td<>		•	0.7877 "
86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Finial Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Eindal Air Seal Shaft Size 94. DE Initial Air Seal Shaft Size 95. DE Initial Endbell Fit Size 1 96. DE Initial Endbell Fit Size 1 97. DE Finial Endbell Fit Size 1 98. DE Finial Endbell Fit Size 1 99. DE Finial Endbell Fit Size 1 91. ODE Endbell Fit Size 1 92. ODE Initial Endbell Fit Size 3 93. DE Endbell Fit Size 1 94. DE Initial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. ODE Initial Endbell Fit Size 1 97. DE Final Endbell Fit Size 1 98. DE Initial Endbell Fit Size 1 99. DE Initial Endbell Fit Size 3 90. DE Endbell Fit Size 1 91. ODE Endbell Fit Size 3 91. ODE Initial Endbell Fit Size 3 91. ODE Final Endbell Fit Size 3 91. ODE Final Endbell Fit Size 3<		-	
87. DE Air Saal Shaft Fit 88. DE Initial Air Saal Shaft Size 90. ODE Air Saal Shaft Size 91. ODE Initial Air Saal Shaft Size 92. ODE Final Air Saal Shaft Size 93. DE Endbell Fit (P) Pass 94. DE Initial Endbell Fit Size 1 2.0478 * 95. DE Initial Endbell Fit Size 2 2.0478 * 96. DE Initial Endbell Fit Size 3 2.0478 * 97. DE Final Endbell Fit Size 1 2.0478 * 98. DE Final Endbell Fit Size 2 2.0478 * 99. DE Final Endbell Fit Size 3 2.0478 * 99. DE Final Endbell Fit Size 3 100.DE Endbell Fit Size 3 100. DE Endbell Fit Size 1 110. DE Endbell Fit Size 3 101. DE Endbell Fit Size 1 110. DE Endbell Fit Size 1 102. Initial Endbell Fit Size 1 120. Sizial Endbell Fit Size 1 103. Finial Endbell Fit Size 1 1.851 * 104. ODE Endbell Fit Size 2 1.851 * 105. ODE Initial Endbell Fit Size 3 1.851 * 106. ODE Final Endbell Fit Size 3 1.851 * 107. ODE Initial Endbell Fit Size 3 1.851 * 108. ODE Final Endbell Fit Size 3 1.851 * 109. ODE Final Endbell Fit Size 3 1.851 * 110. O	85.	-	
88. DE Initial Air Seal Shaft Size 99. ODE Xir Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 93. DE Endbell Fit Size 1 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 1 96. DE Initial Endbell Fit Size 1 97. DE Final Endbell Fit Size 1 98. DE Enitial Endbell Fit Size 1 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Size 3 100. DE Endbell Fit Size 3 101. DE Endbell Fit Size 3 102. Initial Endbell Fit Size 3 103. Finial Endbell Fit Size 1 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 1 107. ODE Initial Endbell Fit Size 1 108. ODE Endbell Fit Size 1 109. ODE Final Endbell Fit Size 1 110. ODE Final Endbell Fit Size 1 110. ODE Final Endbell Fit Size 1 110. ODE Endbell Fit Size 3		-	
89. DE Final Air Seal Shaft Fit 91. ODE Initial Ar Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 1 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 1 99. DE Final Endbell Fit Size 1 90. DE Endbell Fit Size 2 91. DE Endbell Fit Size 3 92. DE Final Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Initial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Endbell Fit Insulated 97. DE Endbell Fit Insulated 98. DE Endbell Fit Insulated 99. DE Endbell Fit Insulated 90. DE Endbell Fit Size 1 91. ODE Endbell Fit Size 1 92. ODE Initial Endbell Fit Size 1 93. ODE Final Endbell Fit Size 2 94. ODE Final Endbell Fit Size 1 95. ODE Initial Endbell Fit Size 3 96. ODE Final Endbell Fit Size 3 97. ODE Final Endbell Fit Size 3 98. ODE Final Endbell Fit Size 3 99. ODE Final Endbell Fit Size 3 99. ODE Final Endbell Fit Size 3			
90. ODE Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Air Seal Shaft Size 95. DE Initial Endbell Fit Size 1 96. DE Initial Endbell Fit Size 2 97. DE Final Endbell Fit Size 3 98. DE Finital Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Initial Endbell Fit Size 3 90. DE Endbell Fit Insulated 100. DE Endbell Fit Size 3 101. DE Endbell Fit Size 3 102. Initial Endbell Fit Size 4 103. Finial Endbell Fit Size 5 104. ODE Endbell Fit Size 1 105. DE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 1 107. ODE Initial Endbell Fit Size 3 108. ODE Initial Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Size 3 112. ODE Endbell Fit Size 3 113. ODE Initial Endbell Fit Size 3 114. ODE Final Endbell Fit Size 3 115. Foot Final Endbell Fit Size 4 116. Foot Condition 117. Flange Condition 118. Foot Flatness 118	88.	DE Initial Air Seal Shaft Size	
91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endball Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 1 98. DE Finital Endbell Fit Size 1 99. DE Finial Endbell Fit Size 1 90. DE Endbell Fit Insulated 101. DE Endbell Fit Insulated 102. DE Endbell Fit Insulated 103. Finital Endbell Fit Size 1 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 1 107. ODE Initial Endbell Fit Size 1 108. ODE Initial Endbell Fit Size 2 109. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 1 109. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Size 3 112. ODE Endbell Fit Size 3 113. ODE Endbell Fit Size 3 114. ODE Final Endbell Fit Size 3 115. Foot Flatmess 116. Foot Elatines 5 117. Flange Condition (P) Pass 118. Service Techni	89.	DE Final Air Seal Shaft Size	
92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 1 98. DE Finial Endbell Fit Size 1 99. DE Finial Endbell Fit Size 1 99. DE Finial Endbell Fit Size 2 99. DE Finial Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Fit Size 1 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Fit Size 1 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 2 106. ODE Initial Endbell Fit Size 3 107. ODE Initial Endbell Fit Size 3 108. ODE Finial Endbell Fit Size 2 109. ODE Finial Endbell Fit Size 3 101. ODE Finial Endbell Fit Size 3 102. ODE Finial Endbell Fit Size 3 113. ODE Endbell Fit Size 3 114. ODE Endbell Fit Size 115. Foot Finial Endbell Seal Fit Size 116. Foot Condition (P) Pass 117. ODE Endbell Fit Size 118. Service Technician Balanceng Report 119. Balance Type 120. Balance Operating Speed <th>90.</th> <th>ODE Air Seal Shaft Fit</th> <th></th>	90.	ODE Air Seal Shaft Fit	
9 33. DE Endbell Fit (P) Pass 94. DE Initial Endbell Fit Size 1 2.0478 " 95. DE Initial Endbell Fit Size 2 2.0478 " 96. DE Initial Endbell Fit Size 3 2.0478 " 97. DE Final Endbell Fit Size 1 2.0478 " 98. DE Initial Endbell Fit Size 2 2.0478 " 99. DE Final Endbell Fit Size 3 2.0478 " 100. DE Endbell Fit Insulated 1 101. DE Endbell Air Seal Fit Size 1 1 102. Initial Endbell Air Seal Fit Size 1 103. Final Endbell Fit Size 1 1.851 " 104. ODE Endbell Fit Isize 1 1.851 " 105. ODE Initial Endbell Fit Size 1 1.851 " 106. ODE Initial Endbell Fit Size 2 1.851 " 107. ODE Initial Endbell Fit Size 3 1.851 " 108. ODE Final Endbell Fit Size 3 1.851 " 110. ODE Final Endbell Fit Size 3 1.851 " 111. ODE Endbell Fit Issualted 1 112. ODE Endbell Fit Insulated 1 113. ODE Initial Endbell Seal Fit Size 1 114. ODE Final Endbell Seal Fit Size 1 115. Foot Flatness 1 116.	91.	ODE Initial Air Seal Shaft Size	
94. DE Initial Endbell Fit Size 1 20478 " 95. DE Initial Endbell Fit Size 2 2.0478 " 96. DE Initial Endbell Fit Size 3 2.0478 " 97. DE Final Endbell Fit Size 1 2.0478 " 98. DE Final Endbell Fit Size 1 2.0478 " 99. DE Final Endbell Fit Size 3 2.0478 " 100. DE Endbell Fit Insulated 101. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit Size 102. Initial Endbell Air Seal Fit Size 103. Final Endbell Fit Size 1 1.851 " 104. ODE Endbell Fit Size 2 1.851 " 105. ODE Initial Endbell Fit Size 1 1.851 " 106. ODE Final Endbell Fit Size 2 1.851 " 107. ODE Initial Endbell Fit Size 2 1.851 " 108. ODE Final Endbell Fit Size 2 1.851 " 110. ODE Final Endbell Fit Size 3 1.851 " 111. ODE Endbell Fit Size 3 1.851 " 112. ODE Endbell Fit Size 3 1.851 " 113. ODE Initial Endbell Seal Fit Size 1.851 " 114. ODE Endbell Fit Size 3 1.851 " 115. Foot Flatness 1.851 " 116. Foot Condition (P) Pass 117. Flange Condition (P) Pass 118. Service Technician	92.	ODE Final Air Seal Shaft Size	
95. DE Initial Endbell Fit Size 2 2.0478 " 96. DE Initial Endbell Fit Size 3 2.0478 " 97. DE Final Endbell Fit Size 1 2 98. DE Final Endbell Fit Size 2 2 99. DE Final Endbell Fit Size 3 2 100. DE Endbell Fit Insulated 1 101. DE Endbell Air Seal Fit Size 1 102. Initial Endbell Air Seal Fit Size 1 103. Finial Endbell Fit Size 1 1.851 " 104. ODE Endbell Fit Size 2 1.851 " 105. ODE Initial Endbell Fit Size 2 1.851 " 106. ODE Initial Endbell Fit Size 2 1.851 " 107. ODE Initial Endbell Fit Size 3 1.851 " 108. ODE Final Endbell Fit Size 3 1.851 " 109. ODE Final Endbell Fit Size 2 1.851 " 110. ODE Endbell Fit Size 3 1 111. ODE Endbell Fit Size 3 1 112. ODE Endbell Fit Size 3 1 113. ODE Initial Endbell Size 1 1 114. ODE Endbell Fit Size 1 1 115. Foot Flanal Endbell Size 1 1 114. ODE Endbell Fit Size 1 1 115. Foot Flanes 1 116. Foot Condition (P) Pass	93.	DE Endbell Fit	(P) Pass
96. DE Initial Endbell Fit Size 3 2.0478 * 97. DE Final Endbell Fit Size 1	94.	DE Initial Endbell Fit Size 1	2.0478 "
97. DE Final Endbell Fit Size 1 98. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Isualted 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. ODE Indbell Fit Isualted 104. ODE Endbell Fit Isualted 105. ODE Initial Endbell Fit Size 106. ODE Initial Endbell Fit Size 1 107. ODE Initial Endbell Fit Size 2 108. ODE Initial Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 110. ODE Final Endbell Fit Size 3 111. ODE Final Endbell Fit Size 4 112. ODE Endbell Fit Isualted 113. ODE Endbell Fit Size 3 114. ODE Endbell Fit Size 4 115. Foot Flatness 116. Foot Condition (P) Pass 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Right End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	95.	DE Initial Endbell Fit Size 2	2.0478 "
98. DE Finial Endbell Fit Size 2 99. DE Final Endbell Fit Isize 3 100. DE Endbell Fit Isulated 101. DE Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 1 107. ODE Initial Endbell Fit Size 2 108. ODE Initial Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 1109. ODE Final Endbell Fit Size 3 111. ODE Endbell Seal Fit Size 112. ODE Endbell Seal Fit Size 113. ODE Initial Endbell Seal Fit Size 114. Foc Condition (P) Pass 118. Foct Condition (P) Pass </th <th>96.</th> <th>DE Initial Endbell Fit Size 3</th> <th>2.0478 "</th>	96.	DE Initial Endbell Fit Size 3	2.0478 "
 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit (P) Pass 105. ODE Initial Endbell Fit Size 1 1.851 " 106. ODE Initial Endbell Fit Size 2 1.851 " 107. ODE Initial Endbell Fit Size 3 1.851 " 108. ODE Final Endbell Fit Size 1 1.851 " 109. ODE Final Endbell Fit Size 3 110. ODE Final Endbell Fit Size 3 111. ODE Final Endbell Fit Size 3 112. ODE Final Endbell Fit Size 3 113. ODE Initial Endbell Fit Size 4 114. ODE Final Endbell Fit Size 1 115. Foot Flatness 116. Foot Condition (P) Pass 118. Service Technician 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician 	97.	DE Final Endbell Fit Size 1	
100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 2 106. ODE Initial Endbell Fit Size 2 107. ODE Initial Endbell Fit Size 2 108. ODE Final Endbell Fit Size 1 109. ODE Final Endbell Fit Size 2 110. ODE Final Endbell Fit Size 3 111. ODE Final Endbell Fit Size 3 112. ODE Endbell Fit Size 3 113. ODE Initial Endbell Fit Size 3 114. ODE Endbell Fit Size 3 115. Foot Final Endbell Fit Size 1 116. Foot Condition 117. Flange Condition 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	98.	DE Finial Endbell Fit Size 2	
101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit (P) Pass 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 2 107. ODE Initial Endbell Fit Size 2 108. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Insulated 112. ODE Endbell Seal Fit Size 113. ODE Initial Endbell Seal Fit Size 114. ODE Final Endbell Seal Fit Size 115. Foot Flatness 116. Foot Condition (P) Pass 118. Service Technician Balancing Report 120. Balance Type 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	99.	DE Final Endbell Fit Size 3	
102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit (P) Pass 105. ODE Initial Endbell Fit Size 1 1.851 " 106. ODE Initial Endbell Fit Size 2 1.851 " 107. ODE Initial Endbell Fit Size 3 1.851 " 108. ODE Final Endbell Fit Size 3 1.851 " 109. ODE Final Endbell Fit Size 2 1.851 " 110. ODE Final Endbell Fit Size 3 1.851 " 111. ODE Endbell Fit Insulated 1 112. ODE Endbell Fit Insulated 1 113. ODE Initial Endbell Seal Fit Size 1 114. ODE Finial Endbell Seal Fit Size 1 115. Foot Flatness 1 116. Foot Condition (P) Pass 117. Flange Condition (P) Pass 118. Service Technician 8alance Type 120. Balance Operating Speed 1 121. Start Left End 1 122. Start Right End 1 123. Balancing Specification 1 124. Finish Left End 1 125. Finish Right End 1 126. Service Technician 1	100.	DE Endbell Fit Insulated	
103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit (P) Pass 105. ODE Initial Endbell Fit Size 1 1.851 " 106. ODE Initial Endbell Fit Size 2 1.851 " 107. ODE Initial Endbell Fit Size 3 1.851 " 108. ODE Final Endbell Fit Size 1 1.851 " 109. ODE Final Endbell Fit Size 3 1.851 " 111. ODE Endbell Fit Isize 3 1.111 112. ODE Endbell Fit Isize 3 1.111 113. ODE Initial Endbell Fit Size 3 1.111 114. ODE Final Endbell Fit Size 3 1.111 115. Foot Flantes 1.111 116. Foot Condition (P) Pass 117. Flange Condition (P) Pass 118. Service Technician 119. Balance Type 120. Balance Operating Speed 1.12. Start Left End 121. Start Left End 1.12. Start Right End 122. Start Right End 1.12. Start Right End 123. Balancing Specification 1.12. Start Right End 124. Finish Left End 1.12. Start Right End 125. Finish Right End 1.12. Start Right End 126. Service Technician 1.12. Start Right End	101.	DE Endbell Air Seal Fit	
104. ODE Endbell Fit (P) Pass 105. ODE Initial Endbell Fit Size 1 1.851 " 106. ODE Initial Endbell Fit Size 2 1.851 " 107. ODE Initial Endbell Fit Size 3 1.851 " 108. ODE Final Endbell Fit Size 3 1.851 " 109. ODE Final Endbell Fit Size 3 1.851 " 110. ODE Final Endbell Fit Size 3 111 111. ODE Endbell Fit Isize 3 111 112. ODE Endbell Fit Size 3 111 113. ODE Initial Endbell Fit Size 3 111 114. ODE Final Endbell Fit Size 3 111 115. Foot Flatness 111 116. Foot Condition (P) Pass 117. Flange Condition (P) Pass 118. Service Technician 111 Balancing Report 112. Start Left End 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 122. Start Right End 123. Balancing Specification 123. Balancing Specification 124. Finish Left End 124. Finish Left End 125. Finish Right End 125. Finish Right End 126. Service Technician	102.	Initial Endbell Air Seal Fit Size	
105. ODE Initial Endbell Fit Size 1 1.851 " 106. ODE Initial Endbell Fit Size 2 1.851 " 107. ODE Initial Endbell Fit Size 3 1.851 " 108. ODE Final Endbell Fit Size 1 1.851 " 109. ODE Final Endbell Fit Size 2 1.851 " 110. ODE Final Endbell Fit Size 3 1.851 " 111. ODE Endbell Fit Size 3 1.851 " 112. ODE Endbell Fit Insulated 1.851 " 113. ODE Initial Endbell Seal Fit Size 1.851 " 114. ODE Finial Endbell Seal Fit Size 1.851 " 115. Foot Flatness 1.16. Foot Condition 117. Flange Condition (P) Pass 118. Service Technician 8alancing Report 119. Balance Type 1.20. Balance Operating Speed 121. Start Left End 1.22. Start Right End 122. Start Right End 1.23. Balancing Specification 124. Finish Left End 1.24. Finish Right End 125. Finish Right End 1.25. Finish Right End 126. Service Technician 1.26. Service Technician	103.	Finial Endbell Air Seal Fit Size	
106. ODE Initial Endbell Fit Size 2 1.851 " 107. ODE Initial Endbell Fit Size 3 1.851 " 108. ODE Final Endbell Fit Size 1 109. ODE Final Endbell Fit Size 2 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Size 3 111. ODE Endbell Fit Issuated 111. ODE Endbell Fit Issuated 112. ODE Endbell Fit Issuated 111. ODE Endbell Fit Size 3 113. ODE Initial Endbell Size 3 111. ODE Endbell Fit Size 4 114. ODE Finial Endbell Size 1 111. ODE Finial Endbell Size 5 115. Foot Flatness 116. Foot Condition 117. Flange Condition (P) Pass 118. Service Technician 8 Balancing Report 111. ODE Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 125. Finish Right End 126. Service Technician	104.	ODE Endbell Fit	(P) Pass
107. ODE Initial Endbell Fit Size 31.851 "108. ODE Final Endbell Fit Size 1109. ODE Final Endbell Fit Size 2110. ODE Final Endbell Fit Size 3111. ODE Endbell Fit Insulated112. ODE Endbell Air Seal Fit113. ODE Initial Endbell Seal Fit Size114. ODE Finial Endbell Seal Fit Size115. Foot Flatness116. Foot Condition(P) Pass118. Service TechnicianBalancing Report120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	105.	ODE Initial Endbell Fit Size 1	1.851 "
108. ODE Final Endbell Fit Size 1 109. ODE Final Endbell Fit Size 2 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Insulated 112. ODE Endbell Air Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness 116. Foot Condition (P) Pass 118. Service Technician Balancing Report 120. Balance Type 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	106.	ODE Initial Endbell Fit Size 2	1.851 "
109. ODE Final Endbell Fit Size 2 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Insulated 112. ODE Endbell Air Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness 116. Foot Condition (P) Pass 118. Service Technician Balancing Report 120. Balance Type 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	107.	ODE Initial Endbell Fit Size 3	1.851 "
110. ODE Final Endbell Fit Isize 3 111. ODE Endbell Fit Insulated 112. ODE Endbell Air Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness 116. Foot Condition 117. Flange Condition 118. Service Technician Balancing Report 120. Balance Type 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	108.	ODE Final Endbell Fit Size 1	
111. ODE Endbell Fit Insulated 112. ODE Endbell Air Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness 116. Foot Condition 117. Flange Condition (P) Pass 118. Service Technician Balancing Report 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	109.	ODE Final Endbell Fit Size 2	
112. ODE Endbell Air Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness 116. Foot Condition 117. Flange Condition 117. Flange Condition 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	110.	ODE Final Endbell Fit Size 3	
113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness 116. Foot Condition • 117. Flange Condition • 118. Service Technician Balancing Report • 119. Balance Type • 120. Balance Operating Speed • 121. Start Left End • 122. Start Right End • 123. Balancing Specification • 124. Finish Left End • 125. Finish Right End • 126. Service Technician	111.	ODE Endbell Fit Insulated	
114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness 116. Foot Condition 117. Flange Condition 117. Flange Condition (P) Pass 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	112.	ODE Endbell Air Seal Fit	
115. Foot Flatness116. Foot Condition• 117. Flange Condition• 117. Flange Condition(P) Pass118. Service TechnicianBalancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	113.	ODE Initial Endbell Seal Fit Size	
116. Foot Condition (P) Pass 117. Flange Condition (P) Pass 118. Service Technician 118. Balancing Report 119. 119. Balance Type 120. 120. Balance Operating Speed 121. 121. Start Left End 122. 122. Start Right End 123. 123. Balancing Specification 124. 124. Finish Left End 125. 125. Finish Right End 126. 126. Service Technician 126.	114.	ODE Finial Endbell Seal Fit Size	
 117. Flange Condition (P) Pass 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician 	115.	Foot Flatness	
118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	116.	Foot Condition	
Balancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	117.	Flange Condition	(P) Pass
 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician 	118.	Service Technician	
120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	Balan	cing Report	
121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	119.	Balance Type	
122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	120.	Balance Operating Speed	
123. Balancing Specification 124. Finish Left End 125. Finish Right End 126. Service Technician	121.	Start Left End	
124. Finish Left End 125. Finish Right End 126. Service Technician	122.	Start Right End	
125. Finish Right End 126. Service Technician	123.	Balancing Specification	
126. Service Technician	124.	Finish Left End	
	125.	Finish Right End	
Assembly and Final Test	126.	Service Technician	
	Asser	nbly and Final Test	

	Meggar Testing Reading
128.	Surge Test
129.	Hi-Pot
130.	Winding Resistance 1-2
131.	Winding Resistance 2-3
132.	Winding Resistance 1-3
133.	Test Run Voltage Phase A
134.	Test Run Amps A
135.	Test Run Voltage Phase B
136.	Test Run Amps B
137.	Test Run Voltage Phase C
138.	Test Run Amps C
139.	DE Horizontal Vibration Reading
140.	DE Vertical Vibration Reading
141.	DE Axial Vibration Reading
142.	ODE Horizontal Vibration Reading
143.	ODE Vertical Vibration Reading
144.	ODE Axial Vibration Reading
145.	Ambient Temp at start of Test Run
146.	Temp at 5 minutes
147.	Temp at 10 minutes
148.	Temp at 15 minutes
149.	Temp at 20 minutes
150.	Temp at 25 minutes
151.	Temp at 30 minutes
152.	Temp at 35 minutes
153.	Temp at 40 minutes
154.	Temp at 45 minutes
155.	Temp at 50 minutes
156.	Temp at 55 minutes
157.	Temp at 60 minutes
158.	Motor Paint
159.	Service Technician



51 BLUE DIAMOND DRIVE MORRILTON, AR 72110 FolderID: 99363 FormID: 12785330

Priorities Found:	
General	

Gener	al
1.	Job Number
2.	Customer
3.	Report Date
Name	plate Information
4.	Manufacturer
5.	Horsepower
6.	Serial #
7.	Model #
8.	Input Speed
9.	Output Speed
10.	Ratio
11.	Туре
12.	Coupling Type
13.	Gearbox Application
Initial	Evaluation
14.	Oil Wear
15.	Oil Physical
16.	Oil Contaminants
17.	Gear Wear
18.	Physical Gear Condition
19.	Gear Contamination
20.	Bearing Wear
21.	Bearing Physical Condition
22.	Bearing Contamination
23.	Seal Wear
24.	Seal Physical Condition
25.	Seal Contamination
26.	Environmental Conditions
27.	Signs of excessive heat
28.	Signs of lubricant leaks
29.	Moisture Present
30.	Ambient Temperature
31.	Humidity
32.	Gearbox Temperature
33.	Primary Drive rotated input shaft in correct direction
34.	Condition of machinery guards

36. Typ 37. Co 38. Co 39. Co 40. Co 41. Bre 42. Co 43. Co 44. Co 45. Co 46. Ge 47. Ge 48. Co	Condition of coupling guards Type of coupler Condition of coupler Coupling Alignment Coupling Alignment Condition of housing Condition of mounting hardware Breather Vent Installed Condition of oil piping and connections Condition of switches, alarms, heaters, coolers, or other devices Condition of inspection covers Condition of seals and bearings
37. Co 38. Co 39. Co 40. Co 41. Bre 42. Co 43. Co 44. Co 45. Co 46. Ge 47. Ge 48. Co	Condition of coupler Coupling Alignment Condition of housing Condition of mounting hardware Breather Vent Installed Condition of oil piping and connections Condition of switches, alarms, heaters, coolers, or other devices Condition of inspection covers
38. Co 39. Co 40. Co 41. Bre 42. Co 43. Co 44. Co 45. Co 46. Ge 47. Ge 48. Co	Coupling Alignment Condition of housing Condition of mounting hardware Breather Vent Installed Condition of oil piping and connections Condition of switches, alarms, heaters, coolers, or other devices Condition of inspection covers
39. Co 40. Co 41. Bra 42. Co 43. Co 44. Co 45. Co 46. Ge 47. Ge 48. Co	Condition of housing Condition of mounting hardware Breather Vent Installed Condition of oil piping and connections Condition of switches, alarms, heaters, coolers, or other devices Condition of inspection covers
 40. Co 41. Bra 42. Co 43. Co 44. Co 45. Co 46. Ge 47. Ge 48. Co 	Condition of mounting hardware Breather Vent Installed Condition of oil piping and connections Condition of switches, alarms, heaters, coolers, or other devices Condition of inspection covers
 41. Breaction 42. Condition 43. Condition 44. Condition 45. Condition 46. Generation 47. Generation 48. Condition 	Breather Vent Installed Condition of oil piping and connections Condition of switches, alarms, heaters, coolers, or other devices Condition of inspection covers
42. Co 43. Co 44. Co 45. Co 46. Ge 47. Ge 48. Co	Condition of oil piping and connections Condition of switches, alarms, heaters, coolers, or other devices Condition of inspection covers
 43. Co 44. Co 45. Co 46. Ge 47. Ge 48. Co 	Condition of switches, alarms, heaters, coolers, or other devices Condition of inspection covers
44. Co 45. Co 46. Ge 47. Ge 48. Co	Condition of inspection covers
45. Co 46. Ge 47. Ge 48. Co	
46. Ge 47. Ge 48. Co	Condition of seals and bearings
47. Ge 48. Co	
48. Co	Gearbox Oil Level
	Gearbox oil type and grade
	Correct type and grade of oil
49. Ap	Appearance of lubricant
50. Sh	Shaft rotate freely
51. Co	Condition of input shaft
52. En	Endplay of input shaft
53. En	Endplay of output shaft
54. Co	Condition of output shaft
55. Ge	Gear backlash set correctly
56. Ge	Gear tooth condition
57. De	Degree of wear
58. Ge	Gear tooth contact
59. Ty	Type of gear tooth contact
Commen	ents
60. Ge	Gearbox Comments
61. Se	



STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. <u>APPLICABILITY.</u> The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. <u>SCOPE OF GOODS AND/OR SERVICES.</u> The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only be effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. DELIVERY OF GOODS AND/OR SERVICES. Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- 6. DELIVERY SITE AND TIME FOR PERFORMANCE. Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

TermsAndConditions

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. LIMITATION OF DAMAGES. HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY</u>. The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. <u>GOVERNING LAW AND JURISDICTION.</u> Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER</u>. No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. <u>ASSIGNMENT.</u> The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. <u>NO INDIVIDUAL LIABILITY</u>. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.