

# LR Motor Shop Repairs

## **Job Number 100811**

Prepared for ARKANSAS INDUSTRIAL MACHINERY

3804 N. NONA ST NORTH LITTLE ROCK AR 72118

### **Table of Contents**

AC Recondition As Found - Shop

AC Recondition - Rev. 2: K98T1552 EE 5

1.0



FolderID: 100811

FormID: 15754193



#### **AC Recondition As Found ARKANSAS INDUSTRIAL MACHINERY**

**3804 N. NONA ST** NORTH LITTLE ROCK, AR 72118

AC Recondition - Rev. 2

Location:

Serial Number: K98T1552 EE 5

Description: 3HP SIEMENS 3600RPM 182TC

Shop

Hi-Speed Job Number:	100811
Manufacturer:	Siemens
Product Number:	1LA0 182-2FP23
Serial Number:	K98T1552 EE 5
HP/kW:	3 (HP)
RPM:	3505 (RPM)
Frame:	182TC
Voltage:	230 / 460
Current:	7.4/3.7
Phase:	Three
Hz:	60 (Hz)
Service Factor:	1.15
Enclosure:	TEFC
J-box Included:	Complete
Coupling/Sheave:	None
Bearing RTDs:	No
Stator RTDs:	No
Repair Stage:	Final
Heaters:	No
Winding Type :	Random Wound
Bearing Type:	Rolling Element

Priorities Found: 8 - Good

#### **Overall Condition**

- 1. Report Date
- Nameplate Picture



Photos of all six sides of the machine.

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.



















	4.	Describe the Overall Condition of the Equipment as Received			
		Dirty			
Ir	nitial	Mechanical/Electrical			
	5.	Does Shaft Turn Freely?		(Yes) Yes	
	6.	Does Shaft Have Visible Damage?		(No) No	
	7.	Assembled Shaft Runout			
	8.	Assembled Shaft End Play			
	9.	Air Gap Variation <10%			
	10.	Lead Condition		(P) Pass	
	11.	Lead Length		8 Inches	
	12.	Frame Condition		pass	
	13.	Fan Condition		(P) Pass	
	14.	Broken or Missing Components		na	
Ir	Initial Electrical Inspection				
	15.	Insulation Resistance/Megger			
	16.	Winding Resistance			
		1-2	1-3	2-3	

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.



18.	Number of Stator Slots	
	anical Inspection	
	Drive End Bearing Number-	6206
21.		1
22.	Drive End Bearing Type	(Ball) Ball Bearing
23.	Drive End Lubrication Type	(Grease) Grease Lubricated
24.	Drive End Bearing Insulation or Grounding Device?	na
25.	Drive End Wavy Washer/Snap-Ring Other Retention Device?	spacer
26.	Drive End Bearing Condition	heavily worn
27.	obligation and a committee of the control of the co	6204
28.	Opposite Drive End Bearing Qty.	1
29.	Opposite Drive End Bearing Type	(Ball) Ball Bearing
30.	Opposite Drive End Lubrication Type	(Grease) Grease Lubricated
31.	Opposite Drive End Bearing Insulation or Grounding Device?	na
32.	Opposite Drive End Wavy Washer/Snap-Ring Other Retention Device?	na
33.	Opposite Drive End Bearing Condition	heavily worn
34.	Drive End Seal	
35.	Opposite Drive End Seal	
Rotor	Inspection	
36.	Rotor Type/Material	(Squirrel Aluminum) Squirrel Cage Aluminum Die Cast
37.	Growler Test	(Pass) Pass
38.	Number of Rotor Bars	
39.	Rotor Condition	pass
40.	List the Parts needed for the Repair Below	
	6206 6204 Spacer	
41.	Signature of Technician that Disassembled Motor	Cw

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Mechanical Fits- Rotor			
42. Shaft Runout			
43.	Rotor Runout		
	Drive End Bearing Fit	Rotor Body	Opposite Drive End Bearing
44.	Coupling Fit Closest to Bearing Housi	-	
	0 Degrees	90 Degrees	120 Degrees
15	Coupling Fit Closest to the end of the	Shaft	
45.	0 Degrees	60 Degrees	120 Degrees
	0 Degrees	ou Degrees	120 Deglees
46.	Drive End Bearing Shaft Fit		
	0 Degrees	60 Degrees	120 Degrees
	0	· ·	· ·
47.	<b>3</b>		(P) Pass
48.	Opposite Drive End Bearing Shaft Fit		
	0 Degrees	60 Degrees	120 Degrees
10	One saite Daire Ford Desaits a Obert Fit	O - o diti - o	(D) D
<b>49.</b> 50.	-11	Condition	(P) Pass
50.	Drive End Air Seal	Opposite Drive End Air Seel	
	Drive End Air Sear	Opposite Drive End Air Seal	
Mech	anical Fits- Bearing Housings		
	Drive End - Endbell Bearing Fit		
	0 Degrees	60 Degrees	120 Degrees
	0	<u> </u>	G .
<b>5</b> 2.	Drive End - Endbell Bearing Fit Condi	tion	(P) Pass
53.	Opposite Drive End - Endbell Bearing	Fit	
	0 Degrees	60 Degrees	120 Degrees
			(D) Dage
	<ol> <li>Opposite Drive End - Endbell Bearing Fit Condition</li> <li>Bearing Cap Condition</li> </ol>		(P) Pass
55.	Drive End Bearing Cap	Opposite Drive End Bearing Cap	
	Drive End Bearing Cap	Opposite Drive End Bearing Cap	
-	Na		
56.	End Bell Air Seal Fits		
	Drive End Air Seal	Opposite Drive End Air Seal	
57.	List Machine Work Needed Below		
	Na		
	Technician		
-	mic Balance Report		
59.	Rotor Weight and Balance Grade		
	Rotor Weight	Balance Grade	
60.	Initial Balance Readings		
00.	Drive End	Opposite Drive End	
	DIIVE LIIU	Opposite Drive Lift	

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

61. Final Balance Readings Drive End Opposite Drive End 62. Technician Rewind 63. Core Test Results - Watts loss per Pound Pre-Burnout Post Burnout  64. Core Hot Spot Test Pre-Burnout Post-Burnout  65. Post Rewind Electrical Test- Insulation Resistance 66. Post Rewind Polarization Index 67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair 74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal  80. Shaft Repair Sign-off	62. Technician  Rewind 63. Core Test Results - W Pre-Burnout  64. Core Hot Spot Test Pre-Burnout  65. Post Rewind Electrica 66. Post Rewind Vinding 1-2  68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings  72. Root cause of failure Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re Drive End Bearing I  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees
62. Technician  Rewind 63. Core Test Results - Watts loss per Pound Pre-Burnout Post Burnout  64. Core Hot Spot Test Pre-Burnout Post-Burnout  65. Post Rewind Electrical Test- Insulation Resistance 66. Post Rewind Polarization Index 67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of lailure Wear  Mechanical Fits-Rotor - Post Repair 73. Shaft Runout Post Repair 74. Rotor Runout Post Repair 75. Coupling Fit Closest to Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	Rewind  63. Core Test Results - Webster Pre-Burnout  64. Core Hot Spot Test Pre-Burnout  65. Post Rewind Electrications 66. Post Rewind Winding 1-2  68. Post Rewind Surge Test Post Rewind Hi-Pot Technician  Root Cause of Failure  71. Failure locations Bearings  72. Root cause of failure Wear  Mechanical Fits- Rotor - It Technical Post Rewind Post Rewin
Rewind 63. Core Test Results - Watts loss per Pound Pre-Burnout Post Burnout 64. Core Hot Spot Test Pre-Burnout Post-Burnout 65. Post Rewind Electrical Test- Insulation Resistance 66. Post Rewind Polarization Index 67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 74. Rotor Runout Post Repair 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	Rewind 63. Core Test Results - Were-Burnout 64. Core Hot Spot Test Pre-Burnout 65. Post Rewind Electricates Post Rewind Polarizates Post Rewind Winding 1-2 68. Post Rewind Winding 1-2 68. Post Rewind Surge Test Rewind Hi-Pot Technician Root Cause of Failure Technician Root Cause of Failure Technical Fits-Rotor In Failure locations Rearings 72. Root cause of failure Wear Rechanical Fits-Rotor In Technical Fits-R
Rewind 63. Core Test Results - Watts loss per Pound Pre-Burnout Post Burnout 64. Core Hot Spot Test Pre-Burnout Post-Burnout 65. Post Rewind Electrical Test- Insulation Resistance 66. Post Rewind Polarization Index 67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 74. Rotor Runout Post Repair 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	Rewind 63. Core Test Results - Were-Burnout 64. Core Hot Spot Test Pre-Burnout 65. Post Rewind Electricates Post Rewind Polarizates Post Rewind Winding 1-2 68. Post Rewind Winding 1-2 68. Post Rewind Surge Test Rewind Hi-Pot Technician Root Cause of Failure Technician Root Cause of Failure Technical Fits-Rotor In Failure locations Rearings 72. Root cause of failure Wear Rechanical Fits-Rotor In Technical Fits-R
63. Core Test Results - Watts loss per Pound Pre-Burnout Post Burnout  64. Core Hot Spot Test Pre-Burnout Post-Burnout  65. Post Rewind Electrical Test- Insulation Resistance 66. Post Rewind Polarization Index 67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair 74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	63. Core Test Results - Were-Burnout  64. Core Hot Spot Test Pre-Burnout  65. Post Rewind Electrications 66. Post Rewind Winding 1-2  68. Post Rewind Surge Test Post Rewind Hi-Pot Total Technician  Root Cause of Failure  71. Failure locations Bearings  72. Root cause of failure Wear  Mechanical Fits- Rotor - Its Shaft Runout Post Results Drive End Bearing Its Degrees  75. Coupling Fit Closest total Degrees  76. Coupling Fit Closest total Degrees  77. Drive End Bearing Shaft Degrees  78. Opposite Drive End Bearing Shaft Opegrees  79. Shaft Air Seal Fits Positis
Pre-Burnout Post Burnout  64. Core Hot Spot Test Pre-Burnout Post-Burnout  65. Post Rewind Electrical Test- Insulation Resistance 66. Post Rewind Polarization Index 67. Post Rewind Vinding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 74. Rotor Runout Post Repair 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	Pre-Burnout  64. Core Hot Spot Test Pre-Burnout  65. Post Rewind Electrica 66. Post Rewind Polariza 67. Post Rewind Winding 1-2  68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure  71. Failure locations Bearings  72. Root cause of failure Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re Drive End Bearing II  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
64. Core Hot Spot Test Pre-Burnout Post-Burnout  65. Post Rewind Electrical Test- Insulation Resistance 66. Post Rewind Polarization Index 67. Post Rewind Polarization Index 68. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 120 Degrees 78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 120 Degrees	64. Core Hot Spot Test Pre-Burnout  65. Post Rewind Electrica 66. Post Rewind Polariza 67. Post Rewind Winding 1-2  68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re Drive End Bearing I  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
Pre-Burnout Post-Burnout  65. Post Rewind Electrical Test- Insulation Resistance 66. Post Rewind Polarization Index 67. Post Rewind Polarization Index 67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations 8earings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	Pre-Burnout  65. Post Rewind Electrica 66. Post Rewind Polariza 67. Post Rewind Winding 1-2  68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re 74. Rotor Runout Post Re Drive End Bearing I 75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
Pre-Burnout Post-Burnout  65. Post Rewind Electrical Test- Insulation Resistance 66. Post Rewind Polarization Index 67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair Prive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	Pre-Burnout  65. Post Rewind Electrica 66. Post Rewind Polariza 67. Post Rewind Winding 1-2  68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re 74. Rotor Runout Post Re Drive End Bearing I 75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
65. Post Rewind Electrical Test- Insulation Resistance 66. Post Rewind Polarization Index 67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair 74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	65. Post Rewind Electrica 66. Post Rewind Polariza 67. Post Rewind Winding 1-2 68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - 73. Shaft Runout Post Re Drive End Bearing I 75. Coupling Fit Closest to 0 Degrees 76. Coupling Fit Closest to 0 Degrees 77. Drive End Bearing Sh 0 Degrees 78. Opposite Drive End B 0 Degrees 79. Shaft Air Seal Fits Po
66. Post Rewind Polarization Index 67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	66. Post Rewind Polariza 67. Post Rewind Winding 1-2 68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re Drive End Bearing I 75. Coupling Fit Closest to 0 Degrees 76. Coupling Fit Closest to 0 Degrees 77. Drive End Bearing Sh 0 Degrees 78. Opposite Drive End B 0 Degrees 79. Shaft Air Seal Fits Po
66. Post Rewind Polarization Index 67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair 74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	66. Post Rewind Polariza 67. Post Rewind Winding 1-2 68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re Drive End Bearing I 75. Coupling Fit Closest to 0 Degrees 76. Coupling Fit Closest to 0 Degrees 77. Drive End Bearing Sh 0 Degrees 78. Opposite Drive End B 0 Degrees 79. Shaft Air Seal Fits Po
67. Post Rewind Winding Resistance 1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits-Rotor - Post Repair 73. Shaft Runout Post Repair 74. Rotor Runout Post Repair 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	67. Post Rewind Winding 1-2  68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - 73. Shaft Runout Post Re Drive End Bearing I  75. Coupling Fit Closest t 0 Degrees  76. Coupling Fit Closest t 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
1-2 1-3 2-3  68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair 74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations  Bearings 72. Root cause of failure  Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re Drive End Bearing I 75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
68. Post Rewind Surge Test 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	68. Post Rewind Surge T 69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re Drive End Bearing I 75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations  Bearings 72. Root cause of failure  Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re  Drive End Bearing I  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations Bearings 72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair 73. Shaft Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	69. Post Rewind Hi-Pot 70. Technician  Root Cause of Failure 71. Failure locations  Bearings 72. Root cause of failure  Wear  Mechanical Fits- Rotor - I 73. Shaft Runout Post Re  Drive End Bearing I  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
70. Technician  Root Cause of Failure  71. Failure locations  Bearings  72. Root cause of failure  Wear  Mechanical Fits- Rotor - Post Repair  73. Shaft Runout Post Repair  Drive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair  0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair  0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair  0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair  0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair  Drive End Air Seal Opposite Drive End Air Seal	70. Technician  Root Cause of Failure  71. Failure locations  Bearings  72. Root cause of failure  Wear  Mechanical Fits- Rotor - I  73. Shaft Runout Post Re  Drive End Bearing II  75. Coupling Fit Closest to  0 Degrees  76. Coupling Fit Closest to  0 Degrees  77. Drive End Bearing Sh  0 Degrees  78. Opposite Drive End B  0 Degrees  79. Shaft Air Seal Fits Po
Root Cause of Failure  71. Failure locations Bearings  72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair  73. Shaft Runout Post Repair Prive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	Root Cause of Failure  71. Failure locations Bearings  72. Root cause of failure Wear  Mechanical Fits- Rotor - 73. Shaft Runout Post Re Drive End Bearing  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
71. Failure locations Bearings  72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair  73. Shaft Runout Post Repair  74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	71. Failure locations Bearings  72. Root cause of failure Wear  Mechanical Fits- Rotor - 73. Shaft Runout Post Re 74. Rotor Runout Post Re Drive End Bearing I  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
Pearings  72. Root cause of failure Wear  Mechanical Fits- Rotor - Post Repair  73. Shaft Runout Post Repair  74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	Bearings  72. Root cause of failure Wear  Mechanical Fits- Rotor - 73. Shaft Runout Post Re 74. Rotor Runout Post Re Drive End Bearing  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
72. Root cause of failure  Wear  Mechanical Fits- Rotor - Post Repair  73. Shaft Runout Post Repair  74. Rotor Runout Post Repair  Drive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair  0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair  0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair  0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair  0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair  Drive End Air Seal Opposite Drive End Air Seal	72. Root cause of failure Wear  Mechanical Fits- Rotor - 1 73. Shaft Runout Post Reference Porive End Bearing I  74. Rotor Runout Post Reference Porive End Bearing I  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Shound Degrees  78. Opposite Drive End Bearing Shound Degrees  79. Shaft Air Seal Fits Po
Wear         Mechanical Fits- Rotor - Post Repair         73. Shaft Runout Post Repair         74. Rotor Runout Post Repair         Drive End Bearing Fit       Rotor Body       Opposite Drive End Bearing         75. Coupling Fit Closest to Bearing Housing Post Repair       0 Degrees       120 Degrees         76. Coupling Fit Closest to the end of the Shaft Post Repair       0 Degrees       120 Degrees         77. Drive End Bearing Shaft Fit Post Repair       0 Degrees       120 Degrees         78. Opposite Drive End Bearing Shaft Fit Post Repair       0 Degrees       120 Degrees         79. Shaft Air Seal Fits Post Repair       Opposite Drive End Air Seal       Opposite Drive End Air Seal	Mechanical Fits- Rotor - 1 73. Shaft Runout Post Ref. 74. Rotor Runout Post Ref. Drive End Bearing II 75. Coupling Fit Closest to 0 Degrees 76. Coupling Fit Closest to 0 Degrees 77. Drive End Bearing Sh. 0 Degrees 78. Opposite Drive End B. 0 Degrees 79. Shaft Air Seal Fits Po
Mechanical Fits- Rotor - Post Repair  73. Shaft Runout Post Repair  74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	Mechanical Fits- Rotor - 173. Shaft Runout Post Ref. 74. Rotor Runout Post Ref. Drive End Bearing II 75. Coupling Fit Closest to 0 Degrees 76. Coupling Fit Closest to 0 Degrees 77. Drive End Bearing Sh. 0 Degrees 78. Opposite Drive End Bearing Sh. 0 Degrees 79. Shaft Air Seal Fits Post Ref. 79. Shaft Air Seal F
73. Shaft Runout Post Repair 74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	73. Shaft Runout Post Re 74. Rotor Runout Post Re Drive End Bearing I  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
73. Shaft Runout Post Repair 74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	73. Shaft Runout Post Re 74. Rotor Runout Post Re Drive End Bearing I  75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
74. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	74. Rotor Runout Post Re Drive End Bearing II  75. Coupling Fit Closest to Degrees  76. Coupling Fit Closest to Degrees  77. Drive End Bearing Shound Degrees  78. Opposite Drive End Bound Degrees  79. Shaft Air Seal Fits Po
Drive End Bearing Fit Rotor Body Opposite Drive End Bearing  75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	75. Coupling Fit Closest to Degrees  76. Coupling Fit Closest to Degrees  77. Drive End Bearing Shound Degrees  78. Opposite Drive End Bound Degrees  79. Shaft Air Seal Fits Po
75. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	75. Coupling Fit Closest to 0 Degrees  76. Coupling Fit Closest to 0 Degrees  77. Drive End Bearing Shound on Degrees  78. Opposite Drive End Bound on Degrees  79. Shaft Air Seal Fits Po
0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	0 Degrees  76. Coupling Fit Closest to Degrees  77. Drive End Bearing Shound Degrees  78. Opposite Drive End Bound Degrees  79. Shaft Air Seal Fits Po
0 Degrees 90 Degrees 120 Degrees  76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	0 Degrees  76. Coupling Fit Closest to Degrees  77. Drive End Bearing Shound Degrees  78. Opposite Drive End Bound Degrees  79. Shaft Air Seal Fits Po
76. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	<ul> <li>76. Coupling Fit Closest to Degrees</li> <li>77. Drive End Bearing Shound of Degrees</li> <li>78. Opposite Drive End Bound of Degrees</li> <li>79. Shaft Air Seal Fits Pool</li> </ul>
0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
0 Degrees 60 Degrees 120 Degrees  77. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	0 Degrees  77. Drive End Bearing Sh 0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
77. Drive End Bearing Shaft Fit Post Repair  0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair  0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair  Drive End Air Seal Opposite Drive End Air Seal	<ul> <li>77. Drive End Bearing Sh</li> <li>0 Degrees</li> <li>78. Opposite Drive End B</li> <li>0 Degrees</li> <li>79. Shaft Air Seal Fits Po</li> </ul>
0 Degrees 60 Degrees 120 Degrees  78. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	0 Degrees  78. Opposite Drive End B 0 Degrees  79. Shaft Air Seal Fits Po
78. Opposite Drive End Bearing Shaft Fit Post Repair  0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair  Drive End Air Seal Opposite Drive End Air Seal	<ul><li>78. Opposite Drive End B</li><li>0 Degrees</li><li>79. Shaft Air Seal Fits Po</li></ul>
78. Opposite Drive End Bearing Shaft Fit Post Repair  0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair  Drive End Air Seal Opposite Drive End Air Seal	<ul><li>78. Opposite Drive End B</li><li>0 Degrees</li><li>79. Shaft Air Seal Fits Po</li></ul>
0 Degrees 60 Degrees 120 Degrees  79. Shaft Air Seal Fits Post Repair  Drive End Air Seal Opposite Drive End Air Seal	0 Degrees  79. Shaft Air Seal Fits Po
79. Shaft Air Seal Fits Post Repair  Drive End Air Seal Opposite Drive End Air Seal	79. Shaft Air Seal Fits Po
79. Shaft Air Seal Fits Post Repair  Drive End Air Seal Opposite Drive End Air Seal	79. Shaft Air Seal Fits Po
Drive End Air Seal Opposite Drive End Air Seal	
· · ·	Drive End Air Seal
· · ·	
80. Shaft Repair Sign-off	
	80. Shaft Repair Sign-off
Mechanical Fits- Bearing Housings - Post Repair	
81. Drive End - Endbell Bearing Fit Post Repair	
81. Drive End - Endbell Bearing Fit Post Repair  0 Degrees 60 Degrees 120 Degrees	81. Drive End - Endbell B

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

82.	82. Opposite Drive End - Endbell Bearing Fit Post Repair		
	0 Degrees	60 Degrees	120 Degrees
83.	Bearing Cap Condition Post Repair		
	Drive End Bearing Cap	Opposite Drive End Bearing Cap	
9.4	End Bell Air Seal Fits Post Repair		
04.	Drive End Air Seal	Opposite Drive End Air Seal	
	Drive Life All Seal	Opposite Drive Life All Seal	
85.	End Bell Repair Sign-off		
Assen	nbly		
86.	Photograph All Major Components pri	or to assembly	
87.	Final Insulation Resistance Test		
88.	Assembled Shaft Endplay		
89.	Assembled Shaft Runout		
90.	Test Run Voltage		
	Volts	Volts	Volts
01	Test Run Amperage		
91.		Amno	Amna
	Amps	Amps	Amps
92.	Drive End Vibration Readings - Inches	s Per Second	
	Horizontal	Vertical	Axial
93.	Opposite Drive End Vibration Reading		
	Horizontal	Vertical	Axial
94. Ambient Temperature - Fahrenheit			
	Drive End Bearing Temps - Fahrenhe	it	
	5 Minutes	10 Minutes	15 Minutes
96.	Opposite Drive End Bearing Temps -	Fahrenheit	
	5 Minutes	10 Minutes	15 Minutes
07	Final Test Dun Sign off		
<ul><li>97. Final Test Run Sign-off</li><li>98. Document Final Condition with Pictures after paint</li><li>99. Final Pics and QC Review</li></ul>			
<b>33.</b>	I IIIAI I IOS AIIU QO NEVIEW		

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.



#### STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. APPLICABILITY. The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. SCOPE OF GOODS AND/OR SERVICES. The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only bee effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. <u>DELIVERY OF GOODS AND/OR SERVICES.</u> Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- **DELIVERY SITE AND TIME FOR PERFORMANCE.** Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have sixty (60) days to cure the alleged discrepancy and/or nonconformance. If Hi-Speed fails to cure in this time period, Buyer shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. <u>WARRANTIES.</u> Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. <u>LIMITATION OF DAMAGES.</u> HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY.</u> The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. **GOVERNING LAW AND JURISDICTION.** Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. ABANDONED EQUIPMENT. Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER.</u> No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. **ASSIGNMENT.** The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. NO INDIVIDUAL LIABILITY. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.