

EVERY DAY SINCE 1946

Motor Shop Repairs

Job Number 98067

Prepared for FUTURE FUEL CHEMICAL

2800 GAP RD HWY 394 SO BATESVILLE AR 72501

Table of Contents

AC Recondition Repair Report



Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

SIEMENS

FolderID: 98067 FormID: 10383195

AC Recondition Repair Report

FUTURE FUEL CHEMICAL

2800 GAP RD HWY 394 SO BATESVILLE, AR 72501

Priorities Found: **15 - Good**

General		
1. Job Number	98065	
2. Report Date	4/7/2021	
3. Customer	FUTURE FUEL	
Name Plate Information		

4. Manufacturer













































5.	Model	1LE23214DA312AA3
6.	Serial Number	Q2-E19TO329NPI 4
7.	Horsepower	200
8.	KW	
9.	Volts	460
10.	Amps	216
11.	RPM	3575
12.	Frame	447TS
13.	Enclosure	TEFC
14.	Cycles	60

15.	Phase	3
16.	Service Factor	1.15
17.	Motor Mount Position	horizontal
Initial	Inspection	
	Number of Leads	3
	Lead Length	
	Lead Size	
21.	Lead Condition	(P) Pass
22.	Lead Markings	1-3
23.	Lug Size, Condition, and Type	
24.	Winding RTD's	
25.	Winding Rtd's Condition	
26.	-	
27.	Does Shaft Turn Freely	yes
	Does Shaft Have Visible Damage	no
29.	Bearing Rtd's	
30.	Bearing Rtd's Condition	
	Contamination	
	Na	
32.	Frame Condition	(P) Pass
33.	Fan Condition	(P) Pass
34.	Broken or missing components	
	Na	
Initial	Electric Test	
35.	Resistance to Ground	Mohm
36.	Winding Resistance 1-2	Ohm
37.	Winding Resistance 2-3	Ohm's
38.	Winding Resistance 1-3	Ohm's
39.	Resistive Imbalance	%
40.	Hi-Pot	Ua
4 1.	Surge Test	(P) Pass
42.	Stator Condition	pass
43.	Failure Location	
Initial	Rotor Inspection	
44.	Rotor Type	cast aluminum
45.	Air Gap <10% Variation	
46.	Number of Rotor Bars	
47.	Number of Broken Rotor Bars	
4 8.	Growler Test	(P) Pass
4 9.	Rotor Condition	(P) Pass
Mecha	anical Inspection	



5	51.	Bearing DE Size	6316
5	52.	Bearing DE Type	ball
5	53.	DE Bearing Qty.	1
5	54.	Bearing ODE Size	6316
5	55.	Bearing ODE Type	ball
5	56.	ODE Bearing Qty.	1
5	57.	Insulated Bearing	
5	58.	Lubrication Type	grease
• 5	59.	Grease Condition	(P) Pass
• 6	60.	Bearing Retainers	(Y) Yes
6	61.	Shaft Grounding Device	
6	62.	DE Seal	
6	63.	DE Seal Type/Size	
6	64.	ODE Seal	
6	65.	ODE Seal Type/Size	
Root Cause of Failure			
6	66.	Component Failure	bearings are a little worn
6	67.	Cause of Failure	
		Normal wear on bearings	
e	68.	Comments	
		Recommend reconditioning	
6	69.	Service Technician	
Ма	chi	ne Fit Inspection Report	
7	70.	Shaft Run Out	
7	71.	Initial Shaft Run Out	
7	72.	Final Shaft Run Out	
• 7	73.	DE Bearing Shaft Fit	(P) Pass
7	74.	DE Initial Shaft Bearing Fit Size 1	3.1502 "
7	75.	DE Initial Shaft Bearing Fit Size 2	3.1501 "
7	76.	DE Initial Shaft Bearing Fit Size 3	3.1502 "
7	77.	DE Finial Shaft Bearing Fit Size 1	
7	78.	DE Finial Shaft Bearing Fit Size 2	
7	79.	DE Finial Shaft Bearing Fit Size 3	

80. ODE Bearing Shaft Fit (P) Pass 81. ODE Initial Shaft Bearing Fit Size 1 3.1502 " 82. ODE Initial Shaft Bearing Fit Size 2 3.1502 " 83. ODE Initial Shaft Bearing Fit Size 3 3.15 " 84. ODE Finial Shaft Bearing Fit Size 2 3.15 " 85. ODE Finial Shaft Bearing Fit Size 3 3.15 " 86. ODE Finial Shaft Bearing Fit Size 3 3.15 " 87. DE Air Seal Shaft Fit 8 88. DE Finial Air Seal Shaft Size 9 90. ODE Air Seal Shaft Fit 9 91. ODE Finial Air Seal Shaft Size 6.6933 " 92. ODE Final Air Seal Shaft Size 6.6933 " 93. DE Final Air Seal Shaft Size 1 6.6933 " 94. DE Finial Endbell Fit Size 2 6.6933 " 95. DE Finial Endbell Fit Size 3 6.6933 " 96. DE Initial Endbell Fit Size 3 6.6933 " 97. DE Final Endbell Fit Size 3 6.6938 " 99. DE Final Endbell Fit Size 3 6.6938 " 90. DE Endbell Fit Size 3 6.6938 " 91. DE Endbell Fit Size 3 6.6938 " 92. DE Final Endbell Fit Size 3 6.6938 " 93. DE Final Endbell Fit Size 3			
82. ODE Initial Shaft Bearing Fil Size 2 3.1502 * 83. ODE Initial Shaft Bearing Fil Size 3 3.15 * 84. ODE Finial Shaft Bearing Fil Size 1 6 85. ODE Finial Shaft Bearing Fil Size 2 6 86. ODE Finial Shaft Bearing Fil Size 3 7 87. DE Air Seal Shaft Fit 7 88. DE Initial Air Seal Shaft Size 9 90. ODE Finial Shaft Size 9 90. ODE Finial Air Seal Shaft Size 9 91. ODE Initial Air Seal Shaft Size 9 92. ODE Final Air Seal Shaft Size 9 93. DE Endoell Fit (P) Pass 94. DE Initial Endoell Fit Size 1 6.6937 * 95. DE Initial Endoell Fit Size 2 6.6938 * 97. DE Final Endoell Fit Size 3 6.8938 * 98. DE Finial Endoell Fit Size 3 6.8938 * 99. DE Final Endoell Fit Size 3 6.8938 * 100. DE Endoell Fit Size 3 6.8938 * 101. DE Endoell Fit Size 3 6.8938 * 102. Initial Endoell Fit Size 1 6.8938 * 103. DE Final Endoell Fit Size 1 6.8938 * 104. ODE Endoell Fit Size 1 6.8938 * <td< td=""><td></td><td></td><td>(P) Pass</td></td<>			(P) Pass
83. ODE Initial Shaft Bearing Fit Size 3 3.15 * 84. ODE Finial Shaft Bearing Fit Size 1 3.15 * 85. ODE Finial Shaft Bearing Fit Size 2 3.15 * 86. ODE Finial Shaft Bearing Fit Size 3 3.15 * 87. DE Air Seal Shaft Fit 3.15 * 89. DE Finial Air Seal Shaft Size 3.15 * 90. ODE Air Seal Shaft Fit 4.15 * 91. ODE Initial Air Seal Shaft Size 9.10 * 92. ODE Final Air Seal Shaft Size (P) Pass 93. DE Endoell Fit (P) Pass 94. DE Initial Endoell Fit Size 1 6.6937 * 95. DE Initial Endoell Fit Size 1 6.6937 * 96. DE Final Endoell Fit Size 1 6.6938 * 97. DE Final Endoell Fit Size 1 6.6938 * 98. DE Finial Endoell Fit Size 1 6.6938 * 99. DE Final Endoell Fit Size 1 6.6938 * 100. DE Endoell Fit Size 1 6.6938 * 101. DE Endoell Fit Size 1 6.6938 * 102. Initial Endoell Fit Size 1 6.6938 * 103. Finial Endoell Fit Size 1 6.6938 * 104. ODE Endoell Fit Size 1 6.6938 * 105. ODE Initial Endoell Fit Size 3 6.6938 * 106. ODE Initial Endoell Fit Size 3	81.	ODE Initial Shaft Bearing Fit Size 1	3.1502 "
84. ODE Finial Shaft Bearing Fil Size 1 85. ODE Finial Shaft Bearing Fil Size 2 86. ODE Finial Shaft Bearing Fil Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 90. ODE Air Seal Shaft Size 90. ODE Final Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Final Air Seal Shaft Size 93. DE Endball Fit Size 1 95. DE Initial Endball Fit Size 2 96. DE Initial Endball Fit Size 1 97. DE Final Endball Fit Size 1 98. DE Final Endball Fit Size 1 99. DE Final Endball Fit Size 2 99. DE Final Endball Fit Size 1 99. DE Final Endball Fit Size 1 90. DE Endball Fit Insulated 101. DE Endball Fit Size 1 91. ODE Endball Fit Size 1 92. ODE Endball Fit Size 1 93. DE Endball Fit Size 1 94. ODE Endball Fit Size 1 95. DE Endball Fit Size 1 96. DE Endball Fit Size 1 97. ODE Endball Fit Size 1 98. ODE Final Endball Fit Size 1 99. ODE Endball Fit Size 1 91. ODE Endball Fit Size 1 91. ODE Endbal	82.	ODE Initial Shaft Bearing Fit Size 2	3.1502 "
85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Ar Seal Shaft Fit 88. DE Finial Air Seal Shaft Size 90. ODE Ar Seal Shaft Fit 91. ODE Finial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Endoell Fit 93. DE Endoell Fit Size 1 94. DE Initial Endoell Fit Size 2 95. DE Initial Endoell Fit Size 1 96. DE Initial Endoell Fit Size 2 97. DE Final Air Seal Shaft Size 3 98. DE Endoell Fit Size 1 99. DE Final Endoell Fit Size 3 91. DE Endoell Fit Size 3 92. DE Endoell Fit Size 3 93. DE Endoell Fit Size 3 94. DE Final Endoell Fit Size 3 95. DE Final Endoell Fit Size 3 96. DE Initial Endoell Fit Size 3 97. DE Final Endoell Fit Size 3 98. DE Final Endoell Fit Size 3 99. DE Final Endoell Fit Size 4 91. DE Endoell Fit Size 5 92. DE Endoell Fit Size 1 93. DE Endoell Fit Size 1 94. ODE Endoell Fit Size 3 95. ODE Initial Endoell Fit Size 3 96. ODE Initial Endoell Fit Size 3 97. ODE Initial Endoe	83.	ODE Initial Shaft Bearing Fit Size 3	3.15 "
86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Finial Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 2 97. DE Final Endbell Fit Size 2 98. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Final Endbell Fit Size 3 92. DE Final Endbell Fit Size 3 93. DE Final Endbell Fit Size 3 94. DE Endbell Fit Size 3 95. DE Initial Endbell Fit Size 4 96. DE Initial Endbell Fit Size 3 97. DE Endbell Air Seal Fit Size 103. Finial Endbell Fit Size 1 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 3 106. ODE Initial Endbell Fit Size 3 107. ODE Initial Endbell Fit Size 3 108. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 1000 DE Final Endbell Fit Size 3 <td>84.</td> <td>ODE Finial Shaft Bearing Fit Size 1</td> <td></td>	84.	ODE Finial Shaft Bearing Fit Size 1	
87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 99. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endal Irit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 4 98. DE Finial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 90. DE Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Final Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Endbell Fit Size 4 95. DE Initial Endbell Fit Size 3 96. DE Endbell Fit Size 4 97. DE Final Endbell Fit Size 4 98. DE Final Endbell Fit Size 5 99. DE Final Endbell Fit Size 1 90. DE Endbell Fit Size 1 91. ODE Endbell Fit Size 1 92. ODE Endbell Fit Size 1 93. ODE Endbell Fit Size 1 94. ODE Endbell Fit Size 1 95. ODE Initial Endbell Fit Size 3 96. ODE Initial Endbell Fit Size 1	85.	ODE Finial Shaft Bearing Fit Size 2	
88. DE Initial Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 1 97. DE Final Air Seal Shaft Size 98. DE Initial Endbell Fit Size 1 99. DE Final Endbell Fit Size 1 99. DE Endbell Fit Size 3 100. DE Endbell Fit Size 3 101. DE Endbell Fit Size 1 102. Initial Endbell Air Seal Fit Size 103. Final Endbell Fit Size 1 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 1 106. ODE Final Endbell Fit Size 3 107. ODE Final Endbell Fit Size 3 108. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Size 3 112. ODE Endbell Fit Size 3 113. ODE Endbell Fit Size 3	86.	ODE Finial Shaft Bearing Fit Size 3	
89. DE Final Air Seal Shaft Fit 91. ODE Air Seal Shaft Fit 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit (P) Pass 94. DE Initial Air Seal Shaft Size 93. DE Endbell Fit (P) Pass 94. DE Initial Endbell Fit Size 1 6.6933 * 95. DE Initial Endbell Fit Size 2 6.6933 * 96. DE Final Endbell Fit Size 1 6.6938 * 97. DE Final Endbell Fit Size 2 9.9 99. DE Final Endbell Fit Size 3 6.6938 * 100. DE Endbell Air Seal Fit 1 101. DE Endbell Air Seal Fit Size 1 6.6938 * 102. Initial Endbell Fit Size 3 6.6938 * 103. Finial Endbell Fit Size 1 6.6938 * 104. ODE Endbell Fit Size 1 6.6938 * 105. ODE Initial Endbell Fit Size 2 6.6938 * 106. ODE Initial Endbell Fit Size 3 6.6937 * 108. ODE Final Endbell Fit Size 2 6.6938 * 109. ODE Final Endbell Fit Size 3 6.6937 * 109. ODE Final Endbell Fit Size 3 1 110. ODE Final Endbell Fit Size 3 1 111. ODE Endbell Air Seal Fit Size 1 112. ODE Endbell Fit Insulated 1 <td< td=""><td>87.</td><td>DE Air Seal Shaft Fit</td><td></td></td<>	87.	DE Air Seal Shaft Fit	
90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit (P) Pass 94. DE Initial Endbell Fit Size 1 6.6937 * 95. DE Initial Endbell Fit Size 2 6.6938 * 96. DE Initial Endbell Fit Size 3 6.6938 * 97. DE Final Endbell Fit Size 1 6.6938 * 97. DE Final Endbell Fit Size 3 6.6938 * 99. DE Final Endbell Fit Size 3 6.6938 * 100. DE Endbell Fit Noulated 1 101. DE Endbell Fit Size 3 6.6938 * 102. Initial Endbell Fit Size 3 6.6938 * 103. Finial Endbell Fit Size 1 6.6938 * 104. ODE Endbell Fit Noulated 1 105. ODE Initial Endbell Fit Size 1 6.6938 * 106. ODE Initial Endbell Fit Size 1 6.6938 * 107. ODE Final Endbell Fit Size 3 6.6937 * 108. ODE Final Endbell Fit Size 3 6.6937 * 109. ODE Final Endbell Fit Size 3 1 110. ODE Final Endbell Fit Size 3 1 111. ODE Endbell Fit Noulated 1 112. ODE Endbell Air Seal Fit Size 1 1	88.	DE Initial Air Seal Shaft Size	
91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit (P) Pass 94. DE Initial Endbell Fit Size 1 6.6937 " 95. DE Initial Endbell Fit Size 2 6.6938 " 97. DE Final Endbell Fit Size 3 6.6938 " 97. DE Final Endbell Fit Size 3 6.6938 " 98. DE Finial Endbell Fit Size 3 6.6938 " 99. DE Final Endbell Fit Size 3 0.000 DE Endbell Fit Size 3 100. DE Endbell Fit Insulated (P) Pass 101. DE Endbell Fit Size 1 (P) Pass 103. Finial Endbell Fit Size 1 (P) Pass 104. ODE Endbell Fit Size 1 6.6938 " 105. ODE Initial Endbell Fit Size 1 6.6938 " 106. ODE Initial Endbell Fit Size 3 6.6938 " 107. ODE Initial Endbell Fit Size 3 6.6937 " 108. ODE Final Endbell Fit Size 3 6.6937 " 109. ODE Final Endbell Fit Size 3 6.6937 " 109. ODE Endbell Fit Size 3 6.6937 " 109. ODE Final Endbell Fit Size 3 (P) Pass 110. ODE Endbell Fit Size 3 (P) Pass 1111. ODE Endbell Fit Size 3 (P) Pass 1111. ODE Endbell Fit Size 4 (P) Pass	89.	DE Final Air Seal Shaft Size	
92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit (P) Pass 94. DE Initial Endbell Fit Size 1 6.6937 " 95. DE Initial Endbell Fit Size 2 6.6938 " 96. DE Initial Endbell Fit Size 1 6.6938 " 97. DE Final Endbell Fit Size 2 6.6938 " 98. DE Final Endbell Fit Size 1 6.6938 " 99. DE Final Endbell Fit Size 2 9 99. DE Final Endbell Fit Size 3 6.6938 " 100. DE Endbell Air Seal Fit Size 1 (P) Pass 101. DE Endbell Air Seal Fit Size 3 (P) Pass 103. Finial Endbell Fit Size 1 6.6938 " 104. ODE Initial Endbell Fit Size 1 6.6938 " 105. ODE Initial Endbell Fit Size 1 6.6938 " 106. ODE Initial Endbell Fit Size 2 6.6937 " 107. ODE Initial Endbell Fit Size 3 6.6937 " 108. ODE Final Endbell Fit Size 3 1 110. ODE Final Endbell Fit Size 3 1 111. ODE Endbell Fit Insulated 1 112. ODE Initial Endbell Seal Fit Size (P) Pass 113. ODE Initial Endbell Seal Fit Size (P) Pass 114. ODE Final Endbell Seal Fit Size (P) Pass 115. Foot Final Endbell Seal Fit Size	90.	ODE Air Seal Shaft Fit	
 93. DE Endbell Fit (P) Pass 94. DE Initial Endbell Fit Size 1 6.6937 " 95. DE Initial Endbell Fit Size 2 6.6938 " 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Air Seal Fit 100. DE Endbell Air Seal Fit 101. DE Endbell Air Seal Fit Size 3 103. Finial Endbell Fit Size 3 104. ODE Endbell Fit Size 3 105. ODE Initial Endbell Fit Size 4 106. ODE Initial Endbell Fit Size 4 107. ODE Initial Endbell Fit Size 2 108. ODE Initial Endbell Fit Size 3 109. ODE Final Endbell Fit Size 4 109. ODE Final Endbell Fit Size 5 109. ODE Final Endbell Fit Size 4 109. ODE Final Endbell Fit Size 5 109. ODE Final Endbell Fit Size 4 109. ODE Final Endbell Fit Size 3 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Size 3 112. ODE Endbell Fit Size 3 113. ODE Initial Endbell Seal Fit Size 114. ODE Final Endbell Seal Fit Size 5 115. Foot Condition (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (P) Pass 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Left End 133. Balance Speed 134. Finish Left End 	91.	ODE Initial Air Seal Shaft Size	
 93. DE Endbell Fit (P) Pass 94. DE Initial Endbell Fit Size 1 6.6937 " 95. DE Initial Endbell Fit Size 2 6.6938 " 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Air Seal Fit 91. DE Endbell Air Seal Fit Size 92. OE Initial Endbell Fit Size 3 93. OE Endbell Fit Noulated 94. DE Endbell Fit Noulated 95. OE Initial Endbell Fit Size 4 96. OE Initial Endbell Fit Size 5 97. OE Endbell Fit Noulated 98. OE Endbell Fit Noulated 99. OE Final Endbell Fit Size 4 99. OE Final Endbell Fit Size 5 90. OE Endbell Fit Noulated 91. ODE Initial Endbell Fit Size 4 92. OE Initial Endbell Fit Size 5 93. ODE Initial Endbell Fit Size 5 94. ODE Final Endbell Fit Size 6 95. ODE Initial Endbell Fit Size 6 95. ODE Initial Endbell Fit Size 6 96. ODE Final Endbell Fit Size 6 96. ODE Final Endbell Fit Size 6 97. ODE Final Endbell Fit Size 3 98. ODE Final Endbell Fit Size 3 99. ODE Final Endbell Fit Size 3 911. ODE Endbell Fit Insulated 912. ODE Endbell Fit Size 3 9113. ODE Initial Endbell Seal Fit Size 9114. ODE Final Endbell Seal Fit Size 9115. Foot Condition (P) Pass 9117. Flange Condition (NA) Not Applicable 9118. Service Technician 9118. Service Technician 9119. Balance Type 9120. Balance Operating Speed 9131. Start Left End 9132. Start Right End 9133. Balancing Specification 9134. Finish Left End 9135. Fot Finish Left End 9135. Fot Finish Left End 	92.	ODE Final Air Seal Shaft Size	
94. DE Initial Endbell Fit Size 1 6.6937 * 95. DE Initial Endbell Fit Size 3 6.6938 * 97. DE Final Endbell Fit Size 1 6.6938 * 98. DE Final Endbell Fit Size 1 6.6938 * 99. DE Final Endbell Fit Size 3 6.6938 * 100. DE Endbell Fit Size 3 6.6938 * 101. DE Endbell Fit Size 3 6.6938 * 102. Initial Endbell Fit Size 4 6.6938 * 103. Finial Endbell Fit Size 5 6.6938 * 104. ODE Endbell Fit Size 1 6.6938 * 105. ODE Initial Endbell Fit Size 2 6.6938 * 106. ODE Initial Endbell Fit Size 2 6.6938 * 107. ODE Initial Endbell Fit Size 3 6.6937 * 108. ODE Final Endbell Fit Size 2 6.6937 * 109. ODE Final Endbell Fit Size 3 6.6937 * 100. ODE Final Endbell Fit Size 3 6.6937 * 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Size 3 111. ODE Endbell Fit Insulated 112. ODE Endbell Seal Fit Size 112. ODE Endbell Air Seal Fit Size (P) Pass 113. ODE Initial Endbell Seal Fit Size (P) Pass 114. ODE Final Endbell Seal Fit Size (P) Pass 115. Foot Condition (P) Pass			(P) Pass
95. DE Initial Endbell Fit Size 2 6.6939 " 96. DE Initial Endbell Fit Size 3 6.6938 " 97. DE Final Endbell Fit Size 1			
96. DE Initial Endbell Fit Size 3 6.6938 " 97. DE Final Endbell Fit Size 1			
97. DE Final Endbell Fit Size 1 98. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Isulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Fit Size 1 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 2 106.6938 " 106. ODE Initial Endbell Fit Size 2 107. ODE Initial Endbell Fit Size 3 108. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 4 109. ODE Initial Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 109. ODE Final Endbell Fit Size 4 109. ODE Final Endbell Fit Size 3 110. ODE Final Endbell Fit Size 3 111. ODE Final Endbell Fit Size 3 112. ODE Endbell Fit Size 3 114. ODE Final Endbell Fit Size 3 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (P) Pass 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Speedfication 124. Finish Left End			
98. DE Finial Endbell Fit Size 2 99. DE Final Endbell Fit Insulated 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Air Seal Fit Size 105. ODE Initial Endbell Fit Size 1 6.6938 " 106. ODE Initial Endbell Fit Size 2 107. ODE Initial Endbell Fit Size 3 108. ODE Initial Endbell Fit Size 1 109. ODE Final Endbell Fit Size 1 109. ODE Final Endbell Fit Size 2 110. ODE Endbell Fit Size 3 111. ODE Endbell Fit Size 3 112. ODE Endbell Fit Insulated 112. ODE Endbell Fit Insulated 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician 119. Balance Type 120. Balance Operating Speed 121. Start Left End 121. Start Left End 122. Start Right End 122. Start Right End 123. Balancing Specification 124. Finish Left End 124. Finish Left End			0.0000
 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit (P) Pass 105. ODE Initial Endbell Fit Size 1 6.6938 " 106. ODE Initial Endbell Fit Size 2 6.6938 " 107. ODE Initial Endbell Fit Size 3 6.6937 " 108. ODE Final Endbell Fit Size 3 6.6937 " 109. ODE Final Endbell Fit Size 3 6.6937 " 109. ODE Final Endbell Fit Size 4 109. ODE Final Endbell Fit Size 5 110. ODE Final Endbell Fit Size 5 111. ODE Endbell Fit Insulated 112. ODE Endbell Fit Size 6 115. Foot Flaness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (P) Pass 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 			
100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit (P) Pass 105. ODE Initial Endbell Fit Size 1 6.6938 " 106. ODE Initial Endbell Fit Size 2 6.6938 " 107. ODE Initial Endbell Fit Size 2 6.6938 " 108. ODE Final Endbell Fit Size 3 6.6937 " 108. ODE Final Endbell Fit Size 2 6.6937 " 109. ODE Final Endbell Fit Size 3 6.6937 " 110. ODE Final Endbell Fit Size 3 6.6937 " 111. ODE Endbell Fit Insulated 111. 112. ODE Endbell Seal Fit Size 3 111. 113. ODE Initial Endbell Seal Fit Size (P) Pass 114. ODE Final Endbell Seal Fit Size (P) Pass 115. Foot Flatness (P) Pass 116. Foot Condition (NA) Not Applicable 118. Service Technician (NA) Not Applicable 118. Service Technician 112. Balance Operating Speed 121. 120. Balance Operating Speed 121. 121. Start Left End 122. 122. Start Right End 123. 123			
101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit (P) Pass 105. ODE Initial Endbell Fit Size 1 6.6938 " 106. ODE Initial Endbell Fit Size 2 6.6938 " 107. ODE Initial Endbell Fit Size 1 6.6937 " 108. ODE Final Endbell Fit Size 1 6.6937 " 109. ODE Final Endbell Fit Size 1 6.6937 " 109. ODE Final Endbell Fit Size 1 6.6937 " 110. ODE Final Endbell Fit Size 1 6.6937 " 110. ODE Final Endbell Fit Size 1 6.6937 " 110. ODE Final Endbell Fit Issuated (P) Pass 111. ODE Endbell Fit Insulated (P) Pass 112. ODE Endbell Seal Fit Size (P) Pass 113. ODE Initial Endbell Seal Fit Size (P) Pass 114. ODE Final Endbell Seal Fit Size (P) Pass 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician 118 Balancing Report 119. Balance Operating Speed 121. Start Left End 121. Start Left End 122. Start Righ			
102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit (P) Pass 105. ODE Initial Endbell Fit Size 1 6.6938 " 106. ODE Initial Endbell Fit Size 2 6.6938 " 107. ODE Initial Endbell Fit Size 3 6.6937 " 108. ODE Final Endbell Fit Size 1 6.6937 " 109. ODE Final Endbell Fit Size 2 6.6937 " 100. ODE Final Endbell Fit Size 3 6.6937 " 110. ODE Final Endbell Fit Size 2 100 111. ODE Endbell Fit Navlated 111 112. ODE Endbell Fit Insulated 111 113. ODE Initial Endbell Seal Fit Size (P) Pass 114. ODE Final Endbell Seal Fit Size (P) Pass 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician 111 Balancing Report 112. Balance Operating Speed 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 124. Finish Left End			
103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 2 107. ODE Initial Endbell Fit Size 3 108. ODE Final Endbell Fit Size 1 109. ODE Final Endbell Fit Size 2 1100. ODE Final Endbell Fit Size 3 1111. ODE Final Endbell Fit Size 3 1112. ODE Final Endbell Fit Size 3 1113. ODE Final Endbell Fit Size 1114. ODE Final Endbell Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Final Endbell Seal Fit Size 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (P) Pass 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End			
104. ODE Endbell Fit (P) Pass 105. ODE Initial Endbell Fit Size 1 6.6938 " 106. ODE Initial Endbell Fit Size 2 6.6938 " 107. ODE Initial Endbell Fit Size 3 6.6937 " 108. ODE Final Endbell Fit Size 1 6.6937 " 109. ODE Final Endbell Fit Size 2 6.6937 " 110. ODE Final Endbell Fit Size 2 6.6937 " 110. ODE Final Endbell Fit Size 3 6.6937 " 111. ODE Endbell Fit Insulated 111. 112. ODE Endbell Fit Size 3 (P) Pass 113. ODE Initial Endbell Seal Fit Size (P) Pass 114. ODE Final Endbell Seal Fit Size (P) Pass 115. Foot Flatness (P) Pass 116. Foot Condition (NA) Not Applicable 117. Flange Condition (NA) Not Applicable 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 122. Start Right End 123. Balancing Specification 124. Finish Left End 124. Finish Left End			
105. ODE Initial Endbell Fit Size 1 6.6938 " 106. ODE Initial Endbell Fit Size 2 6.6938 " 107. ODE Initial Endbell Fit Size 3 6.6937 " 108. ODE Final Endbell Fit Size 1 6 109. ODE Final Endbell Fit Size 2 10 110. ODE Final Endbell Fit Size 3 11 111. ODE Endbell Fit Size 3 11 112. ODE Endbell Fit Size 3 11 113. ODE Initial Endbell Seal Fit 1 113 114. ODE Finial Endbell Seal Fit Size 111 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician 11 Balancing Report 12 120. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 122. Start Right End 123. Balancing Specification 124. Finish Left End 124. Finish Left End			
106. ODE Initial Endbell Fit Size 2 6.6938 " 107. ODE Initial Endbell Fit Size 3 6.6937 " 108. ODE Final Endbell Fit Size 1 109. ODE Final Endbell Fit Size 2 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Insulated 112. ODE Endbell Fit Insulated 112. ODE Endbell Seal Fit 113. ODE Initial Endbell Seal Fit Size (P) Pass 114. ODE Final Endbell Seal Fit Size (P) Pass 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 123. Balancing Specification 124. Finish Left End	-		
107. ODE Initial Endbell Fit Size 36.6937 "108. ODE Final Endbell Fit Size 1109. ODE Final Endbell Fit Size 2110. ODE Final Endbell Fit Size 3111. ODE Endbell Fit Insulated112. ODE Endbell Air Seal Fit113. ODE Initial Endbell Seal Fit Size114. ODE Finial Endbell Seal Fit Size(P) Pass115. Foot Flatness(P) Pass116. Foot Condition(P) Pass117. Flange Condition(NA) Not Applicable118. Service Technician119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End124. Finish Left End			
108. ODE Final Endbell Fit Size 1 109. ODE Final Endbell Fit Size 2 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Insulated 112. ODE Endbell Air Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 125. Hend 126. Hend 127. Start Left End 128. Balancing Specification 124. Finish Left End			
109. ODE Final Endbell Fit Size 2 110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Insulated 112. ODE Endbell Air Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician Balancing Report 120. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End	-		6.6937 "
110. ODE Final Endbell Fit Size 3 111. ODE Endbell Fit Insulated 112. ODE Endbell Air Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End			
111. ODE Endbell Fit Insulated 112. ODE Endbell Air Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness (P) Pass 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 123. Balancing Specification 124. Finish Left End 124. Finish Left End			
112. ODE Endbell Air Seal Fit 113. ODE Initial Endbell Seal Fit Size 114. ODE Finial Endbell Seal Fit Size 115. Foot Flatness 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End			
113. ODE Initial Endbell Seal Fit Size114. ODE Finial Endbell Seal Fit Size115. Foot Flatness(P) Pass116. Foot Condition(P) Pass117. Flange Condition(NA) Not Applicable118. Service Technician(NA) Not Applicable119. Balance Type(NA)120. Balance Operating Speed(NA)121. Start Left End(NA)123. Balancing Specification(NA)124. Finish Left End(NA)			
114. ODE Finial Endbell Seal Fit Size115. Foot Flatness(P) Pass116. Foot Condition(P) Pass116. Foot Condition(NA) Not Applicable117. Flange Condition(NA) Not Applicable118. Service Technician100Balancing Report110119. Balance Type110120. Balance Operating Speed111121. Start Left End112122. Start Right End112123. Balancing Specification124. Finish Left End124. Finish Left End114			
 115. Foot Flatness 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 			
 116. Foot Condition (P) Pass 117. Flange Condition (NA) Not Applicable 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 	114.	ODE Finial Endbell Seal Fit Size	
 117. Flange Condition (NA) Not Applicable 118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 			
118. Service Technician Balancing Report 119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End			(P) Pass
Balancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End			(NA) Not Applicable
119. Balance Type 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End	118.	Service Technician	
 120. Balance Operating Speed 121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End 	Balan	cing Report	
121. Start Left End 122. Start Right End 123. Balancing Specification 124. Finish Left End	119.	Balance Type	
122. Start Right End123. Balancing Specification124. Finish Left End	120.	Balance Operating Speed	
123. Balancing Specification 124. Finish Left End	121.	Start Left End	
124. Finish Left End	122.	Start Right End	
	123.	Balancing Specification	
125. Finish Right End	124.	Finish Left End	
	125.	Finish Right End	

126.	Service Technician
Assen	nbly and Final Test
127.	Meggar Testing Reading
128.	Surge Test
129.	Hi-Pot
130.	Winding Resistance 1-2
131.	Winding Resistance 2-3
132.	Winding Resistance 1-3
133.	Test Run Voltage Phase A
134.	Test Run Amps A
135.	Test Run Voltage Phase B
136.	Test Run Amps B
137.	Test Run Voltage Phase C
138.	Test Run Amps C
139.	DE Horizontal Vibration Reading
140.	DE Vertical Vibration Reading
141.	DE Axial Vibration Reading
142.	ODE Horizontal Vibration Reading
143.	ODE Vertical Vibration Reading
144.	ODE Axial Vibration Reading
145.	Ambient Temp at start of Test Run
146.	Temp at 5 minutes
147.	Temp at 10 minutes
148.	Temp at 15 minutes
149.	Temp at 20 minutes
150.	Temp at 25 minutes
151.	Temp at 30 minutes
152.	Temp at 35 minutes
153.	Temp at 40 minutes
154.	Temp at 45 minutes
155.	Temp at 50 minutes
156.	Temp at 55 minutes
157.	Temp at 60 minutes
158.	Motor Paint
159.	Service Technician



STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. <u>APPLICABILITY.</u> The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. <u>SCOPE OF GOODS AND/OR SERVICES.</u> The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only be effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. DELIVERY OF GOODS AND/OR SERVICES. Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- 6. DELIVERY SITE AND TIME FOR PERFORMANCE. Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

TermsAndConditions

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. LIMITATION OF DAMAGES. HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY</u>. The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. <u>GOVERNING LAW AND JURISDICTION.</u> Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase, price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER</u>. No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. <u>ASSIGNMENT.</u> The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. <u>NO INDIVIDUAL LIABILITY</u>. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.