

# EVERY DAY SINCE 1946

**Motor Shop Repairs** 

## Job Number 99302

Prepared for Hobby Electric

4390 Steel Bridge Road Benton AR 72019

## Table of Contents

AC Recondition Repair Report



Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

FolderID: 99302

FormID: 12673645

### **AC Recondition Repair Report**

#### **Hobby Electric**

4390 Steel Bridge Road Benton, AR 72019

#### Priorities Found: **2 - Good**

#### General

- 1. Job Number
- 2. Report Date
- 3. Customer
- Name Plate Information
  - 4. Manufacturer









Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Becker











5.	Model	FDR90S-85/4P
6.	Serial Number	41814498275
7.	Horsepower	HP
8.	KW	1.3 KW
9.	Volts	440 Volts
10.	Amps	4.9 Amps
11.	RPM	1690 RPM
12.	Frame	
13.	Enclosure	
14.	Cycles	60 HZ

15. Phase

16. Service Factor

17. Motor Mount Position

#### **Initial Inspection**

18. Number of Leads

6

3 PH



19.	Lead Length	
20.	Lead Size	
21.	Lead Condition	
22.	Lead Markings	
23.	Lug Size, Condition, and Type	
24.	Winding RTD's	
25.	Winding Rtd's Condition	
26.	Shaft Run Out	
27.	Does Shaft Turn Freely	
28.	Does Shaft Have Visible Damage	
29.	Bearing Rtd's	
30.	Bearing Rtd's Condition	
31.	Contamination	
32.	Frame Condition	
33.	Fan Condition	
34.	Broken or missing components	
Initial	Electric Test	
35.	Resistance to Ground	
36.	Winding Resistance 1-2	
37.	Winding Resistance 2-3	
38.	Winding Resistance 1-3	
39.	Resistive Imbalance	
40.	Hi-Pot	
41.	Surge Test	
42.	Stator Condition rewind	
43.	Failure Location	
Initial Rotor Inspection		
44.	Rotor Type	
45.	Air Gap <10% Variation	

45. Air Gap <10% Variation

46.	Number of Rotor Bars		
	Number of Rotor Bars		
47.			
	Rotor Condition		
_	Mechanical Inspection		
	Bearing Manufacture		
	Bearing DE Size		
	Bearing DE Size Bearing DE Type		
	DE Bearing Qty.		
	Bearing ODE Size		
	Bearing ODE Type		
	ODE Bearing Qty.		
	Insulated Bearing		
	Lubrication Type		
	Grease Condition		
	Bearing Retainers		
	Shaft Grounding Device		
	DE Seal		
63.	DE Seal Type/Size		
	ODE Seal		
65.	ODE Seal Type/Size		
Root	Cause of Failure		
66.	Component Failure		
67.	Cause of Failure		
	Comments		
	Service Technician		
	ine Fit Inspection Report		
	Shaft Run Out		
	Initial Shaft Run Out		
	Final Shaft Run Out		
	DE Bearing Shaft Fit		
74.	5		
75.	DE Initial Shaft Bearing Fit Size 2		
	DE Initial Shaft Bearing Fit Size 3		
77.	5		
78. 79.	DE Finial Shaft Bearing Fit Size 2 DE Finial Shaft Bearing Fit Size 3		
	ODE Bearing Shaft Fit		
	ODE Bearing Shart Fit		
82.			
83.	-		
84.			
85.			
	ODE Finial Shaft Bearing Fit Size 3		
	DE Air Seal Shaft Fit		
88.	DE Initial Air Seal Shaft Size		
89.	DE Final Air Seal Shaft Size		

90. ODE Air Seal Shaft Fit         91. ODE Finial Air Sal Shaft Size         92. ODE Finial Air Seal Shaft Size         93. DE Endbell Fit         94. DE Initial Endbell Fit Size 1         95. DE Initial Endbell Fit Size 2         96. DE Initial Endbell Fit Size 1         97. DE Final Endbell Fit Size 2         98. DE Finial Endbell Fit Size 3         99. DE Final Endbell Fit Size 3         90. DE Endbell Fit Insulated         101. DE Endbell Air Seal Fit         102. Initial Endbell Fit Size 3         103. Finial Endbell Fit Size 1         104. ODE Endbell Air Seal Fit         105. ODE Initial Endbell Fit Size 1         106. ODE Initial Endbell Fit Size 1         107. ODE Finial Endbell Fit Size 1         108. ODE Finial Endbell Fit Size 1         109. ODE Finial Endbell Fit Size 3         109. ODE Finial Endbell Fit Size 3         109. ODE Finial Endbell Fit Size 3         100. ODE Finial Endbell Fit Size 3         110. ODE Endbell Fit Size 3         111. ODE Endbell Fit Size 3         112. ODE Endbell Fit Size 3         113. ODE Initial Endbell Sit Size 3         114. ODE Endbell Fit Size 3         115. Foot Final Endbell Fit Size 4         116. Foot Condition         117. Flange Condition		
92. ODE Final Air Seal Shaft Size           93. DE Endbell Fit           94. DE Initial Endbell Fit Size 1           95. DE Initial Endbell Fit Size 2           96. DE Initial Endbell Fit Size 3           97. DE Final Endbell Fit Size 4           98. DE Finial Endbell Fit Size 3           99. DE Finial Endbell Fit Size 4           99. DE Finial Endbell Fit Size 3           100. DE Endbell Fit Insulated           101. DE Endbell Fit Size 1           102. Initial Endbell Fit Size 1           103. Finial Endbell Fit Size 1           104. ODE Endbell Fit Size 1           105. ODE Initial Endbell Fit Size 2           106. ODE Initial Endbell Fit Size 1           107. ODE Initial Endbell Fit Size 2           108. ODE Final Endbell Fit Size 3           109. ODE Final Endbell Fit Size 3           101. ODE Final Endbell Fit Size 3           102. ODE Final Endbell Fit Size 3           103. ODE Final Endbell Fit Size 3           104. ODE Final Endbell Fit Size 3           110. ODE Final Endbell Fit Size 3           111. ODE Endbell Fit Size 3           112. ODE Endbell Fit Size 3           113. ODE Initial Endbell Fit Size           114. ODE Finial Endbell Seal Fit Size           115. Foot Candition           116. Foot Candition		
93. DE Endbell Fit           94. DE Initial Endbell Fit Size 1           95. DE Initial Endbell Fit Size 2           96. DE Initial Endbell Fit Size 3           97. DE Final Endbell Fit Size 1           98. DE Final Endbell Fit Size 2           99. DE Final Endbell Fit Size 3           100. DE Endbell Fit Size 3           101. DE Endbell Air Seal Fit           102. Initial Endbell Fit Size 1           103. Final Endbell Fit Size 3           104. ODE Endbell Air Seal Fit Size           105. ODE Initial Endbell Fit Size 1           106. ODE Initial Endbell Fit Size 2           107. ODE Initial Endbell Fit Size 3           108. ODE Initial Endbell Fit Size 3           109. ODE Final Endbell Fit Size 3           109. ODE Final Endbell Fit Size 3           109. ODE Final Endbell Fit Size 3           110. ODE Final Endbell Fit Size 3           111. ODE Endbell Fit Size 3           112. ODE Endbell Fit Size 3           113. ODE Initial Endbell Seal Fit Size           114. ODE Final Endbell Seal Fit Size           115. Foot Flatnses           116. Foot Condition           117. Flange Condition           118. Foot Condition           119. Balance Type           120. Balance Operating Speed           121. Start Left End <th></th> <th></th>		
94. DE Initial Endbell Fit Size 1         95. DE Initial Endbell Fit Size 2         96. DE Initial Endbell Fit Size 3         97. DE Final Endbell Fit Size 1         98. DE Final Endbell Fit Size 3         100. DE Endbell Fit Insulated         111. DE Endbell Air Seal Fit         122. Initial Endbell Air Seal Fit Size         103. DE Endbell Air Seal Fit Size         104. ODE Endbell Fit Size 1         105. ODE Initial Endbell Fit Size 1         106. ODE Initial Endbell Fit Size 1         107. ODE Initial Endbell Fit Size 2         108. ODE Final Endbell Fit Size 1         109. ODE Final Endbell Fit Size 2         100. ODE Final Endbell Fit Size 3         101. ODE Final Endbell Fit Size 1         102. ODE Final Endbell Fit Size 2         103. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Size 4         112. ODE Endbell Fit Size 5         113. Foot Flantess         114. ODE Final Endbell Seal Fit Size         115. Foot Flantess         116. Foot Condition         117. Flange Condition         118. Servi		
95. DE Initial Endbell Fit Size 2         96. DE Initial Endbell Fit Size 3         97. DE Final Endbell Fit Size 1         98. DE Final Endbell Fit Size 2         99. DE Final Endbell Fit Size 3         100. DE Endbell Fit Insulated         101. DE Endbell Air Seal Fit Size         102. Initial Endbell Air Seal Fit Size         103. Finial Endbell Fit Size 1         104. ODE Endbell Fit Size 1         105. ODE Initial Endbell Fit Size 2         106. ODE Initial Endbell Fit Size 3         107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 3         109. ODE Final Endbell Fit Size 3         100. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Size 3         112. ODE Final Endbell Fit Size 3         113. ODE Final Endbell Fit Size 3         114. ODE Endbell Air Seal Fit Size         113. ODE Final Endbell Seal Fit Size         114. ODE Final Endbell Seal Fit Size         115. Foot Flatess         116. Foot Condition         117. Flange Condition         118. Service Technician         Balance Type         120. Balance Operating Speed         121. Start Right End         122. Start Right End         123. Balancing Speeification         124. Finish Left End <th>93.</th> <th>DE Endbell Fit</th>	93.	DE Endbell Fit
96. DE Initial Endbell Fit Size 3         97. DE Final Endbell Fit Size 1         98. DE Finial Endbell Fit Size 2         99. DE Final Endbell Fit Size 3         100. DE Endbell Air Seal Fit Size 1         101. DE Endbell Air Seal Fit Size         102. Initial Endbell Air Seal Fit Size         103. Finial Endbell Air Seal Fit Size         104. ODE Endbell Fit Size 1         105. ODE Initial Endbell Fit Size 1         106. ODE Initial Endbell Fit Size 1         107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 1         109. ODE Final Endbell Fit Size 3         1010. ODE Final Endbell Fit Size 3         102. ODE Final Endbell Fit Size 3         103. ODE Final Endbell Fit Size 3         114. ODE Endbell Air Seal Fit         113. ODE Initial Endbell Seal Fit Size         114. ODE Endbell Air Seal Fit Size         115. Foot Flantendbell Fit Size         114. ODE Endbell Air Seal Fit Size         115. Foot Condition         117. Flange Condition         118. Service Technician         Balance Type         120. Balance Type         121. Start Right End         122. Start Right End         123. Balancing Speeif         124. Finish Left End         125. Finish Right End </th <th>94.</th> <th>DE Initial Endbell Fit Size 1</th>	94.	DE Initial Endbell Fit Size 1
97. DE Final Endbell Fit Size 1         98. DE Final Endbell Fit Size 3         99. DE Final Endbell Fit Size 3         100. DE Endbell fit Insulated         101. DE Endbell Air Seal Fit         102. Initial Endbell Air Seal Fit Size         103. ODE Indell Fit Neulated         104. ODE Indell Fit Size 1         105. ODE Initial Endbell Fit Size 1         106. ODE Initial Endbell Fit Size 3         107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 3         109. ODE Final Endbell Fit Size 3         110. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Nulated         112. ODE Endbell Fit Nulated         113. ODE Endbell Fit Size 3         114. ODE Finial Endbell Seal Fit Size         115. Foot Flatness         116. Foot Condition         117. Flange Condition         118. Service Technician         Balance Type         120. Balance Operating Speed         121. Start Right End         122. Start Right End         123. Service Technician		
98. DE Final Endbell Fit Size 2         99. DE Final Endbell Fit Issulated         101. DE Endbell Air Seal Fit Size         102. Initial Endbell Air Seal Fit Size         103. Finial Endbell Air Seal Fit Size         104. ODE Endbell Fit         105. ODE Initial Endbell Fit Size 1         106. ODE Initial Endbell Fit Size 2         107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 3         109. ODE Final Endbell Fit Size 3         109. ODE Final Endbell Fit Size 3         110. ODE Final Endbell Fit Size 3         110. ODE Final Endbell Fit Size 3         110. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Issulated         112. ODE Endbell Air Seal Fit         113. ODE Initial Endbell Seal Fit Size         114. ODE Final Endbell Seal Fit Size         115. Foot Condition         116. Foot Condition         117. Flange Condition         118. Service Technician         Balancing Report         119. Balance Type         120. Balance Operating Speed         121. Start Left End         122. Start Right End         123. Balancing Specification         124. Finish Left End         125. Finish Right End         126. Service Technician	96.	DE Initial Endbell Fit Size 3
99. DE Final Endbell Fit Isize 3         100. DE Endbell Air Seal Fit         101. DE Endbell Air Seal Fit Size         102. Initial Endbell Air Seal Fit Size         103. Finial Endbell Air Seal Fit Size         104. ODE Endbell Fit         105. ODE Initial Endbell Fit Size 1         106. ODE Initial Endbell Fit Size 1         107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 3         109. ODE Final Endbell Fit Size 3         109. ODE Final Endbell Fit Size 3         110. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Size 3         112. ODE Final Endbell Fit Size 3         113. ODE Initial Endbell Fit Size 3         114. ODE Final Endbell Fit Size 3         115. Foot Flatness         116. Foot Condition         117. Flange Condition         118. Service Technician         Balancing Report         119. Balance Type         120. Balance Operating Speed         121. Start Left End         122. Start Right End         123. Balancing Report         124. Finish Left End         125. Finish Right End         126. Service Technician		
100. DE Endbell Fit Insulated         101. DE Endbell Air Seal Fit         102. Initial Endbell Air Seal Fit Size         103. Finial Endbell Air Seal Fit Size         104. ODE Endbell Fit         105. ODE Initial Endbell Fit Size 1         106. ODE Initial Endbell Fit Size 2         107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 3         109. ODE Final Endbell Fit Size 1         109. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Size 3         112. ODE Endbell Fit Size 1         113. ODE Initial Endbell Seal Fit Size         114. ODE Endbell Seal Fit Size         115. Foot Flatness         116. Foot Condition         117. Flange Condition         118. Service Technician         Balancing Report         119. Balance Type         120. Balance Operating Speed         121. Start Left End         122. Start Right End         123. Balancing Specification         124. Finish Left End         125. Finish Right End	98.	DE Finial Endbell Fit Size 2
101. DE Endbell Air Seal Fit         102. Initial Endbell Air Seal Fit Size         103. Finial Endbell Air Seal Fit Size         104. ODE Endbell Fit         105. ODE Initial Endbell Fit Size 1         106. ODE Initial Endbell Fit Size 2         107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 3         109. ODE Final Endbell Fit Size 3         109. ODE Final Endbell Fit Size 3         110. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Size 3         112. ODE Initial Endbell Seal Fit Size         113. Foot Flatness         114. ODE Finale Endbell Seal Fit Size         115. Foot Condition         117. Flange Condition         118. Service Technician         Balancing Report         119. Balance Type         120. Balance Operating Speed         121. Start Left End         122. Start Right End         123. Finish Left End         124. Finish Left End         125. Finish Right End </th <th>99.</th> <th>DE Final Endbell Fit Size 3</th>	99.	DE Final Endbell Fit Size 3
102. Initial Endbell Air Seal Fit Size         103. Finial Endbell Air Seal Fit Size         104. ODE Endbell Fit         105. ODE Initial Endbell Fit Size 1         106. ODE Initial Endbell Fit Size 3         107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 1         109. ODE Final Endbell Fit Size 2         110. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Size 3         111. ODE Endbell Fit Size 3         111. ODE Endbell Fit Insulated         112. ODE Endbell Fit Size 3         113. ODE Initial Endbell Seal Fit         114. ODE Final Endbell Seal Fit Size         115. Foot Flatness         116. Foot Condition         117. Flange Condition         118. Service Technician         Balancing Report         119. Balance Type         120. Balance Operating Speed         121. Start Left End         122. Start Right End         123. Balancing Specification         124. Finish Left End         125. Finish Right End         126. Service Technician	100.	DE Endbell Fit Insulated
103. Finial Endbell Air Seal Fit Size104. ODE Endbell Fit105. ODE Initial Endbell Fit Size 1106. ODE Initial Endbell Fit Size 2107. ODE Initial Endbell Fit Size 3108. ODE Final Endbell Fit Size 1109. ODE Final Endbell Fit Size 3111. ODE Endbell Fit Size 4112. ODE Endbell Seal Fit Size113. ODE Initial Endbell Seal Fit Size114. ODE Final Endbell Seal Fit Size115. Foot Flatness116. Foot Condition117. Flange Condition118. Service TechnicianBalancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	101.	DE Endbell Air Seal Fit
104. ODE Endbell Fit         105. ODE Initial Endbell Fit Size 1         106. ODE Initial Endbell Fit Size 2         107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 2         110. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Isize 4         112. ODE Endbell Fit Isize 5         113. ODE Initial Endbell Seal Fit         114. ODE Final Endbell Seal Fit Size         115. Foot Flatness         116. Foot Condition         117. Flange Condition         118. Service Technician         Balancing Report         119. Balance Type         120. Balance Operating Speed         121. Start Left End         122. Start Right End         123. Balancing Specification         124. Finish Left End         125. Finish Right End         126. Service Technician	102.	Initial Endbell Air Seal Fit Size
105. ODE Initial Endbell Fit Size 1106. ODE Initial Endbell Fit Size 2107. ODE Initial Endbell Fit Size 3108. ODE Final Endbell Fit Size 1109. ODE Final Endbell Fit Size 2110. ODE Final Endbell Fit Size 3111. ODE Endbell Fit Insulated112. ODE Endbell Size Size 3113. ODE Initial Endbell Seal Fit Size114. ODE Final Endbell Seal Fit Size115. Foot Flatness116. Foot Condition117. Flange Condition118. Service TechnicianBalancing Report120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	103.	Finial Endbell Air Seal Fit Size
106. ODE Initial Endbell Fit Size 2         107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 1         109. ODE Final Endbell Fit Size 2         110. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Insulated         112. ODE Endbell Fit Issuated         113. ODE Initial Endbell Seal Fit Size         114. ODE Finial Endbell Seal Fit Size         115. Foot Flatness         116. Foot Condition         117. Flange Condition         118. Service Technician         Balancing Report         119. Balance Operating Speed         121. Start Left End         122. Start Right End         123. Balancing Specification         124. Finish Left End         125. Finish Right End         126. Service Technician	104.	ODE Endbell Fit
107. ODE Initial Endbell Fit Size 3         108. ODE Final Endbell Fit Size 1         109. ODE Final Endbell Fit Size 2         110. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Insulated         112. ODE Endbell Air Seal Fit         113. ODE Initial Endbell Seal Fit Size         114. ODE Finial Endbell Seal Fit Size         115. Foot Flatness         116. Foot Condition         117. Flange Condition         118. Service Technician         Balanceing Report         120. Balance Operating Speed         121. Start Left End         122. Start Right End         123. Balancing Report         124. Finish Left End         125. Finish Right End         126. Service Technician	105.	ODE Initial Endbell Fit Size 1
108. ODE Final Endbell Fit Size 1         109. ODE Final Endbell Fit Size 2         110. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Insulated         112. ODE Endbell Air Seal Fit         113. ODE Initial Endbell Seal Fit Size         114. ODE Finial Endbell Seal Fit Size         115. Foot Flatness         116. Foot Condition         117. Flange Condition         118. Service Technician         Balancing Report         120. Balance Operating Speed         121. Start Left End         122. Start Right End         123. Balancing Specification         124. Finish Left End         125. Finish Right End         126. Service Technician	106.	ODE Initial Endbell Fit Size 2
109. ODE Final Endbell Fit Size 2         110. ODE Final Endbell Fit Size 3         111. ODE Endbell Fit Insulated         112. ODE Endbell Air Seal Fit         113. ODE Initial Endbell Seal Fit Size         114. ODE Finial Endbell Seal Fit Size         115. Foot Flatness         116. Foot Condition         117. Flange Condition         118. Service Technician         Balancing Report         120. Balance Type         121. Start Left End         122. Start Right End         123. Balancing Specification         124. Finish Left End         125. Finish Right End         126. Service Technician	107.	ODE Initial Endbell Fit Size 3
110. ODE Final Endbell Fit Size 3111. ODE Endbell Fit Insulated112. ODE Endbell Air Seal Fit113. ODE Initial Endbell Seal Fit Size114. ODE Finial Endbell Seal Fit Size115. Foot Flatness116. Foot Condition117. Flange Condition118. Service TechnicianBalancing Report120. Balance Type121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	108.	ODE Final Endbell Fit Size 1
111. ODE Endbell Fit Insulated112. ODE Endbell Air Seal Fit113. ODE Initial Endbell Seal Fit Size114. ODE Finial Endbell Seal Fit Size115. Foot Flatness116. Foot Condition117. Flange Condition118. Service TechnicianBalancing Report120. Balance Type121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	109.	ODE Final Endbell Fit Size 2
112. ODE Endbell Air Seal Fit113. ODE Initial Endbell Seal Fit Size114. ODE Finial Endbell Seal Fit Size115. Foot Flatness116. Foot Condition117. Flange Condition118. Service TechnicianBalancing Report120. Balance Type121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	110.	ODE Final Endbell Fit Size 3
113. ODE Initial Endbell Seal Fit Size114. ODE Finial Endbell Seal Fit Size115. Foot Flatness116. Foot Condition117. Flange Condition118. Service TechnicianBalancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	111.	ODE Endbell Fit Insulated
114. ODE Finial Endbell Seal Fit Size115. Foot Flatness116. Foot Condition117. Flange Condition118. Service TechnicianBalancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	112.	ODE Endbell Air Seal Fit
115. Foot Flatness116. Foot Condition117. Flange Condition118. Service TechnicianBalancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	113.	ODE Initial Endbell Seal Fit Size
116. Foot Condition117. Flange Condition118. Service TechnicianBalancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	114.	ODE Finial Endbell Seal Fit Size
117. Flange Condition118. Service TechnicianBalancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	115.	Foot Flatness
118. Service TechnicianBalancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	116.	Foot Condition
Balancing Report119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	117.	Flange Condition
119. Balance Type120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	118.	Service Technician
120. Balance Operating Speed121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	Balan	cing Report
121. Start Left End122. Start Right End123. Balancing Specification124. Finish Left End125. Finish Right End126. Service Technician	119.	Balance Type
122. Start Right End         123. Balancing Specification         124. Finish Left End         125. Finish Right End         126. Service Technician	120.	Balance Operating Speed
123. Balancing Specification         124. Finish Left End         125. Finish Right End         126. Service Technician	121.	Start Left End
124. Finish Left End         125. Finish Right End         126. Service Technician	122.	Start Right End
125. Finish Right End     126. Service Technician	123.	Balancing Specification
126. Service Technician	124.	Finish Left End
	125.	Finish Right End
Assembly and Final Test	126.	Service Technician
Assembly and that test	Assen	nbly and Final Test

#### 127. Meggar Testing Reading



128. Surge Test	(P) Pass
129. Hi-Pot	
130. Winding Resistance 1-2	
131. Winding Resistance 2-3	
132. Winding Resistance 1-3	
133. Test Run Voltage Phase A	455 Volts



134. Test Run Amps A	1.7 Amps
135. Test Run Voltage Phase B	454 Volts



136. Test Run Amps B

1.8 Amps

#### 137. Test Run Voltage Phase C



138. Test Run Amps C	1.7 Amps
139. DE Horizontal Vibration Reading	
140. DE Vertical Vibration Reading	
141. DE Axial Vibration Reading	
142. ODE Horizontal Vibration Reading	
143. ODE Vertical Vibration Reading	
144. ODE Axial Vibration Reading	
145. Ambient Temp at start of Test Run	
146. Temp at 5 minutes	
147. Temp at 10 minutes	
148. Temp at 15 minutes	
149. Temp at 20 minutes	
150. Temp at 25 minutes	
151. Temp at 30 minutes	
152. Temp at 35 minutes	
153. Temp at 40 minutes	
154. Temp at 45 minutes	
155. Temp at 50 minutes	
156. Temp at 55 minutes	
157. Temp at 60 minutes	
158. Motor Paint	(P) Pass





Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Printed on 2/25/2022



159. Service Technician RW



#### STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. <u>APPLICABILITY.</u> The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. <u>SCOPE OF GOODS AND/OR SERVICES.</u> The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only be effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. DELIVERY OF GOODS AND/OR SERVICES. Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- 6. DELIVERY SITE AND TIME FOR PERFORMANCE. Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

**TermsAndConditions** 

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. LIMITATION OF DAMAGES. HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY</u>. The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. <u>GOVERNING LAW AND JURISDICTION.</u> Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER</u>. No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. <u>ASSIGNMENT.</u> The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. <u>NO INDIVIDUAL LIABILITY</u>. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.