

EVERY DAY SINCE 1946

Motor Shop Repairs

Job Number 98926

Prepared for MORRILTON PACKING CO,

51 BLUE DIAMOND DRIVE MORRILTON AR 72110

Table of Contents

DC Recondition Repair Report



Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

Crown

FolderID: 98926 FormID: 11897391

DC Recondition Repair Report

MORRILTON PACKING CO, 51 BLUE DIAMOND DRIVE

51 BLUE DIAMOND DRIVE MORRILTON, AR 72110

Priorities Found: **1 - Good**

General		
1. Job Number	98926	
2. Report Date	10/26/2021	
3. Customer	Petit Jean Meats	
Name Plate Information		

4. Manufacturer



























5.	Model	020094-001
6.	Serial Number	70754
7.	Horsepower	
8.	KW	3.7
9.	Armature Volts	36
10.	Armature Amps	
11.	Field Voltage	
12.	Field Amps	
13.	RPM	
14.	Frame	
15.	Enclosure	
16.	Service Factor	
17.	Motor Mount Position	
Initial	Inspection	
18.	Lead Length	
19.	Lead Size	
20.	Lead Condition	
21.	Lead Markings	
22.	Lug Size, Condition, and Type	
23.	Winding RTD's	
24.	Winding Rtd's Condition	
25.	Shaft Run Out	

26.	Does Shaft Turn Freely		
	Does Shaft Have Visible Damage		
	Bearing Rtd's		
	Bearing Rtd's Condition		
30.	Contamination		
	Frame Condition		
	Fan Condition		
	Brush Condition		
	Quantity of brushes		
	Brush Holder Assembly Condition		
	Broken or missing components		
	Electric Test		
	Armature Resistance to Ground		
38.	Field Resistance to Ground		
39.	Armature Hi-Pot		
40.	Field Hi-Pot		
	Armature Bar to Bar Test		
42.	DC field frame Drop Test		
43.	DC Field Frame Polarity Check		
44.	Field Frame Condition		
45.	Field Frame Failure Location		
Initial	Armature Inspection		
	Air Gap <10% Variation		
47.	Number of Commutator Bars		
48.	Growler Test		
49.	Commutator Condition		
50.	Armature Condition		
51.	Armature Failure Location		
Mecha	anical Inspection		
52.	Bearing Manufacture		
53.	Bearing DE Size		
54.	Bearing DE Type		
55.	Bearing ODE Size		
56.	Bearing ODE Type		
57.	•		
58.	Lubrication Type		
	Grease Condition		
	Bearing Retainers		
61.			
	DE Seal		
	DE Seal Type/Size		
	ODE Seal		
	ODE Seal Type/Size		
	Root Cause of Failure		
	Component Failure		
67.			
68.	Comments		

Machine Fit Inspection Report 70. Shart Run Out 71. Initial Shart Run Out 72. Final Shart Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shart Bearing Fit 1 75. DE Final Shaft Bearing Fit 1 76. DE Initial Shaft Bearing Fit 2 77. DE Final Shaft Bearing Fit 2 77. DE Final Shaft Bearing Fit 3 77. DE Final Shaft Bearing Fit 3 78. DE Initial Shaft Bearing Fit 3 79. DE Final Shaft Bearing Fit 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 1 83. ODE Initial Shaft Bearing Fit 1 84. ODE Finial Shaft Bearing Fit 3 85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Arise Shaft Fit 88. DE Final Shaft Staring Fit 3 89. DE Final Shaft Staring Fit 3 80. ODE Final Shaft Staring Fit 3 81. ODE Final Shaft Staring Fit 3 82. ODE Final Shaft Staring Fit 3 83. ODE Final Shaft Staring Fit 3 84. DE Final Shaft Staring Fit 3 85. ODE Final Shaft Staring Fit 3 86. ODE Final Shaft Staring Fit 3 <t< th=""><th>69.</th><th>Service Technician</th></t<>	69.	Service Technician				
70. Shaft Run Out 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Basing Shaft Fit 74. DE Initial Shaft Baaring Fit 1 75. DE Finial Shaft Baaring Fit 2 77. DE Finial Shaft Baaring Fit 2 77. DE Finial Shaft Baaring Fit 3 78. DE Finial Shaft Bearing Fit 3 79. DE Finial Shaft Bearing Fit 1 80. ODE Baaring Shaft Fit 81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 1 83. ODE Finial Shaft Bearing Fit 1 84. ODE Finial Shaft Bearing Fit 2 85. ODE Finial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Size 98. DE Finial Shaft Bearing Fit 3 89. DE Finial Shaft Bearing Fit 3 80. ODE Initial Shaft Bearing Fit 3 81. DE Initial Shaft Bearing Fit 3 82. DE Initial Shaft Bearing Fit 3 83. DE Initial Shaft Bearing Fit 3 84. DE Initial Shaft Size 3	Machi	ne Fit Inspection Report				
72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit 1 75. DE Finial Shaft Bearing Fit 2 77. DE Finial Shaft Bearing Fit 2 77. DE Finial Shaft Bearing Fit 3 78. DE Finial Shaft Bearing Fit 3 79. DE Finial Shaft Bearing Fit 3 70. DE Finial Shaft Bearing Fit 1 81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 1 83. ODE Initial Shaft Bearing Fit 1 84. ODE Finial Shaft Bearing Fit 2 85. ODE Finial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Ar Seal Shaft Fit 88. DE Finial Shaft Bearing Fit 3 89. DE Finial Shaft Bearing Fit 3 80. ODE Initial Shaft Bearing Fit 3 80. ODE Initial Shaft Bearing Fit 3 80. ODE Initial Shaft Bearing Fit 3 80. ODE Finial Shaft Bearing Fit 3 80. ODE Finial Shaft Size 80. ODE Ar Seal Shaft Fit 81. ODE Initial Air Seal Shaft Size 82. ODE Initial Air Seal Shaft Size 83. DE Endeal Fit Size 1 94. DE Endeal Fit Size 1 95. DE Final Endbel Fit Size 3 96. DE Initial Endbel Fit Size 3 97. DE Finial Endbel						
73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit 1 75. DE Finial Shaft Bearing Fit 2 77. DE Finial Shaft Bearing Fit 3 77. DE Finial Shaft Bearing Fit 3 78. DE Initial Shaft Bearing Fit 3 79. DE Finial Shaft Bearing Fit 3 70. DE Finial Shaft Bearing Fit 1 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit 1 82. ODE Initial Shaft Bearing Fit 1 83. ODE Initial Shaft Bearing Fit 2 84. ODE Finial Shaft Bearing Fit 3 85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Finial Shaft Bearing Fit 3 88. DE Finial Shaft Bearing Fit 3 89. DE Finial Shaft Bearing Fit 3 89. DE Finial Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Finial Air Seal Shaft Size 1 94. DE Initial Endbell Fit Size 1 95. DE Finial Endbell Fit Size 2 97. DE Finial Endbell Fit Size 2 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 4 90. DE Endbell Fit Insulated	71.	Initial Shaft Run Out				
74. DE Initial Shaft Bearing Fit 1 75. DE Finial Shaft Bearing Fit 2 77. DE Finial Shaft Bearing Fit 2 78. DE Initial Shaft Bearing Fit 3 90. DE Initial Shaft Bearing Fit 3 90. DE Initial Shaft Bearing Fit 3 90. DE Envisial Shaft Bearing Fit 1 81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 1 83. ODE Initial Shaft Bearing Fit 2 84. ODE Finial Shaft Bearing Fit 2 85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Initial Shaft Bearing Fit 3 88. DE Initial Shaft Bearing Fit 3 89. ODE Initial Shaft Bearing Fit 3 89. DE Finial Shaft Bearing Fit 3 80. ODE Initial Shaft Bearing Fit 3 80. DE Initial Shaft Bearing Fit 3 80. DE Initial Shaft Bearing Fit 3 80. DE Initial Shaft Bea	72.	Final Shaft Run Out				
75. DE Finial Shaft Bearing Fit 1 76. DE Initial Shaft Bearing Fit 2 77. DE Finial Shaft Bearing Fit 3 78. DE Finial Shaft Bearing Fit 3 79. DE Finial Shaft Bearing Fit 1 81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 1 83. ODE Initial Shaft Bearing Fit 1 84. ODE Finial Shaft Bearing Fit 2 85. ODE Initial Shaft Bearing Fit 2 86. ODE Finial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Fit 88. DE Initial Shaft Bearing Fit 3 89. DE Initial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Air Seal Shaft Fit 92. ODE Final Air Seal Shaft Size 93. DE Endbel Fit 94. DE Initial Air Seal Shaft Size 95. DE Final Endbel Fit Size 1 96. DE Initial Endbel Fit Size 1 97. DE Finial Endbel Fit Size 2 98. DE Endbel Fit 99. DE Final Endbel Fit Size 3 90. DE Endbel Air Seal Fit Size 91. DE Endbel Air Seal Fit Size <t< th=""><th>73.</th><th>DE Bearing Shaft Fit</th></t<>	73.	DE Bearing Shaft Fit				
76. DE Initial Shaft Bearing Fit 2 77. DE Finial Shaft Bearing Fit 3 78. DE Initial Shaft Bearing Fit 3 79. DE Finial Shaft Bearing Fit 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 1 83. ODE Initial Shaft Bearing Fit 1 84. ODE Finial Shaft Bearing Fit 2 85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Size 88. DDE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Size 88. DE Finial Air Seal Shaft Size 89. DE Finial Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Endbell Fit 94. DDE Initial Endbell Fit Size 1 95. DE Finial Air Seal Shaft Size 96. DE Initial Endbell Fit Size 1 97. DE Finial Endbell Fit Size 1 98. DE Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 99. DE Endbell Fit Issue 1 91. DE Endbell Air Seal Fit Size 92. DE Endbell Fit Size 3 93. DE Endbell Fit Size 4 <th>74.</th> <th>DE Initial Shaft Bearing Fit 1</th>	74.	DE Initial Shaft Bearing Fit 1				
77. DE Finial Shaft Bearing Fit 2 78. DE Finial Shaft Bearing Fit 3 90. ODE Bearing Shaft Bearing Fit 1 81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 1 83. ODE Initial Shaft Bearing Fit 2 84. ODE Finial Shaft Bearing Fit 2 85. ODE Initial Shaft Bearing Fit 2 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Bearing Fit 3 88. ODE Initial Shaft Bearing Fit 3 89. ODE Initial Shaft Bearing Fit 3 80. ODE Finial Shaft Bearing Fit 3 80. ODE Initial Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Final Shaft Bearing Fit 5ize 1 93. DE Final Endbell Fit Size 1 94. DE Initial Endbell Fit Size 2 97. DE Final Endbell Fit Size 3 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE End	75.	DE Finial Shaft Bearing Fit 1				
78. DE Initial Shaft Bearing Fit 3 79. DE Finial Shaft Bearing Fit 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 2 83. ODE Initial Shaft Bearing Fit 2 84. ODE Finial Shaft Bearing Fit 3 85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Fit 88. DE Initial Xir Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Air Seal Shaft Size 95. DE Finial Endbell Fit Size 1 96. DE Initial Air Seal Shaft Size 97. DE Finial Endbell Fit Size 1 98. DE Initial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 3 910. DE Endbell Fit Insulated 92. IDE Endbell Fit 93. DE Endbell Fit Insulated 94. DE Endbell Air Seal Fit Size 95. DE Finial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Endbell Air Seal Fit Size 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Air S	76.	DE Initial Shaft Bearing Fit 2				
79. DE Finial Shaft Bearing Fit 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 2 83. ODE Initial Shaft Bearing Fit 2 84. ODE Finial Shaft Bearing Fit 2 85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Fit 88. DDE Finial Shaft Bearing Fit 3 89. DE Finial Shaft Bearing Fit 3 80. ODE Finial Shaft Bearing Fit 3 81. ODE Initial Air Seal Shaft Size 92. ODE Air Seal Shaft Fit 93. DE Ernobell Fit 94. DE Initial Air Seal Shaft Size 95. DE Final Endbell Fit Size 1 96. DE Final Endbell Fit Size 1 97. DE Final Endbell Fit Size 2 98. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 2 90. DE Final Endbell Fit Size 3 91. DE Ential Endbell Fit Size 3 92. DE Final Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Initial Endbell Fit Size 3 95. DE Endbell Fit Insulated 96. DE Endbell Fit Insulated 97. DE Endbell Fit Size 3 98. DE Endbell Fit Insulated 99. DE Endbell Fit Insulated	77.	DE Finial Shaft Bearing Fit 2				
80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 2 84. ODE Finial Shaft Bearing Fit 2 85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Fit 88. DE Finial Shaft Bearing Fit 3 89. DE Finial Shaft Bearing Fit 3 80. ODE Finial Shaft Bearing Fit 3 80. ODE Finial Shaft Bearing Fit 3 80. ODE Finial Shaft Bearing Fit 3 81. ODE Finial Shaft Bearing Fit 3 82. ODE Finial Shaft Size 83. DE Finial Shaft Size 94. ODE Initial Air Seal Shaft Fit 95. ODE Final Air Seal Shaft Fit 96. DE Final Air Seal Shaft Fit Size 97. DE Finial Endbell Fit Size 1 98. DE Initial Endbell Fit Size 1 99. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 910. DE Endbell Fit Insulated 911. DE Endbell Fit Insulated 912. Initial Endbell Fit Size 913. DE Endbell Fit Insulated 914. ODE Endbell Fit Insulated 915. ODE Endbell Fit Insulated 916. ODE Endbell Fit Insulated	78.	DE Initial Shaft Bearing Fit 3				
81. ODE Initial Shaft Bearing Fit 1 82. ODE Finial Shaft Bearing Fit 2 83. ODE Initial Shaft Bearing Fit 2 84. ODE Finial Shaft Bearing Fit 3 85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Bearing Fit 3 88. DE Initial Air Seal Shaft Size 89. DE Finial Shaft Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Air Seal Shaft Size 95. DE Finial Air Seal Shaft Size 1 96. DE Initial Endbell Fit Size 1 97. DE Finial Endbell Fit Size 1 98. DE Initial Endbell Fit Size 2 99. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. Initial Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Endbell Fit Size 3 95. DE Finial Endbell Fit Size 3 96. DE Finial Endbell Fit Size 3 97. DE Endbell Fit Size 3 98. DE Endbell Fit Size 4 99. DE Endbell Fit Size 3 910. DE Endbell Fit Size 4						
82. ODE Finial Shaft Bearing Fit 1 83. ODE Initial Shaft Bearing Fit 2 84. ODE Finial Shaft Bearing Fit 3 85. ODE Finial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Fit 88. DDE Finial Shaft Bearing Fit 3 89. DE Finial Shaft Bearing Fit 3 90. ODE Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Fit 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Final Endbell Fit Size 1 96. DE Initial Endbell Fit Size 1 97. DE Final Endbell Fit Size 2 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Einal Endbell Fit Size 3 91. DE Einal Endbell Fit Size 3 92. DE Initial Endbell Fit Size 3 93. DE Einal Endbell Fit Size 3 94. DE Initial Endbell Fit Size 3 95. DE Einal Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Einal Endbell Fit Size 4 98. DE Initial Endbell Fit Size 4 99. DE Final Endbell Fit Size 5 99. DE Final Endbell Fit Size 6 910. DE Endbell Fit Siz						
83. ODE Initial Shaft Bearing Fit 2 84. ODE Finial Shaft Bearing Fit 2 85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Final Air Seal Shaft Size 94. DE Initial Air Seal Shaft Size 95. DE Final Air Seal Shaft Size 96. DDE Initial Air Seal Shaft Size 97. DE Initial Endbell Fit Size 1 96. DE Initial Endbell Fit Size 2 97. DE Final Endbell Fit Size 2 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Airial Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Final Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Initial Endbell Fit Size 3 95. DE Final Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Endbell Fit Insulated 99. DE Final Endbell Fit Size 99. DE Final Endbell Fit Size 99. DE Endbell Air Seal Fit Size 99. DE Endbell Air Seal						
84. ODE Finial Shaft Bearing Fit 2 85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Size 89. DE Initial Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial For Seal Shaft Size 95. ODE Final Air Seal Shaft Size 96. DDE Initial Endbell Fit Size 1 97. DE Final Endbell Fit Size 1 98. DE Initial Endbell Fit Size 1 99. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. Initial Endbell Fit Size 3 93. DE Endbell Fit Insulated 94. DE Endbell Fit Size 3 95. DE Final Endbell Fit Size 3 96. DE Endbell Fit Size 3 97. DE Finial Endbell Fit Size 4 98. DE Initial Endbell Fit Size 3 99. DE Endbell Fit Insulated 90. DE Endbell Fit Size 5 910. DE Endbell Fit Size 6 911. DE Endbell Fit Size 7 912. Initial Endbel Air Seal Fit Size						
85. ODE Initial Shaft Bearing Fit 3 86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Final Air Seal Shaft Size 94. DE Initial Air Seal Shaft Size 95. DE Final Air Seal Shaft Size 96. DE Initial Endbell Fit Size 1 97. DE Final Endbell Fit Size 1 98. DE Final Endbell Fit Size 1 99. DE Final Endbell Fit Size 2 97. DE Final Endbell Fit Size 2 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 1 102. Initial Endbell Fit Size 3 103. Finial Endbell Fit Size 1 104. ODE Endbell Fit Insulated 105. ODE Endbell Fit Insulated 106. ODE Endbell Fit Insulated 107. ODE Initial Endbell Seal Fit Size 108. ODE Endbell Fit Insulated 109. ODE Endbell Fit Insulated 1010. ODE Endbell Fit Insulated 1021. ODE Endbell Fit Insulated 1032. ODE Endbell Fit Insulated 1043. ODE Endbell Fit Si		-				
86. ODE Finial Shaft Bearing Fit 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Air Seal Shaft Size 95. DE Final Air Seal Shaft Size 96. DE Initial Endbell Fit Size 1 97. DE Final Endbell Fit Size 2 97. DE Final Endbell Fit Size 2 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. Initial Endbell Fit Size 3 93. DE Endbell Fit Insulated 104. DE Endbell Air Seal Fit 105. ODE Endbell Fit Size 3 106. DE Endbell Fit Insulated 107. ODE Endbell Fit Insulated 108. ODE Endbell Fit Insulated 109. DE Endbell Fit Insulated 1010. DE Endbell Fit Insulated 1021. Initial Endbell Seal Fit Size 1032. Finial Endbell Seal Fit Size 1043. ODE Endbell Fit Insulated 105. ODE Endbell Fit Insulated 1064. ODE Endbell Fit Insulated 1075. ODE Initial Endbell Seal Fit Size						
87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endel Fit 94. DE Initial Endbell Fit Size 1 95. DE Final Air Seal Shaft Size 96. DE Initial Endbell Fit Size 1 97. DE Final Endbell Fit Size 2 97. DE Final Endbell Fit Size 3 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Fit Size 3 103. Endbell Air Seal Fit Size 104. ODE Endbell Fit Insulated 105. ODE Endbell Fit Insulated 106. ODE Endbell Fit Insulated 107. ODE Initial Endbell Seal Fit Size 108. ODE Endbell Fit Insulated 109. ODE Endbell Fit Insulated 101. ODE Endbell Fit Insulated 102. ODE Endbell Fit Insulated 103. ODE Endbell Fit Insulated 104. ODE Endbell Fit Insulated 105. ODE Endbell Seal Fit Size 107. ODE Initial Endbell Seal Fit Size 108. ODE Final Endbell Seal Fit Size 109. Foot Condition						
88. DE Initial Air Seal Shaft Size 90. DDE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Initial Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Final Endbell Fit Size 1 96. DE Initial Endbell Fit Size 2 97. DE Final Endbell Fit Size 2 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Fit Insulated 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit Size 102. Initial Endbell Fit Size 3 103. Eindbell Fit Insulated 104. ODE Endbell Fit Insulated 105. ODE Endbell Fit Insulated 106. ODE Endbell Fit Insulated 107. ODE Initial Endbell Size 108. ODE Endbell Fit Insulated 109. Finial Endbell Fit Insulated 101. ODE Endbell Fit Insulated 102. Initial Endbell Fit Insulated 103. ODE Endbell Fit Insulated 104. ODE Endbell Fit Insulated 105. ODE Endbell Fit Insulated 106. ODE Endbell Size 107. ODE Initial Endbell Seal Fit Size 108. ODE Final Endbell Seal Fit Size 109. Foot Finates						
89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Final Endbell Fit Size 1 96. DE Initial Endbell Fit Size 2 97. DE Final Endbell Fit Size 2 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Air Seal Fit 100. DE Endbell Air Seal Fit 101. DE Endbell Air Seal Fit Size 102. Initial Endbell Fit Size 3 103. Finial Endbell Fit Size 104. ODE Endbell Air Seal Fit Size 105. ODE Endbell Air Seal Fit Size 104. ODE Endbell Fit Insulated 105. ODE Endbell Fit Size 106. ODE Endbell Fit Size 107. ODE Initial Endbell Seal Fit Size 108. ODE Final Endbell Seal Fit Size 109. Foot Condition 111. Flange Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician	-					
90. ODE Air Seal Shaft Fit91. ODE Initial Air Seal Shaft Size92. ODE Final Air Seal Shaft Size93. DE Endbell Fit94. DE Initial Endbell Fit Size 195. DE Final Endbell Fit Size 297. DE Finial Endbell Fit Size 398. DE Initial Endbell Fit Size 399. DE Final Endbell Fit Size 3100. DE Endbell Fit Size 3101. DE Endbell Fit Insulated102. Initial Endbell Fit Size103. Finial Endbell Fit Size104. ODE Endbell Fit105. ODE Endbell Fit106. ODE Endbell Fit107. ODE Initial Endbell Fit Size108. ODE Endbell Fit109. Foot Flandel Fit101. DE Endbell Fit102. Initial Endbell Fit Size103. Finial Endbell Fit104. ODE Endbell Fit105. ODE Endbell Fit106. ODE Endbell Fit107. ODE Initial Endbell Seal Fit108. ODE Finial Endbell Seal Fit Size109. Foot Flatness110. Foot Condition111. Flange Condition112. Turn and Under Cut Armature113. Service Technician						
91. ODE Initial Air Seal Shaft Size92. ODE Final Air Seal Shaft Size93. DE Endbell Fit94. DE Initial Endbell Fit Size 195. DE Final Endbell Fit Size 196. DE Initial Endbell Fit Size 297. DE Finial Endbell Fit Size 398. DE Initial Endbell Fit Size 399. DE Final Endbell Fit Size 3100. DE Endbell Air Seal Fit101. DE Endbell Air Seal Fit102. Initial Endbell Fit Size103. Finial Endbell Fit Size104. ODE Endbell Air Seal Fit Size105. ODE Endbell Fit106. ODE Endbell Fit107. ODE Initial Endbell Seal Fit Size108. ODE Endbell Fit Insulated109. Foot Flandell Air Seal Fit Size101. ODE Endbell Fit102. Initial Endbell Fit Size103. Finial Endbell Fit104. ODE Endbell Fit105. ODE Endbell Fit106. ODE Endbell Fit107. ODE Initial Endbell Seal Fit Size108. ODE Finial Endbell Seal Fit Size109. Foot Flatness110. Foot Condition111. Flange Condition112. Turn and Under Cut Armature113. Service Technician						
92. ODE Final Air Seal Shaft Size93. DE Endbell Fit94. DE Initial Endbell Fit Size 195. DE Final Endbell Fit Size 196. DE Initial Endbell Fit Size 297. DE Finial Endbell Fit Size 398. DE Initial Endbell Fit Size 399. DE Final Endbell Fit Size 3100. DE Endbell Fit Size 3101. DE Endbell Air Seal Fit102. Initial Endbell Fit Size103. Finial Endbell Fit Size104. ODE Endbell Air Seal Fit Size105. ODE Endbell Fit Insulated106. ODE Endbell Fit Insulated107. ODE Initial Endbell Fit Size108. ODE Endbell Fit Size109. Foot Flatness110. Foot Condition111. Flange Condition112. Turn and Under Cut Armature113. Service Technician						
 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Final Endbell Fit Size 1 96. DE Initial Endbell Fit Size 2 97. DE Finial Endbell Fit Size 3 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Fit Size 103. Finial Endbell Fit Size 104. ODE Endbell Fit 105. ODE Endbell Fit Insulated 106. ODE Endbell Fit Insulated 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician 						
95. DE Final Endbell Fit Size 196. DE Initial Endbell Fit Size 297. DE Finial Endbell Fit Size 298. DE Initial Endbell Fit Size 399. DE Final Endbell Fit Size 3100. DE Endbell Fit Insulated101. DE Endbell Air Seal Fit102. Initial Endbell Air Seal Fit Size103. Finial Endbell Fit Insulated104. ODE Endbell Fit Insulated105. ODE Endbell Fit Insulated106. ODE Endbell Fit Insulated107. ODE Initial Endbell Seal Fit Size108. ODE Finial Endbell Seal Fit Size109. Foot Flatness1101. Foot Condition111. Flange Condition112. Turn and Under Cut Armature113. Service Technician	93.	DE Endbell Fit				
96. DE Initial Endbell Fit Size 297. DE Finial Endbell Fit Size 398. DE Initial Endbell Fit Size 399. DE Final Endbell Fit Size 3100. DE Endbell Fit Insulated101. DE Endbell Air Seal Fit102. Initial Endbell Air Seal Fit Size103. Finial Endbell Fit Size104. ODE Endbell Fit105. ODE Endbell Fit Insulated106. ODE Endbell Fit Insulated107. ODE Initial Endbell Seal Fit Size108. ODE Endbell Fit Size109. Foot Flatness110. Foot Condition111. Flange Condition112. Turn and Under Cut Armature113. Service Technician	94.	DE Initial Endbell Fit Size 1				
 97. DE Finial Endbell Fit Size 2 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Fit Insulated 104. ODE Endbell Fit 105. ODE Endbell Fit 106. ODE Endbell Fit Size 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician 	95.	DE Final Endbell Fit Size 1				
 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit 105. ODE Endbell Fit Insulated 106. ODE Endbell Fit Insulated 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician 	96.	DE Initial Endbell Fit Size 2				
 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit 105. ODE Endbell Fit 106. ODE Endbell Air Seal Fit 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician 	97.	DE Finial Endbell Fit Size 2				
 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit 105. ODE Endbell Fit Insulated 106. ODE Endbell Air Seal Fit 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician 	98.	DE Initial Endbell Fit Size 3				
 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit 105. ODE Endbell Fit Insulated 106. ODE Endbell Air Seal Fit 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician 	99.	DE Final Endbell Fit Size 3				
 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit 105. ODE Endbell Fit Insulated 106. ODE Endbell Air Seal Fit 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician 	100.	DE Endbell Fit Insulated				
 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit 105. ODE Endbell Fit Insulated 106. ODE Endbell Air Seal Fit 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician 						
104. ODE Endbell Fit 105. ODE Endbell Fit Insulated 106. ODE Endbell Air Seal Fit 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician						
105. ODE Endbell Fit Insulated 106. ODE Endbell Air Seal Fit 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician						
 106. ODE Endbell Air Seal Fit 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician 	-					
 107. ODE Initial Endbell Seal Fit Size 108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician 						
108. ODE Finial Endbell Seal Fit Size 109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician						
109. Foot Flatness 110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician						
110. Foot Condition 111. Flange Condition 112. Turn and Under Cut Armature 113. Service Technician						
111. Flange Condition112. Turn and Under Cut Armature113. Service Technician						
112. Turn and Under Cut Armature113. Service Technician						
113. Service Technician						
Balancing Report						
	Balan	cing Report				

114	Balance Type
	Balance Operating Speed
	Start Left End
	Start Right End
	Balancing Specification
	Finish Left End
	Finish Right End
	Service Technician
	Ibly and Final Test
	Armature Meggar Testing Reading Armature Hi-Pot
-	
	Field Frame Meggar Testing Reading
	Field Frame Hi-Pot
	Test Run Field Voltage
	Test Run Field Amps
	Test Run Armature Voltage
	Test Run Armature Amps
	Brushes seated
	DE Horizontal Vibration Reading
	DE Vertical Vibration Reading
	DE Axial Vibration Reading
	ODE Horizontal Vibration Reading
	ODE Vertical Vibration Reading
	ODE Axial Vibration Reading
	Ambient Temp at start of Test Run
	Temp at 5 minutes
	Temp at 10 minutes
	Temp at 15 minutes
	Temp at 20 minutes
	Temp at 25 minutes
	Temp at 30 minutes
	Temp at 35 minutes
	Temp at 40 minutes
146.	Temp at 45 minutes
147.	Temp at 50 minutes
148.	Temp at 55 minutes
149.	Temp at 60 minutes

RW



151. Service Technician



STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. <u>APPLICABILITY.</u> The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. <u>SCOPE OF GOODS AND/OR SERVICES.</u> The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only be effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. DELIVERY OF GOODS AND/OR SERVICES. Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- 6. DELIVERY SITE AND TIME FOR PERFORMANCE. Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

TermsAndConditions

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. LIMITATION OF DAMAGES. HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY</u>. The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. <u>GOVERNING LAW AND JURISDICTION.</u> Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER</u>. No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. <u>ASSIGNMENT.</u> The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. <u>NO INDIVIDUAL LIABILITY</u>. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.