

# Motor Shop Repairs

# **Job Number 98288**

Prepared for SAGE

5901 SLOAN DRIVE LITTLE ROCK AR 72206

## **Table of Contents**



Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Printed on 7/26/2021 Powered by INSPECTALL Table of Contents



Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

> FolderID: 98288 FormID: 10770292

## **AC Recondition Repair Report**

SAGE

5901 SLOAN DRIVE LITTLE ROCK, AR 72206

Priorities Found: 3 - High

7 - Good

		•	
General			
1. Jo	b Number		98288
2. R	eport Date		6/1/2021
3 C	ustomer		SAGE FOODS

#### **Name Plate Information**

Manufacturer **BALDOR** 

















5.	Model	
6.	Serial Number	C1511130032
7.	Horsepower	20
8.	KW	
9.	Volts	460
10.	Amps	30
11.	RPM	1770
12.	Frame	284T
13.	Enclosure	TEAO
14.	Cycles	60

15.	Phase	3
16.	Service Factor	1.15
17.	Motor Mount Position	
Initial	Initial Inspection	
18.	Number of Leads	9



AND SHAP	The state of the s	
19.	Lead Length	11 Inches
20.	Lead Size	
21.	Lead Condition	(P) Pass
22.	Lead Markings	1-9
23.	Lug Size, Condition, and Type	
24.	Winding RTD's	
25.	Winding Rtd's Condition	
26.	Shaft Run Out	0.002
27.	Does Shaft Turn Freely	
28.	Does Shaft Have Visible Damage	no
29.	Bearing Rtd's	
30.	Bearing Rtd's Condition	
31.	Contamination	
	Rust from excessive water	
32.	Frame Condition	(P) Pass



33. Fan Condition (NA) Not Applicable

34. Broken or missing components



Initial	Initial Electric Test				
35.	Resistance to Ground				
36.	Winding Resistance 1-2				
37.	Winding Resistance 2-3				
38.	Winding Resistance 1-3				
39.	Resistive Imbalance				
40.	Hi-Pot				
<b>41</b> .	Surge Test	(NA) Not Applicable			
42.	Stator Condition	pass			
43.	Failure Location				

### **Initial Rotor Inspection**

44. Rotor Type squirrel cage laminate



- 45. Air Gap <10% Variation</li>46. Number of Rotor Bars
- 47. Number of Broken Rotor Bars
- 48. Growler Test

49. Rotor Condition
(P) Pass

### **Mechanical Inspection**

50. Bearing Manufacture RSR

51. Bearing DE Size 6311



52. Bearing DE Type	sealed
53. DE Bearing Qty.	1
54. Bearing ODE Size	6309



	55.	Bearing ODE Type	sealed
	56.	ODE Bearing Qty.	1
	57.	Insulated Bearing	no
	58.	Lubrication Type	
	59.	Grease Condition	(F) Fail
	-	No grease present. Sealed bearings.	
	60.	Bearing Retainers	(Y) Yes
	61.	Shaft Grounding Device	(NA) Not Applicable
	62.	DE Seal	(N) No
	-	End pro seal broken. Needs replacing.	
	63.	DE Seal Type/Size	
	64.	ODE Seal	
	65.	ODE Seal Type/Size	
R	oot	Cause of Failure	
	66.	Component Failure	Drive end housing severely cracked.

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Rotor impacted and dragged on stator iron because the drive end housing was cracked in multiple places.

#### 68. Comments

Re-sleeve ode end bell housing fit: Lip worn in sleeve. Rewind stator. Replace D.E. housing and end pro seal. Rewind stator with minor core repair.

69. Service Technician Terrence. Holland

Tenence Holland

70. Shaft Run Out 71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 2 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 1 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 3 82. ODE Finial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Finial Shaft Bearing Fit Size 2 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Bearing Fit Size 2 88. DE Air Seal Shaft Fit 89. DE Air Seal Shaft Fit 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Finial Air Seal Shaft Size 94. DE Finial Air Seal Shaft Size 95. DE Initial Air Seal Shaft Size 96. DE Finial Air Seal Shaft Size 97. DE Initial Endbell Fit Size 1 98. DE Initial Endbell Fit Size 2 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 3 91. DE Finial Endbell Fit Size 2 92. DE Finial Endbell Fit Size 3 93. DE Finial Endbell Fit Size 3 94. DE Finial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 3 91. DE Finial Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3 93. DE Finial Endbell Fit Size 3 94. DE Finial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 4 99. DE Finial Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 4 91. DE Endbell Fit Size 5 92. DE Finial Endbell Fit Size 5 93. DE Endbell Fit Size 6 94. DE Endbell Fit Size 6 95. DE Initial Endbell Fit Size 7 96. DE Initial Endb	Machi	ne Fit Inspection Report
71. Initial Shaft Run Out 72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 3 80. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 3 82. ODE Initial Shaft Bearing Fit Size 1 83. ODE Initial Shaft Bearing Fit Size 1 84. ODE Initial Shaft Bearing Fit Size 2 85. ODE Initial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Finial Shaft Bearing Fit Size 2 88. ODE Finial Shaft Bearing Fit Size 2 89. DE Finial Shaft Bearing Fit Size 3 80. DE Bear Shaft Fit Size 3 80. DE DE Finial Shaft Size Shaft Size 9 80. ODE Air Seal Shaft Fit Size 3 80. DE Finial Shaft Bearing Fit Size 3 81. DE Air Seal Shaft Size 9 82. ODE Finial Shaft Size Shaft Size 9 83. DE Finial Air Seal Shaft Size 9 84. DE Finial Air Seal Shaft Size 9 85. DE Finial Air Seal Shaft Size 9 86. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 1 88. DE Initial Endbell Fit Size 1 89. DE Finial Air Seal Shaft Size 9 90. DE Final Air Seal Shaft Size 9 91. DE Initial Endbell Fit Size 1 92. ODE Final Air Seal Shaft Size 9 93. DE Final Endbell Fit Size 1 94. DE Initial Endbell Fit Size 2 95. DE Finial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 91. DE Final Endbell Fit Size 3 92. DE Final Endbell Fit Size 1 93. DE Final Endbell Fit Size 3 94. DE Finial Endbell Fit Size 3 95. DE Final Endbell Fit Size 3 96. DE Initial Endbell Fit Size 1 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 91. DE Final Endbell Fit Size 3 92. DE Final Endbell Fit Size 3 93. DE Final Endbell Fit Size 3		
72. Final Shaft Run Out 73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 1 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 3 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Initial Shaft Bearing Fit Size 2 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. ODE Shaft Searing Fit Size 3 88. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Final Air Seal Shaft Size 94. DE Initial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Initial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 91. DE Initial Endbell Fit Size 3 92. DE Final Endbell Fit Size 3 93. DE Endbell Fit Insulated 101. DE Endbell Fit Insulated 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Fit Size 3 104. ODE Endbell Fit ODE Initial Endbell Fit Size 3 105. DE Endbell Fit ODE Initial Endbell Fit Size 3 106. ODE DE D		
73. DE Bearing Shaft Fit 74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 99. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 3 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Initial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 3 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Shaft Bearing Fit Size 2 89. ODE Finial Shaft Bearing Fit Size 3 89. DE Finial Air Seal Shaft Size 89. DE Finial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Initial Fit Size 1 94. DE Initial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Finial Fit Size 1 98. DE Finial Fit Size 1 99. DE Finial Fit Size 1 99. DE Finial Endbell Fit Size 2 90. DE Initial Endbell Fit Size 3 91. DE Finial Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3 93. DE Finial Endbell Fit Size 1 94. DE Initial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 3 91. DE Finial Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3 93. DE Finial Endbell Fit Size 3 94. DE Endbell Fit Size 3 95. DE Finial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Endbell Fit Size 3 95. DE Endbell Fit Size 3 96. DE Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3		
74. DE Initial Shaft Bearing Fit Size 1 75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Finial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Finial Shaft Bearing Fit Size 3 88. DE Air Seal Shaft Fit 89. DE Finial Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Endbell Fit Size 1 94. DE Initial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Finial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Finial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Finial Endbell Fit Size 3		
75. DE Initial Shaft Bearing Fit Size 2 76. DE Initial Shaft Bearing Fit Size 1 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 1 83. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Finial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Air Seal Shaft Bearing Fit Size 2 88. ODE Finial Shaft Bearing Fit Size 2 89. DE Finial Shaft Bearing Fit Size 3 80. DE Air Seal Shaft Size 81. DE Initial Air Seal Shaft Size 82. ODE Initial Air Seal Shaft Size 83. DE Finial Air Seal Shaft Size 84. DE Initial Air Seal Shaft Size 85. DE Initial Air Seal Shaft Size 86. DE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Endbell Fit Size 1 89. DE Finial Air Seal Shaft Size 90. DE Air Seal Shaft Size 91. DE Initial Endbell Fit Size 1 92. DE Finial Endbell Fit Size 2 93. DE Endbell Fit Size 3 94. DE Initial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3		
76. DE Initial Shaft Bearing Fit Size 3 77. DE Finial Shaft Bearing Fit Size 1 78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 1 83. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Air Seal Shaft Size 3 88. DE Finial Shaft Bearing Fit Size 3 89. DE Air Seal Shaft Size 89. DE Finial Air Seal Shaft Size 89. DE Finial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Endbell Fit Size 1 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 2 97. DE Finial Endbell Fit Size 2 98. DE Finial Endbell Fit Size 2 99. DE Finial Endbell Fit Size 2 99. DE Finial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3 93. DE Finial Endbell Fit Size 3 94. DE Finial Endbell Fit Size 3 95. DE Finial Endbell Fit Size 1 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 1 98. DE Finial Endbell Fit Size 1 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 1		•
77. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 2 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 1 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Finial Shaft Bearing Fit Size 3 88. DE Finial Shaft Bearing Fit Size 3 89. DE Finial Shaft Bearing Fit Size 3 80. DE Initial Air Seal Shaft Size 80. DE Finial Shaft Bearing Fit Size 3 81. DE Initial Air Seal Shaft Size 82. ODE Finial Shaft Size 83. DE Final Air Seal Shaft Size 84. DE Initial Air Seal Shaft Size 85. DE Finial Air Seal Shaft Size 86. DE Initial Air Seal Shaft Size 87. DE Finial Air Seal Shaft Size 88. DE Finial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. DE Finial Air Seal Shaft Size 93. DE Endbell Fit Size 1 94. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 1 91. DE Endbell Fit Size 3 91. DE Finial Endbell Fit Size 3 92. DE Finial Endbell Fit Size 1 93. DE Finial Endbell Fit Size 3 94. DE Finial Endbell Fit Size 1 95. DE Finial Endbell Fit Size 3 96. DE Finial Endbell Fit Size 1 97. DE Finial Endbell Fit Size 1 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 1		·
78. DE Finial Shaft Bearing Fit Size 2 79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 3 85. ODE Finial Shaft Bearing Fit Size 1 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Air Seal Shaft Bearing Fit Size 3 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 3 97. DE Initial Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 91. DE Final Endbell Fit Size 3 92. DE Final Endbell Fit Size 3 93. DE Endbell Fit Size 1 94. DE Initial Endbell Fit Size 3 95. DE Final Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 91. DE Endbell Fit Size 6 92. ODE Endbell Fit Size 8 93. DE Final Endbell Fit Size 9 94. DE Final Endbell Fit Size 9 95. DE Final Endbell Fit Size 1 96. DE Endbell Fit Size 1		•
79. DE Finial Shaft Bearing Fit Size 3 80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Air Seal Shaft Fit 88. DE Air Seal Shaft Fit 89. DE Finial Air Seal Shaft Size 90. ODE Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Finial Air Seal Shaft Size 93. DE Finial Air Seal Shaft Size 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 1 96. DE Initial Endbell Fit Size 2 97. DE Finial Endbell Fit Size 2 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 3 91. DE Finial Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3 93. DE Finial Endbell Fit Size 3 94. DE Finial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 3 910. DE Endbell Fit Size 3 910. DE Endbell Fit Insulated 910. DE Endbell Fit Insulated 910. DE Endbell Air Seal Fit Size 910. ODE Initial Endbell Fit Size 4 910. DE Endbell Fit Size 5 910. ODE Initial Endbell Fit Size 1		•
80. ODE Bearing Shaft Fit 81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 2 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Fit 89. DE Finial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 2 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 91. DE Final Endbell Fit Size 3 92. DE Final Endbell Fit Size 3 93. DE Final Endbell Fit Size 3 94. DE Final Endbell Fit Size 3 95. DE Final Endbell Fit Size 3 96. DE Final Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 91. DE Final Endbell Fit Size 3 92. DE Final Endbell Fit Size 3 93. DE Final Endbell Fit Size 3 94. DE Final Endbell Fit Size 3 95. DE Final Endbell Fit Size 3 96. DE Final Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3		•
81. ODE Initial Shaft Bearing Fit Size 1 82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Finial Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 91. DE Final Endbell Fit Size 3 92. ODE Final Endbell Fit Size 3 93. DE Final Endbell Fit Size 3 94. DE Final Endbell Fit Size 3 95. DE Final Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 910. DE Endbell Fit Size 3		*
82. ODE Initial Shaft Bearing Fit Size 2 83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 91. DE Final Endbell Fit Size 3 92. ODE Final Endbell Fit Size 3 93. DE Final Endbell Fit Size 3 94. DE Initial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 1 96. DE Final Endbell Fit Size 3 97. DE Final Endbell Fit Size 1 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Endbell Fit Size 3 95. DE Final Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Endbell Fit Size 3 95. DE Endbell Fit Size 3 96. DE Endbell Fit Size 3 97. DE Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3		-
83. ODE Initial Shaft Bearing Fit Size 3 84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Bearing Fit Size 3 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 1 91. DE Final Endbell Fit Size 3 92. ODE Final Endbell Fit Size 3 93. DE Final Endbell Fit Size 3 94. DE Initial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 1 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Endbell Fit Size 3 95. DE Initial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 99. DE Final Endbell Fit Size 3 90. DE Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. DE Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. DE Endbell Fit Size 3		-
84. ODE Finial Shaft Bearing Fit Size 1 85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Air Seal Shaft Size 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Endbell Fit Size 3 91. DE Endbell Fit Size 3 92. ODE Initial Endbell Fit Size 1 93. DE Finial Endbell Fit Size 3 94. DE Finial Endbell Fit Size 3 95. DE Initial Endbell Fit Size 1 96. DE Endbell Fit Size 1 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 1 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 2 106. ODE Initial Endbell Fit Size 2 107. ODE Initial Endbell Fit Size 1 108. ODE Initial Endbell Fit Size 2 109. ODE Initial Endbell Fit Size 2 109. ODE Initial Endbell Fit Size 1 100. ODE Initial Endbell Fit Size 2		
85. ODE Finial Shaft Bearing Fit Size 2 86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 1 98. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Size 3 101. DE Endbell Fit Size 3 102. Initial Endbell Fit Size 3 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Air Seal Fit Size 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 1 3.94 "		-
86. ODE Finial Shaft Bearing Fit Size 3 87. DE Air Seal Shaft Fit 88. DE Initial Air Seal Shaft Size 89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Size 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 90. DE Finial Endbell Fit Size 3 91. DE Finial Endbell Fit Size 3 92. DE Finial Endbell Fit Size 3 93. DE Finial Endbell Fit Size 3 94. DE Finial Endbell Fit Size 3 95. DE Finial Endbell Fit Size 3 96. DE Initial Endbell Fit Size 3 97. DE Finial Endbell Fit Size 3 98. DE Finial Endbell Fit Size 3 99. DE Finial Endbell Fit Size 3 100. DE Endbell Fit Size 3 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 2 109. ODE Initial Endbell Fit Size 2 109. ODE Initial Endbell Fit Size 1 100. ODE Initial Endbell Fit Size 2 100. ODE Initial Endbell Fit Size 1 100. ODE Initial Endbell Fit Size 2 100. ODE Initial Endbell Fit Size 2		•
87. DE Air Seal Shaft Fit  88. DE Initial Air Seal Shaft Size  89. DE Final Air Seal Shaft Size  90. ODE Air Seal Shaft Fit  91. ODE Initial Air Seal Shaft Size  92. ODE Final Air Seal Shaft Size  93. DE Endbell Fit  94. DE Initial Endbell Fit Size 1  95. DE Initial Endbell Fit Size 2  96. DE Initial Endbell Fit Size 3  97. DE Final Endbell Fit Size 3  98. DE Final Endbell Fit Size 1  99. DE Final Endbell Fit Size 1  90. DE Endbell Fit Size 1  91. DE Final Endbell Fit Size 1  92. DE Final Endbell Fit Size 1  93. DE Final Endbell Fit Size 1  94. DE Final Endbell Fit Size 1  95. DE Final Endbell Fit Size 1  96. DE Initial Endbell Fit Size 1  97. DE Final Endbell Fit Size 1  98. DE Final Endbell Fit Size 3  100. DE Endbell Fit Insulated  101. DE Endbell Air Seal Fit  102. Initial Endbell Air Seal Fit Size  103. Finial Endbell Air Seal Fit Size  104. ODE Endbell Fit  105. ODE Initial Endbell Fit Size 1  106. ODE Initial Endbell Fit Size 2  3.942 "		•
88. DE Initial Air Seal Shaft Size  89. DE Final Air Seal Shaft Size  90. ODE Air Seal Shaft Fit  91. ODE Initial Air Seal Shaft Size  92. ODE Final Air Seal Shaft Size  93. DE Endbell Fit  94. DE Initial Endbell Fit Size 1  95. DE Initial Endbell Fit Size 2  96. DE Initial Endbell Fit Size 3  97. DE Final Endbell Fit Size 1  98. DE Final Endbell Fit Size 2  99. DE Final Endbell Fit Size 3  100. DE Endbell Fit Insulated  101. DE Endbell Air Seal Fit  102. Initial Endbell Air Seal Fit Size  104. ODE Endbell Fit Size 1  105. ODE Initial Endbell Fit Size 1  3.94 "  106. ODE Initial Endbell Fit Size 2  3.942 "		•
89. DE Final Air Seal Shaft Size 90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 1 98. DE Finial Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Fit Size 104. ODE Endbell Fit 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 2 3.942 "		
90. ODE Air Seal Shaft Fit 91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 3 97. DE Final Endbell Fit Size 1 98. DE Finial Endbell Fit Size 2 99. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 2 3.942 "	88.	DE Initial Air Seal Shaft Size
91. ODE Initial Air Seal Shaft Size 92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 1 98. DE Finial Endbell Fit Size 1 99. DE Finial Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 1 3.94 " 106. ODE Initial Endbell Fit Size 2	89.	DE Final Air Seal Shaft Size
92. ODE Final Air Seal Shaft Size 93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 1 98. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 1 3.94 " 106. ODE Initial Endbell Fit Size 2	90.	ODE Air Seal Shaft Fit
93. DE Endbell Fit 94. DE Initial Endbell Fit Size 1 95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 1 98. DE Finial Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 2 107. ODE Initial Endbell Fit Size 1 108. ODE Initial Endbell Fit Size 1 109. ODE Initial Endbell Fit Size 2 109. ODE Initial Endbell Fit Size 1 109. ODE Initial Endbell Fit Size 2 109. ODE Initial Endbell Fit Size 2 109. DE Initial Endbell Fit Size 2	91.	ODE Initial Air Seal Shaft Size
94. DE Initial Endbell Fit Size 1  95. DE Initial Endbell Fit Size 2  96. DE Initial Endbell Fit Size 3  97. DE Final Endbell Fit Size 1  98. DE Finial Endbell Fit Size 2  99. DE Final Endbell Fit Size 3  100. DE Endbell Fit Insulated  101. DE Endbell Air Seal Fit  102. Initial Endbell Air Seal Fit Size  103. Finial Endbell Air Seal Fit Size  104. ODE Endbell Fit Size 1  105. ODE Initial Endbell Fit Size 1  3.94 "  106. ODE Initial Endbell Fit Size 2	92.	ODE Final Air Seal Shaft Size
95. DE Initial Endbell Fit Size 2 96. DE Initial Endbell Fit Size 3 97. DE Final Endbell Fit Size 1 98. DE Finial Endbell Fit Size 2 99. DE Final Endbell Fit Size 3 100. DE Endbell Fit Insulated 101. DE Endbell Air Seal Fit 102. Initial Endbell Air Seal Fit Size 103. Finial Endbell Air Seal Fit Size 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Fit Size 1 3.94 " 106. ODE Initial Endbell Fit Size 2	93.	DE Endbell Fit
96. DE Initial Endbell Fit Size 3  97. DE Final Endbell Fit Size 1  98. DE Finial Endbell Fit Size 2  99. DE Final Endbell Fit Size 3  100. DE Endbell Fit Insulated  101. DE Endbell Air Seal Fit  102. Initial Endbell Air Seal Fit Size  103. Finial Endbell Air Seal Fit Size  104. ODE Endbell Fit Size 1  105. ODE Initial Endbell Fit Size 2  3.94 "	94.	DE Initial Endbell Fit Size 1
97. DE Final Endbell Fit Size 1  98. DE Finial Endbell Fit Size 2  99. DE Final Endbell Fit Size 3  100. DE Endbell Fit Insulated  101. DE Endbell Air Seal Fit  102. Initial Endbell Air Seal Fit Size  103. Finial Endbell Air Seal Fit Size  104. ODE Endbell Fit  105. ODE Initial Endbell Fit Size 1  106. ODE Initial Endbell Fit Size 2  3.942 "	95.	DE Initial Endbell Fit Size 2
98. DE Finial Endbell Fit Size 2  99. DE Final Endbell Fit Size 3  100. DE Endbell Fit Insulated  101. DE Endbell Air Seal Fit  102. Initial Endbell Air Seal Fit Size  103. Finial Endbell Air Seal Fit Size  104. ODE Endbell Fit  105. ODE Initial Endbell Fit Size 1  106. ODE Initial Endbell Fit Size 2  3.942 "	96.	DE Initial Endbell Fit Size 3
99. DE Final Endbell Fit Size 3  100. DE Endbell Fit Insulated  101. DE Endbell Air Seal Fit  102. Initial Endbell Air Seal Fit Size  103. Finial Endbell Air Seal Fit Size  104. ODE Endbell Fit  105. ODE Initial Endbell Fit Size 1  106. ODE Initial Endbell Fit Size 2  3.942 "	97.	DE Final Endbell Fit Size 1
100. DE Endbell Fit Insulated  101. DE Endbell Air Seal Fit  102. Initial Endbell Air Seal Fit Size  103. Finial Endbell Air Seal Fit Size  104. ODE Endbell Fit  105. ODE Initial Endbell Fit Size 1  106. ODE Initial Endbell Fit Size 2  3.942 "	98.	DE Finial Endbell Fit Size 2
101. DE Endbell Air Seal Fit  102. Initial Endbell Air Seal Fit Size  103. Finial Endbell Air Seal Fit Size  104. ODE Endbell Fit  105. ODE Initial Endbell Fit Size 1  106. ODE Initial Endbell Fit Size 2  3.942 "	99.	DE Final Endbell Fit Size 3
102. Initial Endbell Air Seal Fit Size  103. Finial Endbell Air Seal Fit Size  104. ODE Endbell Fit  105. ODE Initial Endbell Fit Size 1  106. ODE Initial Endbell Fit Size 2  3.942 "	100.	DE Endbell Fit Insulated
103. Finial Endbell Air Seal Fit Size  104. ODE Endbell Fit 105. ODE Initial Endbell Fit Size 1 106. ODE Initial Endbell Fit Size 2  107. ODE Initial Endbell Fit Size 2  108. ODE Initial Endbell Fit Size 2	101.	DE Endbell Air Seal Fit
● 104. ODE Endbell Fit  105. ODE Initial Endbell Fit Size 1  106. ODE Initial Endbell Fit Size 2  107. ODE Initial Endbell Fit Size 2  108. ODE Initial Endbell Fit Size 2	102.	Initial Endbell Air Seal Fit Size
105. ODE Initial Endbell Fit Size 1  106. ODE Initial Endbell Fit Size 2  3.94 "  3.942 "	103.	Finial Endbell Air Seal Fit Size
106. ODE Initial Endbell Fit Size 2 3.942 "	<b>1</b> 04.	ODE Endbell Fit (F) Fail
	105.	ODE Initial Endbell Fit Size 1 3.94 "
	106.	ODE Initial Endbell Fit Size 2 3.942 "
107. ODE Initial Endbell Fit Size 3	107.	ODE Initial Endbell Fit Size 3 3.942 "



109. ODE Final Endbell Fit Si		3.9377 "
110. ODE Final Endbell Fit Si	ze 3	3.9377 "
111. ODE Endbell Fit Insulate	;d	
112. ODE Endbell Air Seal Fit	t	
113. ODE Initial Endbell Seal	Fit Size	
114. ODE Finial Endbell Seal	Fit Size	
115. Foot Flatness		
116. Foot Condition		
117. Flange Condition		
118. Service Technician		
Balancing Report		
119. Balance Type		
120. Balance Operating Spee	ed	
121. Start Left End		
122. Start Right End		
123. Balancing Specification		
124. Finish Left End		
125. Finish Right End		
126. Service Technician		
Assembly and Final Test		
127. Meggar Testing Reading		
128. Surge Test		
129. Hi-Pot		
130. Winding Resistance 1-2		
131. Winding Resistance 2-3		
132. Winding Resistance 1-3		
133. Test Run Voltage Phase	A	

134. Test Run Amps A Amps



139. DE Horizontal Vibration Reading	
140. DE Vertical Vibration Reading	
141. DE Axial Vibration Reading	
142. ODE Horizontal Vibration Reading	
143. ODE Vertical Vibration Reading	
144. ODE Axial Vibration Reading	
145. Ambient Temp at start of Test Run	
146. Temp at 5 minutes	
147. Temp at 10 minutes	
148. Temp at 15 minutes	
149. Temp at 20 minutes	
150. Temp at 25 minutes	
151. Temp at 30 minutes	
152. Temp at 35 minutes	
153. Temp at 40 minutes	
154. Temp at 45 minutes	
155. Temp at 50 minutes	
156. Temp at 55 minutes	
157. Temp at 60 minutes	
● 158. Motor Paint	(P) Pass



159. Service Technician



#### STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. APPLICABILITY. The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. SCOPE OF GOODS AND/OR SERVICES. The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only bee effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. <u>DELIVERY OF GOODS AND/OR SERVICES.</u> Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- **DELIVERY SITE AND TIME FOR PERFORMANCE.** Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have sixty (60) days to cure the alleged discrepancy and/or nonconformance. If Hi-Speed fails to cure in this time period, Buyer shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. <u>LIMITATION OF DAMAGES.</u> HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY.</u> The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. **GOVERNING LAW AND JURISDICTION.** Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER.</u> No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. <u>ASSIGNMENT.</u> The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. NO INDIVIDUAL LIABILITY. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.