

EVERY DAY SINCE 1946

LR Motor Shop Repairs

Job Number 100714

Prepared for Saint Jean Industries, Inc. (11653)

424 Industrial Park Road Heber Springs AR 72543

Table of Contents

AC Recondition As Found - MOTOR SHOP LR



Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

> FolderID: 100714 FormID: 15546609

AC Recondition As Found

Saint Jean Industries, Inc. (11653) 424 Industrial Park Road Heber Springs, AR 72543

AC Recondition - Rev. 2

Location:	MOTOR SHOP LR
Serial Number:	1052065656
Description:50H	P WEG/DEKALB BLOWER

1800RPM 324/6T DEKALB FHD-402-100 S# 20-1551A

Hi-Speed Job Number:	100714
Manufacturer:	WEG
Product Number:	05018ET3E326T-W22
Serial Number:	1052065656
HP/kW:	50 (HP)
RPM:	1775 (RPM)
Frame:	324/6T
Voltage:	230 / 460
Current:	118/59.2
Phase:	Three
Hz:	60 (Hz)
Service Factor:	1.25
Enclosure:	TEFC
J-box Included:	Complete
Coupling/Sheave:	Propeller
Bearing RTDs:	No
Stator RTDs:	No
Repair Stage:	Teardown Inspection
Heaters:	No
Winding Type :	Random Wound
Bearing Type:	Rolling Element

Priorities Found: **7 - High**

- **Overall Condition**
 - 1. Report Date
 - 2. Nameplate Picture



































3. Photos of all six sides of the machine.























4.	Describe the Overall Condition	of the Equipment as Rec	eived		
F	Dirty				
5.	Distance from the end of the sh	att to the Coupling/Shea	ve		
Initial	Mechanical/Electrical				
6.	Does Shaft Turn Freely?				(No) No
7.	Does Shaft Have Visible Dama	ge?			(No) No
8.	Assembled Shaft Runout				
9.	Assembled Shaft End Play				
10.	Air Gap Variation <10%				
11.	Lead Condition				
12.	Lead Length				
13.	Frame Condition				
1 4.	Fan Condition				(F) Fail
15.	Broken or Missing Components	;			fan is cracked
Initial	Electrical Inspection				
16.	Insulation Resistance/Megger				
17.	Winding Resistance				
	1-2	1-3		2-3	
1 8.	Perform Surge Test				(F) Fail
	Windings burnt				
19.	Number of Stator Slots				

21. Drive End Bearing Number. 22. Drive End Bearing Number. 23. Drive End Bearing Type 24. Drive End Bearing Type 25. Drive End Bearing Type 26. Drive End Bearing Statistion or Grounding Device? 27. Drive End Bearing Statistion or Grounding Device? 28. Drive End Bearing Statistion or Grounding Device? 29. Drive End Bearing Statistion or Grounding Device? 20. Opposite Drive End Bearing Type 30. Opposite Drive End Bearing Type 31. Opposite Drive End Bearing Type 32. Opposite Drive End Bearing Statistion or Grounding Device? 33. Opposite Drive End Bearing Condition 34. Opposite Drive End Seal 35. Drive End Seal 36. Opposite Drive End Seal 37. Rotor Type/Material 38. Growfar Test 39. Number of Rotor Bars 41. List the Parts needed for the Repair Below 42. Signature of Technican that Disasembled Motor 43. Shaft Runout 44. Rotor Runout Prive End Bearing Shaft Fit 0 Degrees 90 Degrees 90 Degrees 90 Degrees 90 Degrees 120 Degrees 90 Degrees 60 Degrees 90 Degrees </th <th>20</th> <th>Stator Condition</th> <th></th> <th></th>	20	Stator Condition				
21. Drive End Bearing Number- 22. Drive End Bearing Chy. 23. Drive End Bearing Type 24. Drive End Bearing Insulation or Grounding Device? 25. Drive End Bearing Insulation or Grounding Device? 26. Drive End Bearing Condition 27. Drive End Bearing Condition 28. Opposite Drive End Bearing Other Retention Device? 29. Opposite Drive End Bearing Number- 20. Opposite Drive End Bearing Insulation or Grounding Device? 30. Opposite Drive End Bearing Insulation or Grounding Device? 31. Opposite Drive End Bearing Insulation or Grounding Device? 32. Opposite Drive End Bearing Condition 33. Opposite Drive End Bearing Insulation or Grounding Device? 34. Opposite Drive End Bearing Condition 35. Drive End Seal 36. Opposite Drive End Seal 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Type/Material 41. List the Parts needed for the Repair Below 42. Signatrus of Technician that Disassembled Motor </th <th>-</th> <th></th> <th></th> <th></th>	-					
22. Drive End Bearing Oty. 23. Drive End Bearing Type 24. Drive End Bearing Insulation or Grounding Device? 25. Drive End Bearing Condition 26. Drive End Bearing Condition 27. Drive End Bearing Condition 28. Opposite Drive End Bearing Other Retention Device? 29. Opposite Drive End Bearing Other 20. Opposite Drive End Bearing Insulation or Grounding Device? 30. Opposite Drive End Bearing Insulation or Grounding Device? 31. Opposite Drive End Bearing Condition 32. Opposite Drive End Bearing Condition 33. Opposite Drive End Bearing Condition 34. Opposite Drive End Seal 75. Rotor Tuppe/Material 38. Growler Test 39. Number of Rotor Bars 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor 43. Shaft Runout 44. Rotor Runout Drive End Bearing Shaft Fit Rotor Runout 45. Coupling Fit Closest to Bearing Housing 46. Coupling F						
23. Drive End Bearing Type 24. Drive End Bearing Insulation or Grounding Device? 25. Drive End Bearing Insulation or Grounding Device? 26. Drive End Bearing Insulation or Grounding Device? 27. Drive End Bearing Number- 28. Opposite Drive End Bearing Ory. 30. Opposite Drive End Bearing Number- 28. Opposite Drive End Bearing Ory. 30. Opposite Drive End Bearing Conditionation Type 31. Opposite Drive End Bearing Conditionation Type 32. Opposite Drive End Bearing Conditionation Type 33. Opposite Drive End Bearing Conditionation Type 34. Opposite Drive End Bearing Conditionation Type 35. Drive End Seal 36. Opposite Drive End Seal 37. Rotor Type/Material 38. Growber Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor 43. Shaft Runout 44. Rotor Runout 45. Coupling Fit Clos		-				
24. Drive End Lubrication Type 25. Drive End Bearing Insulation or Grounding Device? 26. Drive End Bearing Condition 27. Drive End Bearing Condition 28. Opposite Drive End Bearing Qumber- 29. Opposite Drive End Bearing Type 30. Opposite Drive End Bearing Type 31. Opposite Drive End Bearing Type 32. Opposite Drive End Bearing Type 33. Opposite Drive End Bearing Insulation or Grounding Device? 33. Opposite Drive End Bearing Condition 34. Opposite Drive End Bearing Condition or Grounding Device? 35. Drive End Seal 36. Opposite Drive End Bearing Condition 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor 43. Shaft Runout 44. Rotor Runout 14. Rotor Runout 14. Rotor Runout 15. Coupling Fit Closest to Bearing Housing 16. Coupling Fit Closest to Bearing Housing 17. Opegrees 60 Degrees 120 Degrees 120 Degrees 120 Degrees 60 Degrees 120 Degrees </th <th></th> <th>÷ ·</th> <th></th> <th></th>		÷ ·				
25. Drive End Bearing Insulation or Grounding Device? 28. Drive End Bearing Condition 29. Drive End Bearing Condition 28. Opposite Drive End Bearing Tyre 29. Opposite Drive End Bearing Tyre 20. Opposite Drive End Bearing Tyre 31. Opposite Drive End Bearing Tyre 32. Opposite Drive End Bearing Tyre 33. Opposite Drive End Bearing Condition or Grounding Device? 34. Opposite Drive End Bearing Condition 35. Drive End Seal 36. Opposite Drive End Seal 87. Rotor Type/Material 36. Opposite Drive End Seal 87. Rotor Type/Material 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Paris needed for the Repair Below 42. Signature of Technician that Disassembled Motor Mechanical Fits-Rotor						
26. Drive End Bearing Condition 27. Drive End Bearing Condition 28. Opposite Drive End Bearing Number 29. Opposite Drive End Bearing Number. 29. Opposite Drive End Bearing Number. 29. Opposite Drive End Bearing Number. 30. Opposite Drive End Bearing Insulation or Grounding Device? 31. Opposite Drive End Bearing Condition 32. Opposite Drive End Bearing Condition 33. Opposite Drive End Bearing Condition 34. Opposite Drive End Seal Rotor Thespection		•••				
27. Drive End Bearing Condition 28. Opposite Drive End Bearing Qy. 30. Opposite Drive End Bearing Type 31. Opposite Drive End Bearing Type 32. Opposite Drive End Bearing Type 33. Opposite Drive End Bearing Condition 34. Opposite Drive End Bearing Condition 35. Drive End Bearing Condition 36. Opposite Drive End Bearing Condition 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor 43. Shaft Runout 44. Rotor Runout 45. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 90 Degrees 90 Degrees 120 Degrees 90 Degrees 120 Degrees 90 Degrees 120 Degrees 60 Degrees 120 Degrees		-	-			
28. Opposite Drive End Bearing Number- 29. Opposite Drive End Bearing Qty. 30. Opposite Drive End Bearing Type 31. Opposite Drive End Bearing Insulation or Grounding Device? 33. Opposite Drive End Bearing Insulation or Grounding Device? 34. Opposite Drive End Bearing Condition 35. Drive End Seal 36. Opposite Drive End Bearing Condition 37. Rotor Type/Material 38. Growber Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor 43. Nether Elfts- Rotor 44. Rotor Runout 45. Coupling Fit Closest to Bearing Fit 76. Opgrees 90 Degrees 77. Drive End Bearing Shaft Fit 78. Degrees 90 Degrees 79. Degrees 90 Degrees 70. Degrees 90 Degrees 70. Degrees 60 Degrees 71. Drive End Bearing Shaft Fit Conditon			other Retention Device?			
29. Opposite Drive End Bearing Type 30. Opposite Drive End Bearing Type 31. Opposite Drive End Bearing Insulation or Grounding Device? 32. Opposite Drive End Bearing Condition 33. Opposite Drive End Bearing Condition 34. Opposite Drive End Bearing Condition 35. Drive End Bearing Condition 36. Opposite Drive End Seal 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Methanization of Rotor Bars 44. Ator Rotor Runout 42. Signature of Technician that Disassembled Motor Methanization of Runout 44. Ator Runout 45. 45. Opgrees 90 Degrees 90 Degrees 120 Degrees 46. Coupling Fit Closest		-				
30. Opposite Drive End Bearing Type 31. Opposite Drive End Lubrication Type 32. Opposite Drive End Wavy Washer/Snap-Ring Other Retention Device? 34. Opposite Drive End Bearing Insulation or Grounding Device? 34. Opposite Drive End Bearing Condition 35. Drive End Seal 36. Opposite Drive End Seal 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor						
31. Opposite Drive End Lubrication Type 32. Opposite Drive End Bearing Insulation or Grounding Device? 33. Opposite Drive End Bearing Condition 35. Drive End Bearing Condition 36. Opposite Drive End Bearing Condition 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Motor Runout Drive End Bearing Fit 43. Shaft Runout 45. Opposite Drive End Bearing Housing Opposite Drive End Bearing Fit 7 Rotor Runout Drive End Bearing Shaft Fit 0 Degrees 90 Degrees 120 Degrees 44. Rotor Runout Coupling Fit Closest to the end of the Shaft 120 Degrees 60 Degrees 60 Degrees 120 Degrees 120 Degrees 44. Drive End Bearing Shaft Fit Condition (F) Fail 45. Opposite Drive End Bearing Shaft Fit (F)						
32. Opposite Drive End Bearing Insulation or Grounding Device? 33. Opposite Drive End Wavy Washer/Snap-Ring Other Retention Device? 34. Opposite Drive End Bearing Condition 35. Drive End Seal 36. Opposite Drive End Seal Rotor Inspection 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Methanization of Bearing Fit Ator Runout 44. Rotor Runout 44. Rotor Runout 45. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 90 Degrees 910 Degrees 90 Degrees 920 Degrees 120 Degrees 920 Degrees 120 Degrees 920 Degrees 120 Degrees 930 Degrees 120 Degrees 94. Drive End Bearing Shaft Fit 0 Degrees 94. Drive End Bearing Shaft Fit 0 Degrees 95. Opposite Drive End Bearing Shaft Fit 0 Degrees 960 Degrees 120 Degrees </th <th></th> <th></th> <th></th> <th></th>						
33. Opposite Drive End Wavy Washer/Snap-Ring Other Retention Device? 34. Opposite Drive End Bearing Condition 35. Drive End Seal 36. Opposite Drive End Seal Rotor Type/Material 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Method Rotor Bars 43. Shaft Runout 44. Rotor Runout 47. 0 Degrees 90 Degrees 90. Degrees 90 Degrees 91. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 42. Drive End Bearing Shaft Fit (F) Fail 43. Opposite Drive End Bearing Shaft Fit (F) Fail 44. Drive End Bearing Shaft Fit Condition (F) Fail 45. Coupling Fit Closest to the end of the Shaft (D Degrees) 0 Degrees 60 Degrees) 120 Degr						
34. Opposite Drive End Bearing Condition 35. Drive End Seal 36. Opposite Drive End Seal 37. Rotor Tspe/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor 43. Shaft Runout 44. Rotor Runout 45. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 120 Degrees 90 Degrees 120 Degrees 90 Degrees 120 Degrees 60 Degrees			-			
35. Drive End Seal 36. Opposite Drive End Seal Rotor Inspection 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor 43. Shaft Runout 44. Rotor Runout Opposite Drive End Bearing Fit 45. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 0 Degrees 60 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail						
36. Opposite Drive End Seal Rotor Type/Material 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Method Fits- Rotor Method Fits- Rotor Ador Runout Drive End Bearing Fit Rotor Ronout Opposite Drive End Bearing Housing 46. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 90 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 49. Opposite Drive End Bearing Shaft Fit (f) Fail 49. Opposite Drive End Bearing Shaft Fit (f) Fail 41. Drive End Bearing Shaft Fit (f) Fail 50. Opposite Drive End Bearing Shaft Fit (f) Fail <th></th> <th></th> <th>1</th> <th></th>			1			
Rotor Tisspection 37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor 43. Shaft Runout 44. Rotor Runout Drive End Bearing Fit Rotor Body 0 Degrees 90 Degrees 0 Degrees 90 Degrees 0 Degrees 60 Degrees 120 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 0 Degrees 60 Degrees 120 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 60 Degrees 120 Degrees (F) Fail 48. Drive End Bearing Shaft Fit Condition 0 Degr						
37. Rotor Type/Material 38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor 43. Shaft Runout 44. Rotor Runout 45. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 90 Degrees 90 Degrees 46. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Opposite Drive End Bearing Shaft Fit Condition 0 Degrees 60 Degrees 120 Degrees 610 Degrees 120 Degrees		••				
38. Growler Test 39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor 43. Shaft Runout 44. Rotor Runout prive End Bearing Fit Rotor Body 0 Degrees 90 Degrees 120 Degrees 45. Coupling Fit Closest to Bearing Housing 120 Degrees 46. Coupling Fit Closest to the end of the Shaft 120 Degrees 0 Degrees 60 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Opposite Drive End Air Seal Opposite Drive End Air Seal		•				
39. Number of Rotor Bars 40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor 43. Shaft Runout 44. Rotor Runout Drive End Bearing Fit Rotor Body 0 Degrees 90 Degrees 0 Degrees 90 Degrees 120 Degrees 120 Degrees 45. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 120 Degrees 120 Degrees 46. Coupling Shaft Fit 120 Degrees 0 Degrees 60 Degrees 120 Degrees 120 Degrees 120 Degrees 120 Degrees 120 Degrees 120 Degrees 120 Degrees 60 Degrees 120 Degrees						
40. Rotor Condition 41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor 43. Shaft Runout 44. Rotor Runout 44. Rotor Runout 45. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 90 Degrees 90 Degrees 120 Degrees 90 Degrees 46. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 120 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit (F) Fail 49. Opposite Drive End Bearing Shaft Fit (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 41. Shaft Air Seal Fits (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits (F) Fail 52. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 53. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 54. Drive End Air Se						
41. List the Parts needed for the Repair Below 42. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor 43. Shaft Runout 44. Rotor Runout 44. Rotor Runout 45. Coupling Fit Closest to Bearing Housing 46. Coupling Fit Closest to Bearing Housing 47. Degrees 90 Degrees 48. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 60 Degrees 120 Degrees 61 Degrees 120 Degrees 62 Degrees 120 Degrees 63 Degrees 120 Degrees 64 Degrees 120 Degrees 65 Opposite Drive End Bearing Shaft Fit Condition (F) Fail 65 Opposite Drive End Bearing Shaft Fit Condition (F) Fail 65 Drive End Bearing Shaft Fit Condition (F) Fail 65 Dri						
42. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor 43. Shaft Runout 44. Rotor Runout 44. Rotor Runout 45. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 90 Degrees 120 Degrees 60 Degrees 60 Degrees 77. Drive End Bearing Shaft Fit 0 Degrees 0 Degrees 60 Degrees 60 Degrees 120 Degrees 78. Coupling Fit Closest to the end of the Shaft 120 Degrees 79. Drive End Bearing Shaft Fit 0 Degrees 90 Degrees 60 Degrees 91 Degrees 60 Degrees 92 Degrees 120 Degrees 93 Degrees 120 Degrees 948. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 41. Shaft Air Seal Fits (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Opposite Drive End Air Seal 52. Orive End Air Seal Fits Opposite Drive End Air Seal <th></th> <th></th> <th></th> <th></th>						
Mechanical Fits- Rotor 43. Shaft Runout 44. Rotor Runout 44. Rotor Runout 44. Rotor Runout 45. Coupling Fit Closest to Bearing Housing 46. Coupling Fit Closest to the end of the Shaft 7. O Degrees 90 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit Condition 0 Degrees 60 Degrees 60 Degrees 120 Degrees 60 Degrees 120 Degrees 61 Degrees 60 Degrees 75. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition 610 Degrees 120 Degrees 620 Degrees 120 Degrees 630. Opposite Drive End Bearing Shaft Fit Condition 641. Opposite Drive End Bearing Shaft Fit Condition 650. Opposite Drive End Bearing Shaft Fit Condition (F) Fail		· · ·				
43. Shaft Runout 44. Rotor Runout Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 45. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 120 Degrees 46. Coupling Fit Closest to the end of the Shaft 120 Degrees 0 Degrees 60 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits 0 Degrees 120 Degrees 52. Opposite Drive End Bearing Shaft Fit Condition (F) Fail		-	ndied Miotor			
44. Rotor Runout 44. Rotor Runout Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 45. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 120 Degrees 46. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits (F) Fail 51. Shaft Air Seal Fits (F) Fail 51. Drive End Air Seal Opposite Drive End Air Seal						
Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 45. Coupling Fit Closest to Bearing Housing 120 Degrees 0 Degrees 90 Degrees 120 Degrees 46. Coupling Fit Closest to the end of the Shaft 120 Degrees 0 Degrees 60 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 0 Degrees 60 Degrees 120 Degrees 48. Drive End Bearing Shaft Fit (F) Fail 49. Opposite Drive End Bearing Shaft Fit (F) Fail 49. Opposite Drive End Bearing Shaft Fit (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits (F) Fail 51. Shaft Air Seal Fits (F) Fail 51. Drive End Air Seal (P) opposite Drive End Air Seal						
 45. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 120 Degrees 46. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 60 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 60 Degrees 120 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Drive End Air Seal 	44.		Deter De l			
0 Degrees 90 Degrees 120 Degrees 46. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit Condition 60 Degrees 120 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 60 Degrees 120 Degrees 60 Degrees (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Opposite Drive End Bearing Shaft Fit Condition prive End Air Seal Opposite Drive End Air Seal		Drive End Bearing Fit	Rotor Body	Opposite Drive End Bearing		
0 Degrees 90 Degrees 120 Degrees 46. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit Condition 60 Degrees 120 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 60 Degrees 120 Degrees 60 Degrees (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Opposite Drive End Bearing Shaft Fit Condition prive End Air Seal Opposite Drive End Air Seal	45.	Coupling Fit Closest to Bearing Housi	ng			
46. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Upposite Drive End Bearing Shaft Fit Condition 52. Opposite Drive End Bearing Shaft Fit Condition (F) Fail			•	120 Degrees		
0 Degrees 60 Degrees 120 Degrees 47. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 0 Degrees 60 Degrees 120 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 55. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits (F) Fail 52. Opposite Drive End Bearing Shaft Fit Condition (F) Fail						
47. Drive End Bearing Shaft Fit 60 Degrees 120 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit 60 Degrees 0 Degrees 60 Degrees 120 Degrees (F) Fail 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Opposite Drive End Bearing Shaft Fit Condition 51. Shaft Air Seal Fits Opposite Drive End Air Seal	46.	Coupling Fit Closest to the end of the	Shaft			
0 Degrees 60 Degrees 120 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit (F) Fail 0 Degrees 60 Degrees 120 Degrees 50. Opposite Drive End Bearing Shaft Fit (F) Fail 51. Shaft Air Seal Fits (F) Fail 51. Shaft Air Seal Fits (F) Fail 52. Drive End Air Seal Opposite Drive End Air Seal		0 Degrees	60 Degrees	120 Degrees		
0 Degrees 60 Degrees 120 Degrees 48. Drive End Bearing Shaft Fit Condition (F) Fail 49. Opposite Drive End Bearing Shaft Fit (F) Fail 0 Degrees 60 Degrees 120 Degrees 50. Opposite Drive End Bearing Shaft Fit (F) Fail 51. Shaft Air Seal Fits (F) Fail 51. Shaft Air Seal Fits (F) Fail 52. Drive End Air Seal Opposite Drive End Air Seal	47	Drive Fred Description Obs/4 Fit				
 48. Drive End Bearing Shaft Fit Condition 49. Opposite Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal	47.	Ŭ	00 D	100 D		
49. Opposite Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal		0 Degrees	60 Degrees	120 Degrees		
49. Opposite Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal	48.	Drive End Bearing Shaft Fit Condition		(F) Fail		
0 Degrees 60 Degrees 120 Degrees • 50. Opposite Drive End Bearing Shaft Fit Condition (F) Fail 51. Shaft Air Seal Fits Drive End Air Seal	49.	-				
 50. Opposite Drive End Bearing Shaft Fit Condition 51. Shaft Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal 			60 Degrees	120 Degrees		
51. Shaft Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal						
Drive End Air Seal Opposite Drive End Air Seal			Condition	(F) Fail		
	51.					
Machaniael Site, Desving Heusings		Drive End Air Seal	Opposite Drive End Air Seal			
	N/ -					

Mechanical Fits- Bearing Housings

Drive End - Endbell Bearing Fit 0 Degrees				
	60 Degrees	120 Degrees		
	00 209,000	120 2091000		
Drive End - Endbell Bearing Fit Condit	tion			
Opposite Drive End - Endbell Bearing Fit				
0 Degrees	60 Degrees	120 Degrees		
Opposite Drive End - Endbell Bearing Fit Condition				
Bearing Cap Condition				
Drive End Bearing Cap	Opposite Drive End Bearing Cap			
End Bell Air Seal Fits				
Drive End Air Seal	Opposite Drive End Air Seal			
List Machine Work Needed Below				
Technician				
ause of Failure				
Failure locations				
Windings, fan , bearings, and bearing fi	ts			
Root cause of failure				
Wear and over heated				
	Opposite Drive End - Endbell Bearing O Degrees Opposite Drive End - Endbell Bearing Bearing Cap Condition Drive End Bearing Cap End Bell Air Seal Fits Drive End Air Seal List Machine Work Needed Below Technician ause of Failure Failure locations <i>Windings, fan , bearings, and bearing fi</i> Root cause of failure	0 Degrees 60 Degrees 0 Opposite Drive End - Endbell Bearing Fit Condition Bearing Cap Condition Drive End Bearing Cap Opposite Drive End Bearing Cap End Bell Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal List Machine Work Needed Below Technician ause of Failure Failure locations Windings, fan , bearings, and bearing fits Root cause of failure	Opposite Drive End - Endbell Bearing Fit 60 Degrees 120 Degrees 0 Degrees 60 Degrees 120 Degrees Opposite Drive End - Endbell Bearing Fit Condition 120 Degrees Bearing Cap Condition 120 Degrees Drive End Bearing Cap Opposite Drive End Bearing Cap End Bell Air Seal Fits Opposite Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal List Machine Work Needed Below 120 Degrees Technician 120 Degrees Failure locations 120 Degrees Windings, fan , bearings, and bearing fits 120 Degrees Root cause of failure 120 Degrees	



STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. <u>APPLICABILITY.</u> The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. <u>SCOPE OF GOODS AND/OR SERVICES.</u> The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only be effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. DELIVERY OF GOODS AND/OR SERVICES. Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- 6. DELIVERY SITE AND TIME FOR PERFORMANCE. Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

TermsAndConditions

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. LIMITATION OF DAMAGES. HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY</u>. The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. <u>GOVERNING LAW AND JURISDICTION.</u> Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER</u>. No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. <u>ASSIGNMENT.</u> The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. <u>NO INDIVIDUAL LIABILITY</u>. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.