

PULSETM

MONITOR

PulseTM Monitor Software Version 1.0.1
PulseTM Monitor Card Software Revision 1.4.0
PulseTM Monitor Card Product Revision 0.1.0.0

TABLE OF CONTENTS

Introduction	3
INSTALLATION	
Pulse Monitor Kits	4-5
Software Installation	6
Initial Programming	6
Tools Required For Installation	7
Mounting Pulse Monitor Card	7
Wiring	8
OPERATION	
Specifications	9
Downloading Motor Data	10-11
Software Functions	11
Cumulative Data	11
Monitor Version	12
Assigning Serial Number	12
Setting Time and Date	12
Setting Voltage	13
Reading Data	13
Voltage Graph	13
Data Filters	14
Viewing Data Type (Current vs. History)	14
Changing Order of Data Grid	15
Saving and Printing Motor Data	15
SERVICE	
Troubleshooting Chart	16
Appendix 1 – Wiring Diagrams	17-23
Appendix 2 – Voltage Measurement Accuracy	24
Replacement Parts.....	24
Customer Service.....	24

NOTE: Pulse is not a trademark of Columbus McKinnon Corporation.

INTRODUCTION

Congratulations on the purchase of a Pulse monitor. The Pulse monitor is an electronic device that records key information with a time/date stamp every time an AC motor is turned on. The program data can be used as a tool to help assist you in trouble shooting hard to figure out field problems for machinery-using AC motors and help determine preventative maintenance intervals.

IMPORTANT! PLEASE READ!



Before proceeding any further, please read the following important information regarding the Pulse monitor and its proper handling and use:



The pulse monitor is powered by AC control voltage, which can cause electric shock resulting in personal injury or loss of life. Handle monitor card with the same care and caution as all other high voltage electrical components.



Be certain the electrical power supply is OFF and locked in the open position before attempting any electrical connections to the hoist.



Be sure to disconnect all AC input power before downloading information from or handling the Pulse monitor circuit board.



Please read this manual completely before installing the Pulse monitor.



The Pulse monitor card must be rigidly secured in the control panel as illustrated in this manual. Failure to do so may result in damage to the pulse monitor card and to the equipment being monitored



Only qualified personnel should perform service.

PULSE MONITOR KITS

The Pulse monitor is available in several different kit varieties to accommodate individual needs.

Note: Shaw-Box World Series and Yale Global King hoists, which include the Pulse monitor card as standard, require a computer interface kit (sold separately) to read the data. Kit variations are as follows:

PULSE MONITOR COMPUTER INTERFACE KIT WITH USB ADAPTOR

CATALOG NO. PINTERFACEUSB

Description	Quantity
Pulse Monitor Computer Interface (9V battery not included)	1
Serial Extension Cable (6 ft.)	1
Pulse Monitor Software Disk	1
StarTech.com USB Adaptor Software Disk	1
Serial Port to USB Adaptor Cable (3 ft.)	1

Note: Kit also includes a DB9 to DB25 pin adapter for 25-pin RS232 serial communication which will not be needed in most cases.

PULSE MONITOR COMPUTER INTERFACE KIT WITHOUT USB ADAPTOR

CATALOG NO. PINTERFACEKIT

Description	Quantity
Pulse Monitor Computer Interface (9V battery not included)	1
Serial Extension Cable (6 ft.)	2
Pulse Monitor Software Disk	1

PULSE MONITOR COMPLETE KIT

CATALOG NUMBERS

PCOMLETEKIT1 = 115 VAC CONTROL

PCOMLETEKIT2 = 24 VAC CONTROL

Description	Quantity
Pulse Monitor Card	1
Card Mounting Bracket	1
Pulse Monitor Computer Interface (9V battery not included)	1
Serial Extension Cable (6 ft.)	2
Pulse Monitor Software Disk	1
StarTech.com USB Adaptor Software Disk	1
Serial Port to USB Adaptor Cable (3 ft.)	1
Pan Head Phillips Screw Self Tap #6-32 X 5/8"	6 (2 extra)
Pan Head Phillips Screw Self Tap #10-24 X 1/4"	3 (1 extra)
Terminal Wire Insulated Female Quick Connector Panduit Part no. DNR14-188F1B-C (tab size 0.187 X 0.020)	10 (3 extra)
16# Insulated Wire	15 ft.

Note: Kit also includes a DB9 to DB25 pin adapter for 25-pin RS232 serial communication which will not be needed in most cases.

PULSE MONITOR KITS (CONTINUED)

PULSE MONITOR COMPLETE KIT



Note: Kit also includes a DB9 to DB25 pin adapter for 25-pin RS232 serial communication which will not be needed in most cases.

**PULSE MONITOR INDIVIDUAL CARD KIT
CATALOG NUMBERS**

PCARDKIT1 = 115 VAC CONTROL
PCARDKIT2 = 24 VAC CONTROL

Description	Quantity
Pulse Monitor Card	1
Card Mounting Bracket	1
Pulse Monitor Software Disk	1
Pan Head Phillips Screw Self Tap #6-32 X 5/8"	6 (2 extra)
Pan Head Phillips Screw Self Tap #10-24 X 1/4"	3 (1 extra)
Terminal Wire Insulated Female Quick Connector Panduit Part no. DNR14-188F1B-C (tab size 0.187 X 0.020)	10 (3 extra)
16# Insulated Wire	15 ft.

SOFTWARE INSTALLATION

Insert the Pulse software disk into your CDROM drive. Using the **RUN** command in your start menu button, browse to your CDROM drive. Open folder 1.0.1. Double click on the **Install Pulse** file. Select **OK** and follow instructions. During the install, say yes to installing the Microsoft.net framework program if prompted. This is necessary for the Pulse software to operate.

OBSERVE MINIMUM SYSTEM REQUIREMENTS:

Operating System* – Windows XP Pro SP2, or Windows 2000 SP4.

CPU – Pentium III, 450 MHz, RAM - 256 MB.

Hard Drive Space – 50MB.

One USB Serial Port, CDROM Drive.

*Please Note: Windows 8 & 8.1 not supported.

USB ADAPTER INSTALLATION

DRIVER

1. Turn on computer on and boot into Windows. **Do not** have USB adapter plugged into the computer
2. Insert the driver CD into your CD/DVD drive. If AutoPlay runs, then choose to “Browse the CD”, otherwise access the contents of the CD via “my Computer”
3. In the “Prolific/PL2302X” location, open the appropriate folder for your operation system and run the setup.exe file. This will launch the driver installation wizard
4. Once the installation wizard completes, the drivers will be installed and ready for use.

HARDWARE INSTALLATION

1. Make sure the driver installation has been completed first.
2. Plug the USB adapter into an available USB port on the computer system.
3. Windows will automatically detect the USB adapter and install the drivers
4. Once installation is complete, the serial port will be ready for use.
5. If connecting the serial port to a DB25 interface, use the included DB9 to DB25 (male) adapter

VERIFYING INSTALLATION

Windows XP/Vista/7

1. From the main desktop, right click on “my computer” (“Computer” in Vista/7) then select Manage. In the new Computer Management window, select Device Manager from the left window panel.
2. Double click on the “Ports (COM & LPT)” option. The additional ports should be visible.
3. Double click on the adapter
4. Select “Port Settings” tab
5. Click on “Advanced” and at the bottom of the pop-up screen under “COM Port Number” make sure COM1, COM2, COM3 or COM4 is selected. The Pulse software will only detect COMs 1 thru 4.

INITIAL PROGRAMMING

Initial programming can be done before or after the Pulse monitor card is installed. Open the Pulse software on your computer and connect the Pulse monitor card as shown in Figure 3. It is recommended that the following parameters be set before collecting any data.

SERIAL NUMBER

In the **Serial Number Box**, enter the serial number for the system you wish to monitor. Click on the **Set** button to program the serial number.

MONITOR DATE

In the **Monitor Date Box**, click on the **Set** button to set the monitor card clock to your computers clock.

Note: If this is not done, the default time for the monitor card is midnight, January 1, 1970.

VOLTAGE

In the **Voltage Box**, enter the source voltage the motor is being powered by. Click on the **Set** button to program the source voltage.

For further information concerning these parameters, see the Software Functions section of this manual.

TOOLS REQUIRED FOR INSTALLATION

- Drill & #19 Drill Bit (ϕ .166")
- #1 Phillips Screw Driver
- Wire Strippers
- Connector Crimping Tool (Sized for 16# wire)

MOUNTING PULSE MONITOR CARD

1. Locate available space in control enclosure to fit the required 3" X 5-1/4" X 2-1/2" envelope. Use a #19 drill bit (ϕ .166") and drill two holes 4.75" +/- .02" apart. Attach the mounting bracket using (2) #10-24 X 1/4" self-tapping screws at reference points **A**. See Figure 1.
2. Attach Pulse monitor card to mounting bracket using (4) #6-32 X 5/8" self-tapping screws at reference points **B**. See Figure 1.

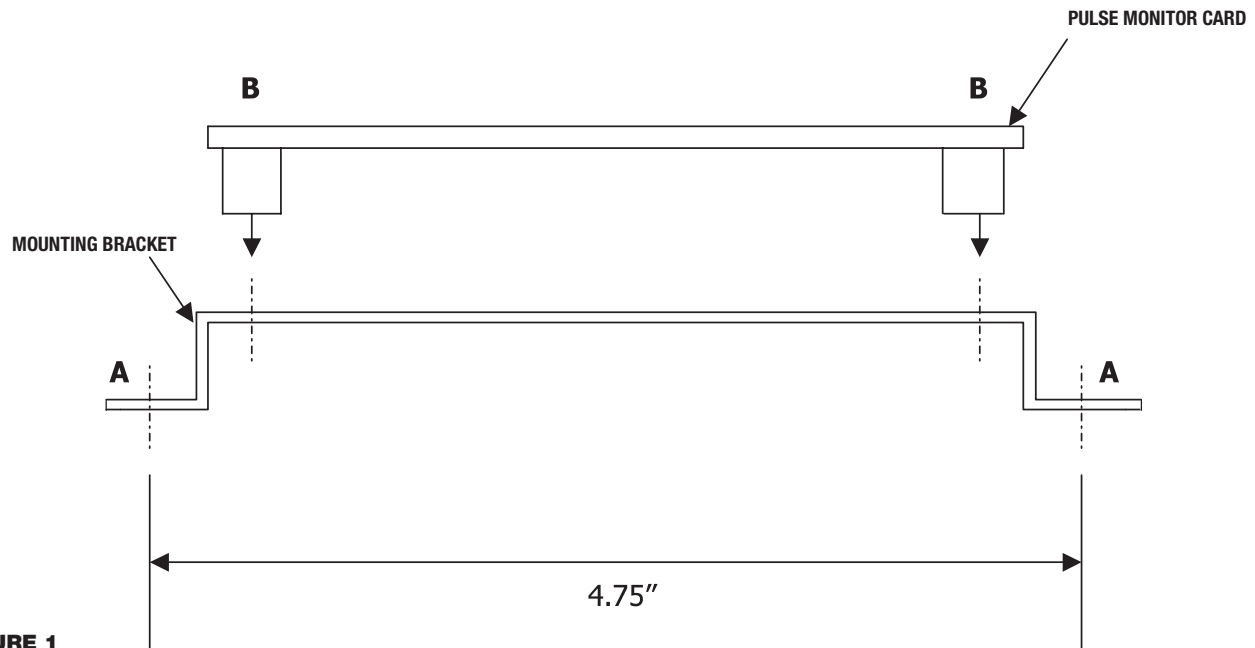


FIGURE 1

WIRING

- 1. 1) Review electrical schematic. See Figure 2.
- 2. 2) See Appendix 1 for detailed wiring diagrams specific to selected Yale-Lift-Tech arrangements.


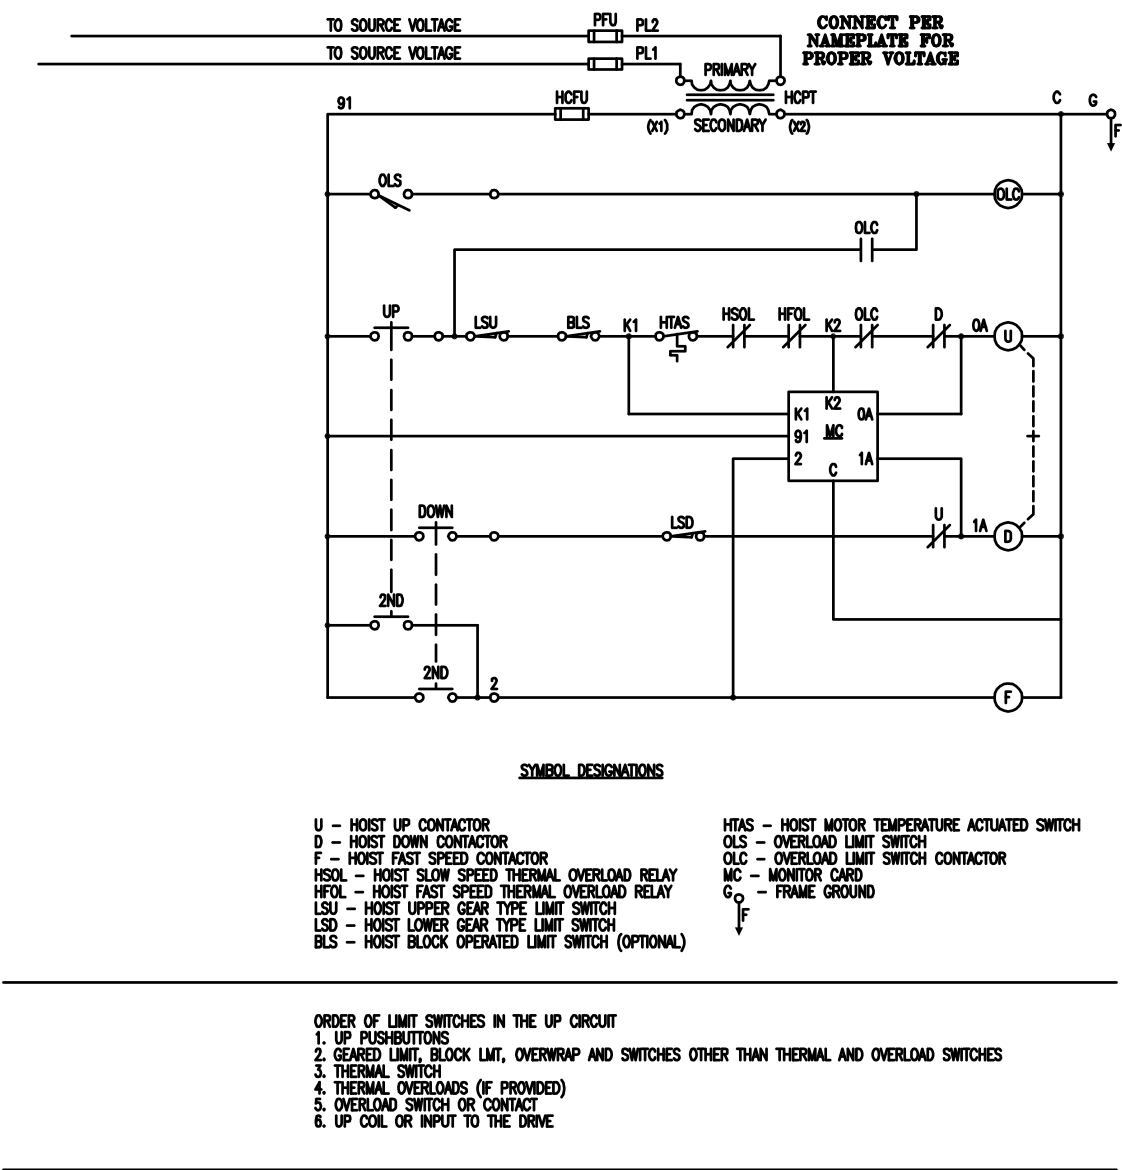


FIGURE 2

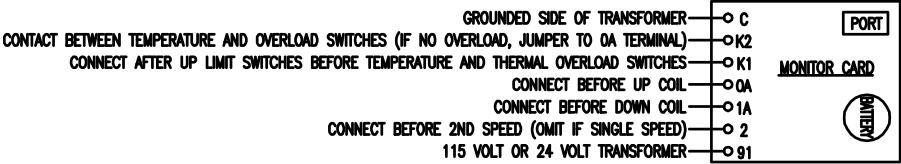

WARNING

The Pulse monitor card is electronic equipment that requires earth ground to reduce potential for false data. If a dedicated ground is not available, make sure reference ground to all control transformers have one common point.

SPECIFICATIONS

The Pulse monitor records the following information:

MOTOR EVENT PARAMETERS

Motor direction is referenced as Up or Down. The Pulse monitor can record up to two speed points. The speed points are referenced as **Slow and Fast**.

The following are all the designated motor events that can be recorded:

Motor Event	Data Filters
Motor Up Slow	(Normal Start), (Slow), (Up)
Motor Up Fast	(Normal Start), (Fast), (Up)
Motor Down Slow	(Normal Start), (Slow), (Down)
Motor Down Fast	(Normal Start), (Fast), (Down)
Plug Event Excessive Plugging	(Plug Event)
Motor Trip Up Thermal Shutdown	(Motor Trip), (Up)
Motor Trip Up Fast Thermal Shutdown	(Motor Trip), (Up)
Over Capacity Up	(Over Capacity), (Up)
Over Capacity Up Fast	(Over Capacity), (Up)

CURRENT MOTOR EVENTS

The Pulse monitor records all current motor events up to a maximum of 5119 events. After 5119, each new motor event will record over the oldest motor data beginning at memory count one.

HISTORY EVENTS

The Pulse monitor records the following motor events simultaneously into the **current and history** motor event memory registers. The motor events are plug event, motor trip and over capacity. The history event register can store up to 64 occurrences before recording over the oldest data located in memory count one.

CUMULATIVE RUN TIME

Every time the motor is energized, the Pulse monitor records how long it runs and adds to the cumulative total run time. Maximum time count is 1.9 million hours. Cumulative run time is updated every 16 motor starts. Overall operating time cannot be reset to zero. Cumulative Motor Starts - Pulse monitor keeps track of overall starts of a motor. Maximum start count is 4.29 billion. The cumulative memory location is updated every 16 motor starts. Overall starts cannot be reset to zero.

MOTOR STARTS

A motor start is recognized by energization of either the slow or fast motor winding for 300ms or more.

* Pulse monitor card revision 1.4.0 - counts a motor start when either the slow or fast winding of the motor is energized. No time constraints are in place for determining a motor start.

PLUG EVENT (EXCESSIVE PLUGGING)

A plug event is recorded when the directional contactor (node 0A or 1A) is energized four times within any two second period of operation. The plug event is recorded simultaneously into current motor data and history data.

MOTOR TRIP EVENT

A motor trip event will be recorded when the monitor card terminal K1 measures 115 volts* and terminal K2 is at 0 volts. If the event occurs with all three terminals K1, K2 and 0A being at 0 volts followed by numerous occurrences of terminal K1 sensing 115 volts* and K2 remaining at 0 volts, only one event will be recorded.

OVER CAPACITY EVENT

An overcapacity trip will be recorded when the monitor card terminals K1 and K2 measure 115 volts* and terminal 0A being at 0 volts. If the event occurs with all three terminals K1, K2 and 0A being at 0 volts followed by numerous occurrences of terminal K1 and K2 sensing 115 volts* and 0A remaining at 0 Volts, only one event will be recorded.

VOLTAGE

For every motor event, the voltage will be measured.**

TIME / DATE STAMP

All motor events are recorded along with the time and date the motor event occurred. The real time clock in the Pulse monitor card has a default starting time of midnight, January 1, 1970. Once the Pulse monitor software connects to the card, you can change the default time to your computer's time by pressing the **Set** button.

* All cited voltages are nominal referenced to ground using the 115-volt monitor card. If using the 24-volt card, all non-zero voltage references will be 24 volts.

** See Appendix 2 for discussion of accuracy.

DOWNLOADING MOTOR DATA

Motor event data stored in the Pulse monitor card can only be read using a personal computer (PC).

CONNECTIONS

1. Connect the Pulse monitor card, computer interface, PC and serial extension cables as shown in Figure 3.

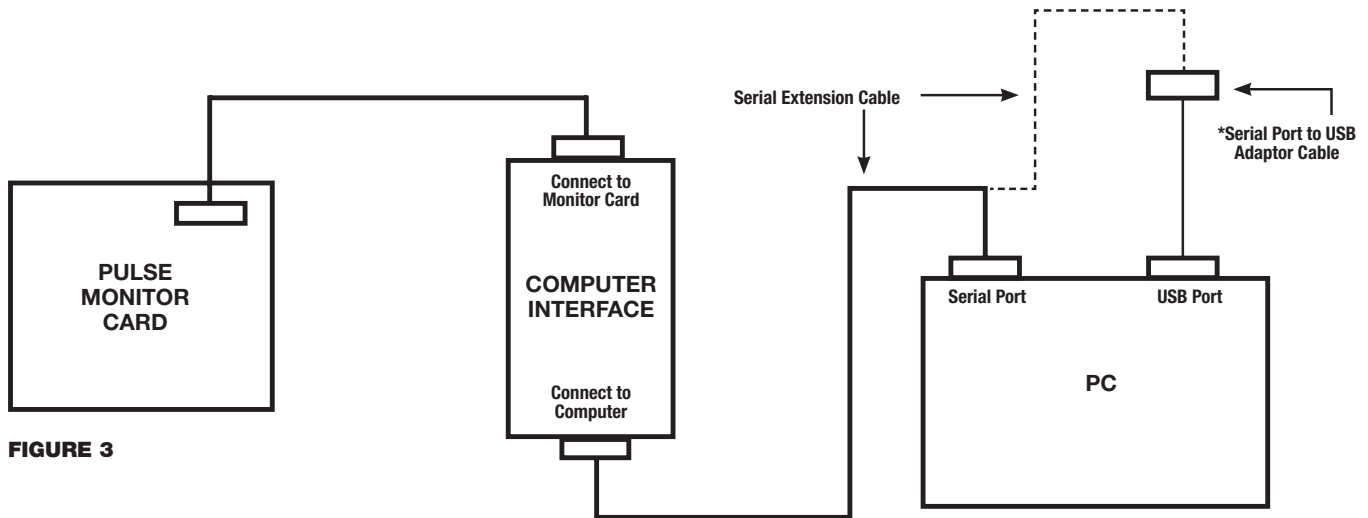


FIGURE 3

***Note:** For optional use of USB port or devices without a serial port.

2. Select com port
3. Open Pulse monitor software on computer and press the **Connect** button. See Figure 4.

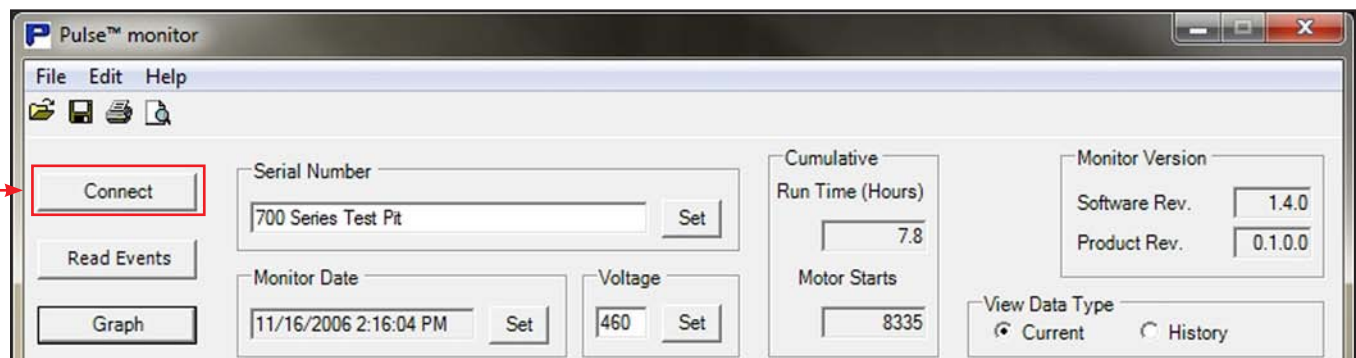


FIGURE 4

DOWNLOADING MOTOR DATA (CONTINUED)

4. If your connection was successful, the following message **Data loaded successfully** will be displayed in the lower left corner. The monitor date, monitor version and cumulative run time / start data will also appear. See Figure 5.

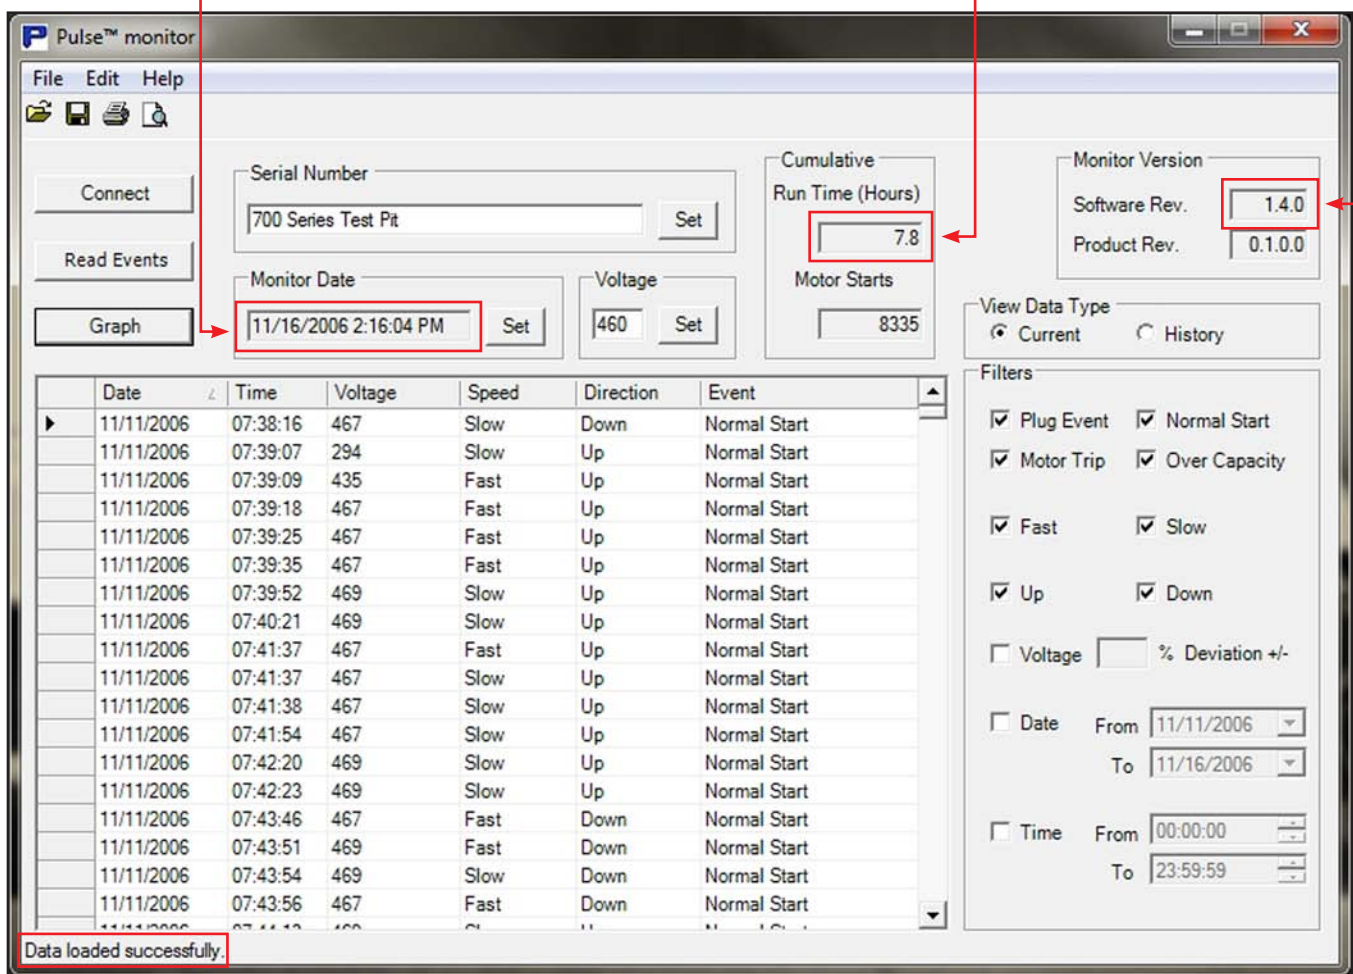


FIGURE 5

SOFTWARE FUNCTIONS

CUMULATIVE DATA

The Pulse monitor card keeps track of total motor run time and total motor starts for the motor being monitored. The displayed cumulative data is automatically updated every 16 motor starts. Note this data cannot be reset. See Figure 6.

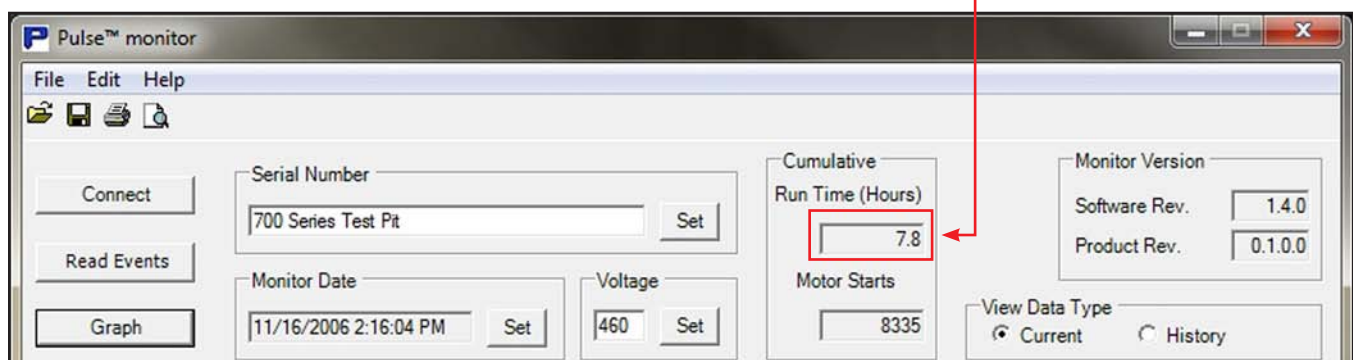


FIGURE 6

SOFTWARE FUNCTIONS (CONTINUED)

MONITOR VERSION

The Pulse monitor software and card revision number will automatically display once you connect to the card. See Figure 7.

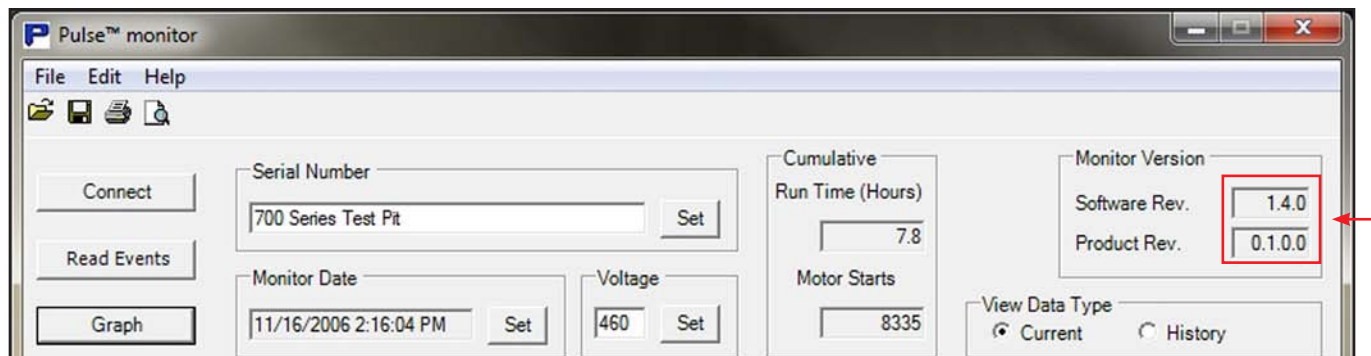


FIGURE 7

ASSIGNING SERIAL NUMBER

You can assign a specific serial number to the Pulse monitor card up to 20 characters for the system you wish to retrieve data from. Click on the serial number box and enter the respective serial number. Then press the **Set** button. See Figure 8.

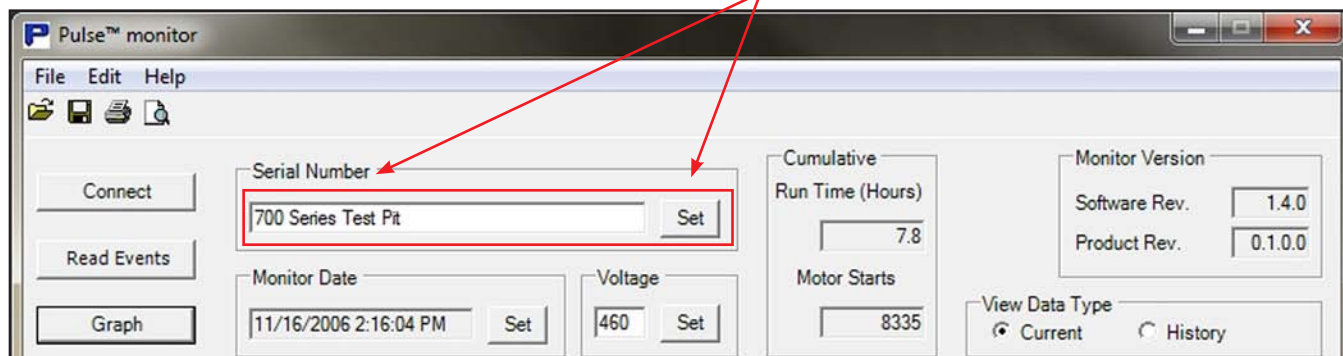


FIGURE 8

SETTING TIME AND DATE

The time / date of all Pulse monitor cards default to midnight, January 1, 1970. By pressing the **Set** button in the **Monitor Date** box, the software will automatically update the time in the Pulse monitor card to match the computer being used. See Figure 9.

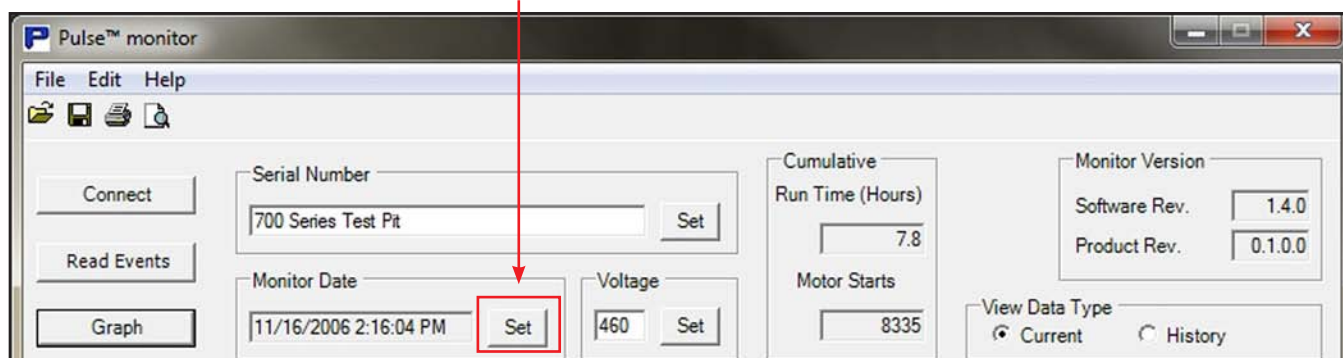


FIGURE 9

SOFTWARE FUNCTIONS (CONTINUED)

SETTING MOTOR VOLTAGE

The Pulse monitor card monitors the motor voltage of your system.* Enter the correct power supply voltage required for your system, and press the **Set** button in the **Voltage** box. See Figure 10.

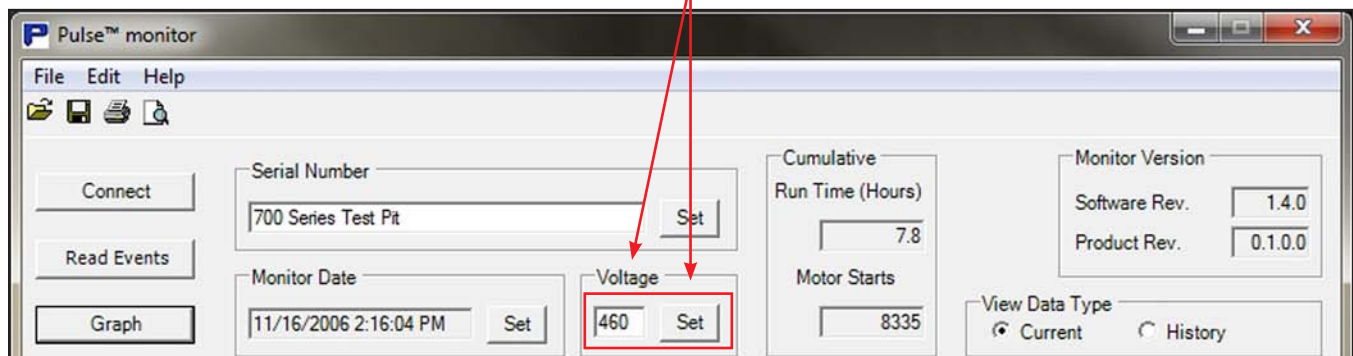


FIGURE 10

* See Appendix 2 for discussion of accuracy.

READING DATA

Pressing the **Read Events** button as shown in Figure 11 will read all data accumulated in the Pulse monitor card.

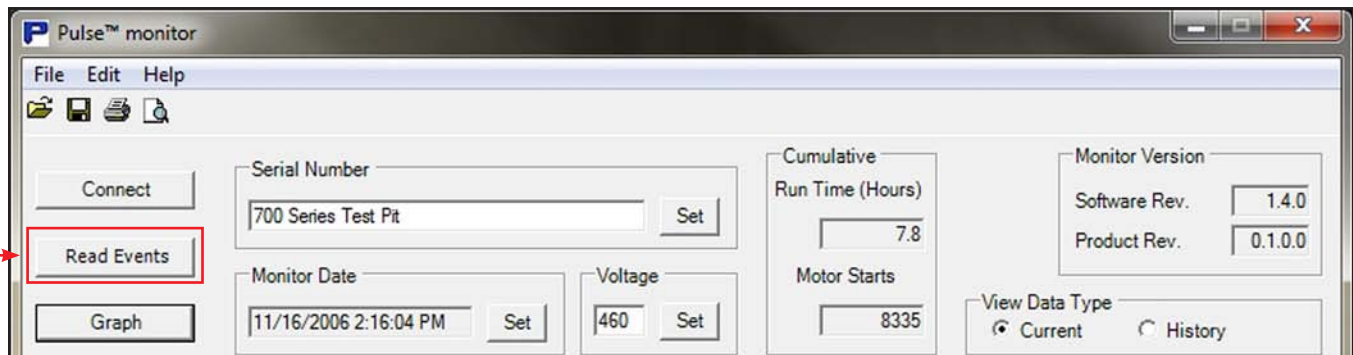


FIGURE 11

VOLTAGE GRAPH

Press the **Graph** button to read a graph showing a broad snapshot of what the voltage was for all motor events.* See Figure 12. **Note:** To view graph at a specific date or time, select pertinent date/ time in filter box.

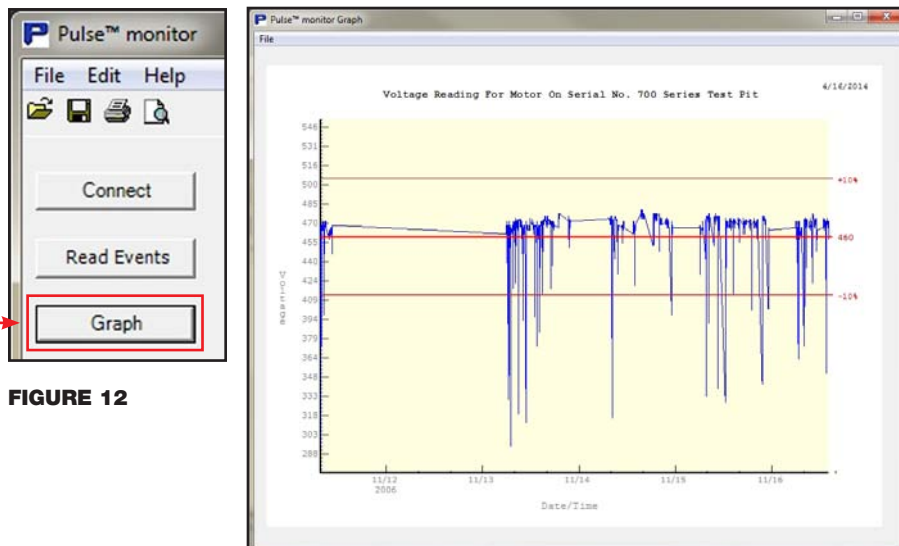


FIGURE 12

SOFTWARE FUNCTIONS (CONTINUED)

DATA FILTERS

Data filters allow you to narrow down the specific type of data you wish to view. The default selects all motor events for review. If there is specific data you do not wish to see, simply uncheck the respective box and that data will be removed from your data grid. The filters include the different motor event types, voltage deviation, specific date and specific time. See Figure 13.

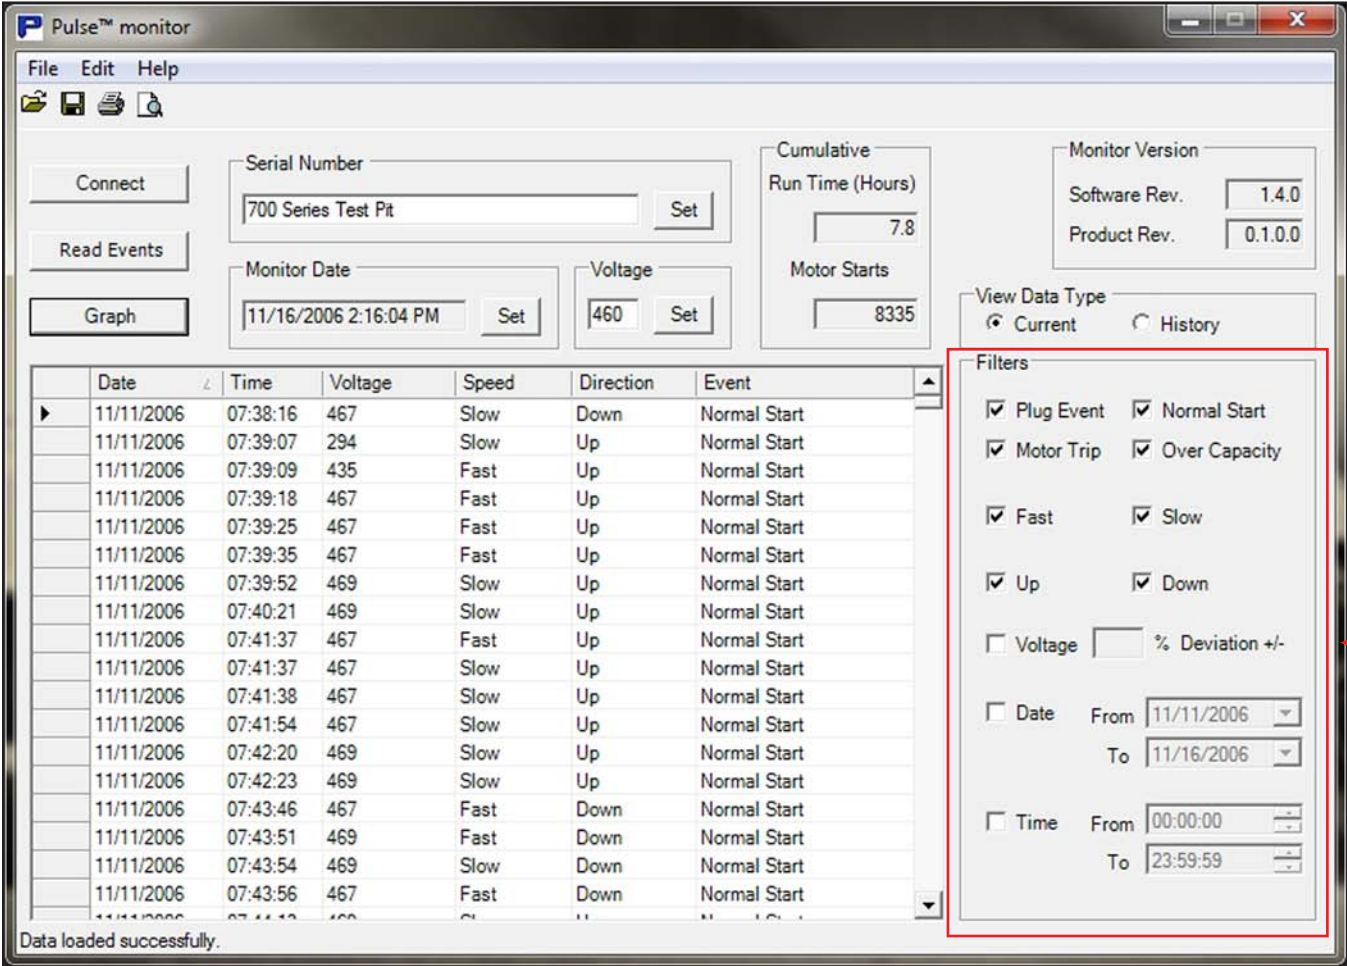


FIGURE 13

VIEW DATA TYPE (CURRENT VS. HISTORY)

The **View Data Type** box allows you to choose between Current data, which is the most recent motor events up to a maximum of 5119, or **History** data. **History** data is reserved specifically for Plug Event, Motor Trip and Over Capacity events. The maximum memory count is 64 for each event type. See Figure 14.

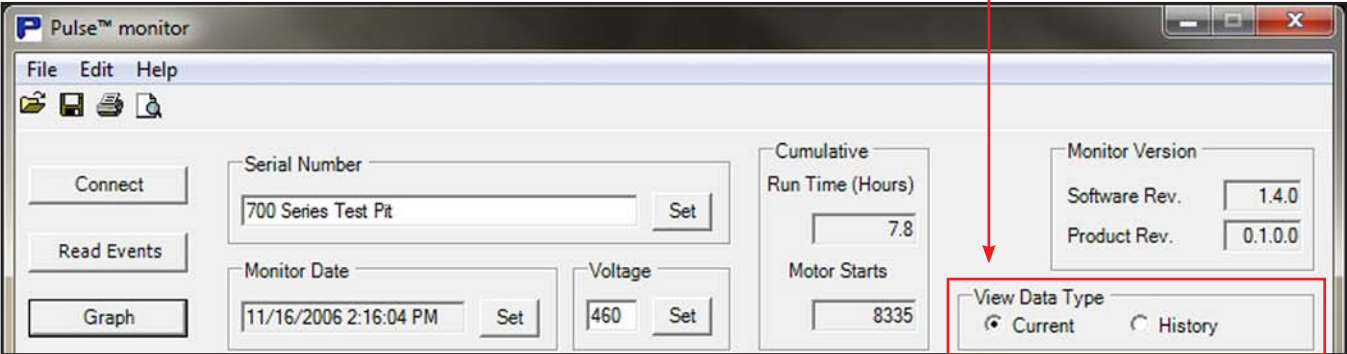


FIGURE 14

SOFTWARE FUNCTIONS (CONTINUED)

CHANGING ORDER OF DATA GRID

You can also change the order in which you view the motor data by clicking on any of the column headers in the data grid. For example, the default order for date and time begins with the oldest date and time stored. If you wish to begin viewing from the most recent data to the oldest data, select the **Date and/or Time** headers and this will reverse the order. See Figure 15.

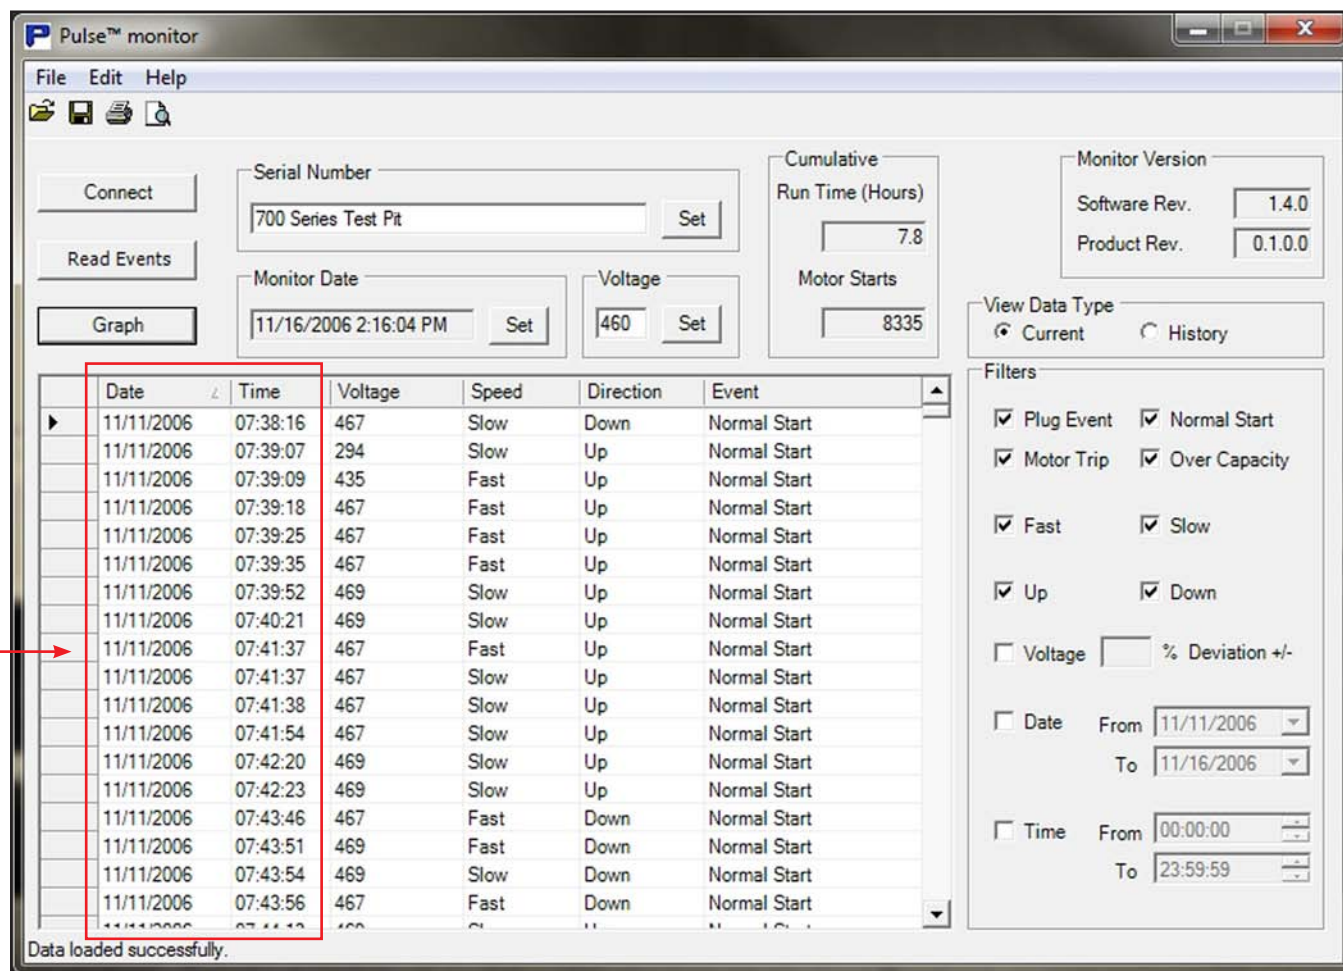


FIGURE 15

SAVING AND PRINTING MOTOR DATA

Once you have successfully downloaded the motor data to the Pulse monitor, you can save or print the data using either the **File Menu** or **Save** and **Print Hot Buttons**. The file will be automatically saved as an **.xml** file. Use the Pulse monitor software any time you wish to review or print the file.


TROUBLESHOOTING CHART

Symptom	Corrective Action
Prompted Message: Pulse monitor could not be read. Check cable connections and/or 9V battery located in the computer interface before attempting to reconnect.	<ol style="list-style-type: none"> 1. Check to make sure the USB connections and/or serial connections are secure. 2. Make sure the computer interface has a 9V battery installed and that the battery is good. 3. Make sure printed circuit board in the computer interface was not inadvertently switched around when the 9V battery was installed. Labeled connectors on printed circuit board must match interface labeling. le: Connect to Computer or Connect to monitor card 4. Replace 9-wire serial cables. If the problem still exists, replace the computer interface.
Prompted Message: This card is blank, no records have been written to it yet; data displayed is not accurate.	If the card is new, upon connection you will get this message. Once the Pulse monitor card begins accumulating data, the message will disappear.
False motor trips. Example: Thermal trip in down direction for hoist motion.	Check K1 or K2 input of Pulse card for floating voltage. Example: If motor is moving in down direction, K1 and K2 should read 0 V. If K1 or K2 reads other than 0 V, check all control transformers to verify they have a common ground. Provide common ground as necessary.
Event column of the data grid is blank.	When the storage of events has reached memory capacity, a blank event is produced to signify the overwriting of older events. A blank event will occur in both the current and history data. Disregard as an actual event.
Event has been recorded with a 1971 date stamp after the date/time has been set on the card.	The date indicates that as power was applied to terminal 91 on the monitor card, voltage was already present on either terminal K1,K2,0A or 1A, then removed within 1 second of power being applied to terminal 91. In the first second of turning on power, avoid applying a run command.
Motor Starts field equals 4294967295 and the Run Time (Hours) field equals 1193046.5	The card has not accumulated a total of 16 motor starts which is required for the Motor Starts and Run Time fields to update. Accumulate a minimum of 16 motor starts before attempting to read card data.
Data not downloading	Check com port on adaptor and pulse monitor software.

APPENDIX 1

WIRING DIAGRAMS

2-Speed Global Series 3, with geared limit switch, motor thermal switch, thermal overload relays and overcapacity limit switch.

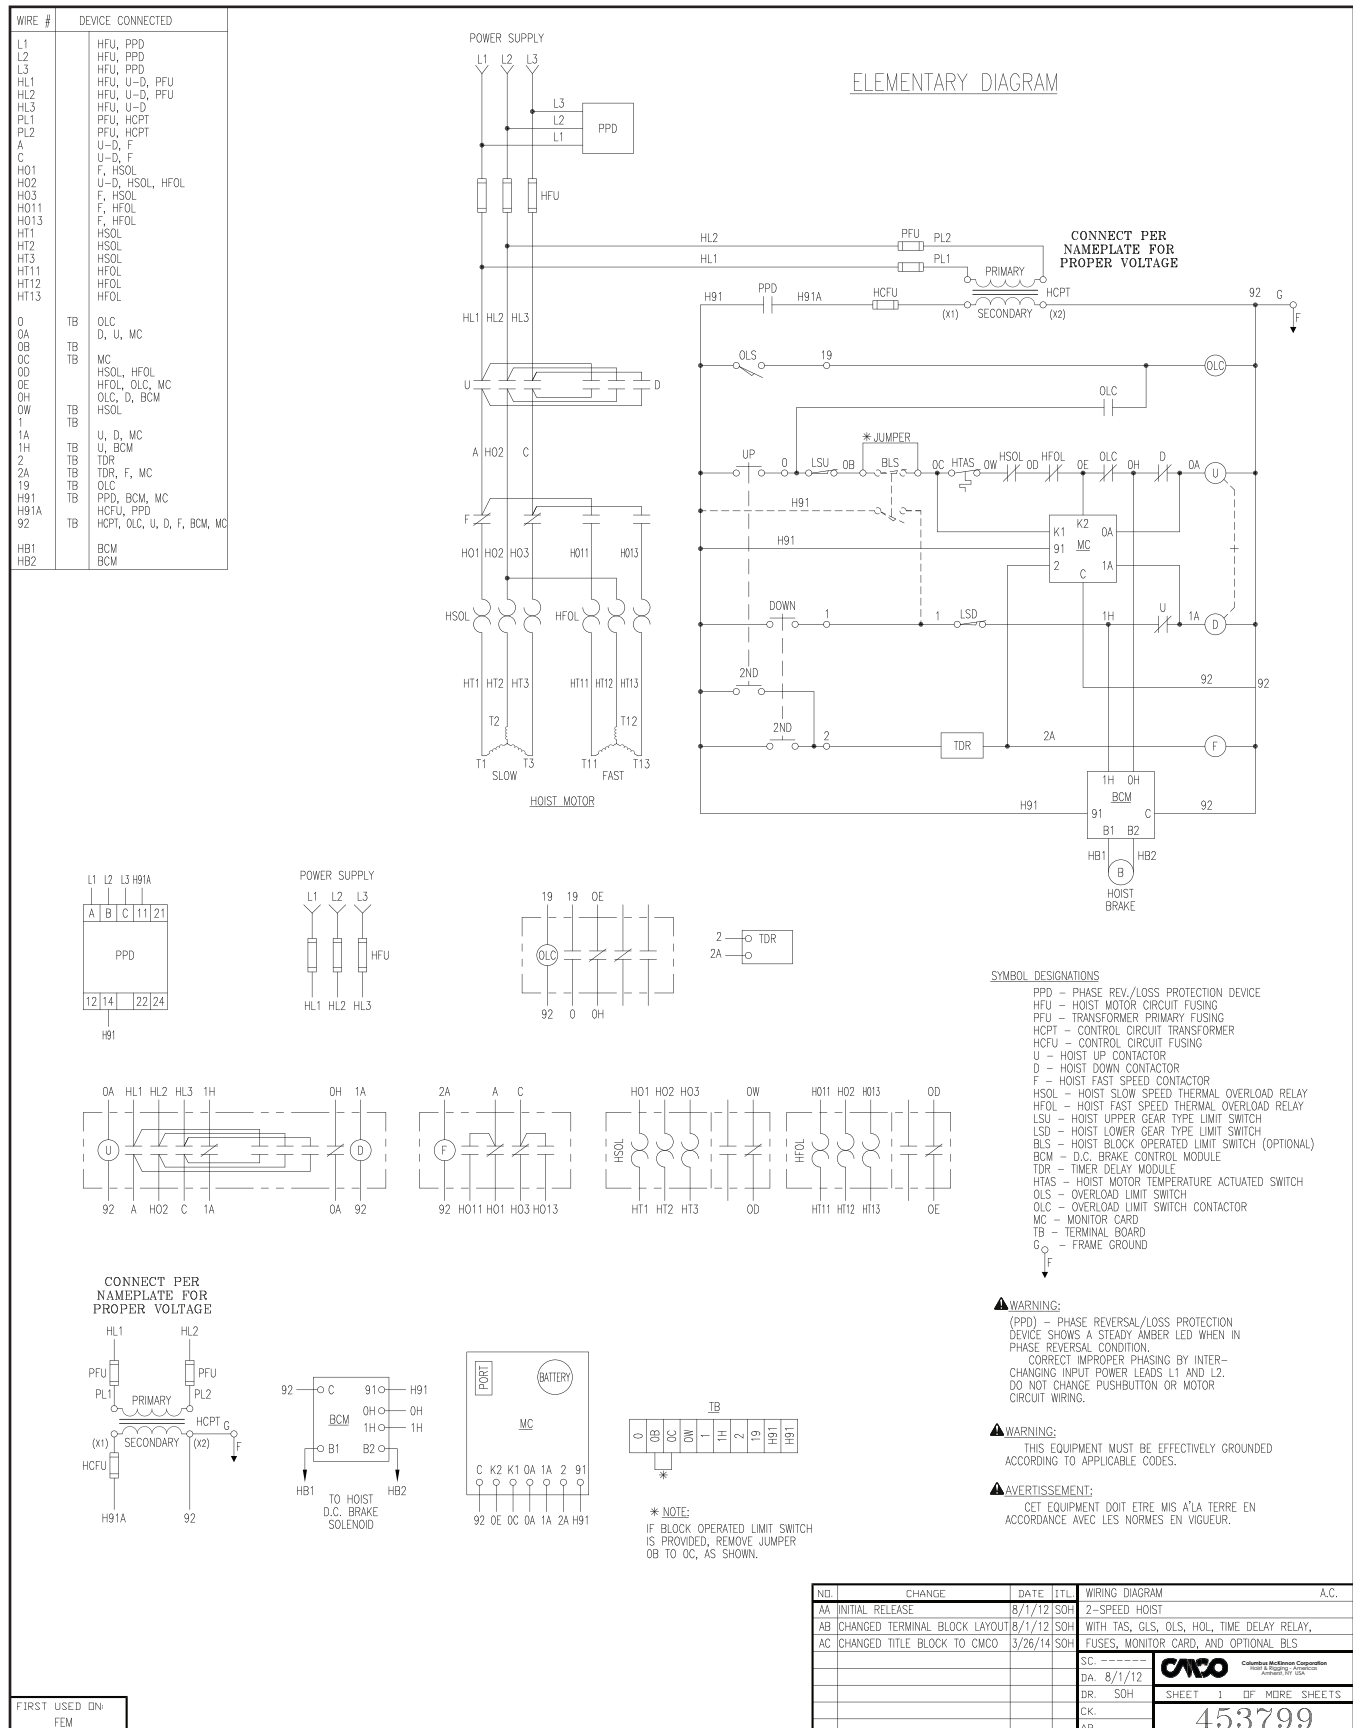

WIRING DIAGRAMS

WIRE # **DEVICE CONNECTED**

L1	HFU, PPD
L2	HFU, PPD
L3	HFU, PPD
HL1	HFU, INVERTER, PFU
HL2	HFU, INVERTER, PFU
HL3	HFU, INVERTER
HT1	INVERTER
HT2	INVERTER
HT3	INVERTER
PL1	PFU, HCPT
PL2	PFU, HCPT
0	OLC
OB	MC
OC	OLC, INTERFACE CARD
OW	OLC, MC
1	INTERFACE CARD, MC
2	INTERFACE CARD
3	INTERFACE CARD
7	INTERFACE CARD, OLC, MC
10	INTERFACE CARD, SPEED SENSOR
11	INTERFACE CARD, SPEED SENSOR
12	INTERFACE CARD, SPEED SENSOR
17	BCM, BRAKE OUTPUT RELAY
19	OLC, SA
H91	BRAKE OUTPUT RELAY, HCFU, MC, BCM, OLC
92	HCPT, BMC, OLC, SA, MC
HB1	INTERFACE CARD
HB2	BCM
HDB1	INVERTER
HDB2	INVERTER

POWER SUPPLY

L1 L2 L3

HFU

HL1 HL2 HL3

PFU PL1 PL2

HCPT

H91

19

92

HT1 HT2 HT3

HOIST MOTOR

CONNECT PER NAMEPLATE FOR PROPER VOLTAGE

R/L1S/L2/T/L3

B1

B2

U/T1/V/T2/W/T3

WARNING:
CORRECT IMPROPER PHASING BY INTER-
INTERCHANGING ANY TWO OUTPUT POWER LEADS
U/T1, V/T2, OR W/T3
DO NOT CHANGE PUSHBUTTON WIRING.

WARNING:
THIS EQUIPMENT MUST BE EFFECTIVELY
GROUNDED ACCORDING TO APPLICABLE CODES.

AVERTISSEMENT:
CET EQUIPEMENT DOIT ETRE MIS A LA TERRE
EN ACCORDANCE AVEC LES NORMES EN VIGUEUR.

SPEED REFERENCE NOTE:
THIS WIRING DIAGRAM SHOWS WIRING FOR
3 SPEED CONTROL, 2-SPEED, 3-SPEED,
2-STEP INFINITELY VARIABLE, AND 3-STEP
INFINITELY VARIABLE CONTROL. IF AVAILABLE,
ACTUAL SPEED REFERENCE IS PER ORDER.

FOR NIB OPERATION:
DRIVE CONTAINS PROGRAMMING SPECIFIC TO
NO LOAD BRAKE OPERATION:
**DO NOT ALTER INVERTER PROGRAMMING
BEYOND USER ACCESSIBLE PARAMETERS
WITHOUT CONSULTING FACTORY**

SYMBOL DESIGNATIONS

HFU = HOIST MOTOR CIRCUIT FUSING
PFU = TRANSFORMER PRIMARY FUSING
HCPT = CONTROL CIRCUIT TRANSFORMER
HCFU = CONTROL CIRCUIT FUSING
LSU = UPPER GEAR TYPE LIMIT SWITCH
LSD = LOWER GEAR TYPE LIMIT SWITCH
BLS = HOIST BLOCK OPERATED LIMIT SWITCH
OLC = OVERLOAD LIMIT SWITCH
BCM = D.C. BRAKE CONTROL MODULE
SA = SURGE ABSORBER
HDBR = DYNAMIC BRAKING RESISTOR
MC = MONITOR CARD
TB = TERMINAL BOARD
G = FRAME GROUND

MOTOR CONNECTION TABLE:

CONNECT LOW VOLTAGE (YY) FOR 200-230V SUPPLIES
CONNECT HIGH VOLTAGE (Y) FOR 380-460V SUPPLIES

LOW VOLTAGE (YY)

HT1	HT2	HT3
T1	T2	T3
T7	T8	T9
T4	T5	T6

HIGH VOLTAGE (Y)

HT1	HT2	HT3
T1	T2	T3
T7	T8	T9
T4	T5	T6

GEARCASE SPEED SENSOR

GSS

BRN (+)

WHT (-)

BLU (-)

10

11

12

Y+ P1

RP PC

AC

IMPULSE G+ MINI INVERTER

R+ R- S+ S- IG AC WP

P1 P2 P3 P4 A1 A2 A3 A4 A5 A6 A7 A8 A9 A10 A11 A12

S1 S2 S3 S4 S5 S6 S7 S8 S9 S10 S11 S12

1H 1H 1H 1H 1H 1H 1H 1H 1H 1H 1H 1H

11 H91 17

92 OH 1H 2 3 7

R/L1S/L2/T/L3 B1 B2 U/T1/V/T2/W/T3

MC

PORT BATTERY

C K2 K1 0A 1A 2 91

92 OW OC 7 1H H91

IB

0 OB OC OW 1 2 3 7 19

IB

H91 S2 S7 HB1 HB2 HT1 HT2 HT3

92 S2 S7 HB1 HB2 HT1 HT2 HT3

NOTE:
BLOCK LIMIT SWITCH IS OPTIONAL.
IF BLOCK LIMIT SWITCH IS PROVIDED
REMOVE JUMPER OB TO OC AS SHOWN

WIRING DIAGRAM

GLOBAL HOIST NIB VFD CONTROL

W/ OLS, OPT, BLS

REVISIONS

Rev.	Description	Date	By
150363	AB REMOVED HB1/HB2 FROM TB; OW WAS OH	1/28/2014	RTS
150332	AA RELEASED	11/19/2013	RTS
150332	01 RELEASED	11/19/2013	RTS
EDW	Rev. Description of change	Date	By


DESIGN AUTHORITY

Design Authority: Wadsworth
Drawn: PH11-7
Approved: 11/19/2013
Checked: 11/19/2013
Dimensional Units: INCH
Tolerances: .0005, .001, .002, .003, .004, .005, .006, .007, .008, .009, .010, .012, .015, .020, .025, .030, .035, .040, .045, .050, .055, .060, .065, .070, .075, .080, .085, .090, .095, .100, .105, .110, .115, .120, .125, .130, .135, .140, .145, .150, .155, .160, .165, .170, .175, .180, .185, .190, .195, .200, .205, .210, .215, .220, .225, .230, .235, .240, .245, .250, .255, .260, .265, .270, .275, .280, .285, .290, .295, .300, .305, .310, .315, .320, .325, .330, .335, .340, .345, .350, .355, .360, .365, .370, .375, .380, .385, .390, .395, .400, .405, .410, .415, .420, .425, .430, .435, .440, .445, .450, .455, .460, .465, .470, .475, .480, .485, .490, .495, .500, .505, .510, .515, .520, .525, .530, .535, .540, .545, .550, .555, .560, .565, .570, .575, .580, .585, .590, .595, .600, .605, .610, .615, .620, .625, .630, .635, .640, .645, .650, .655, .660, .665, .670, .675, .680, .685, .690, .695, .700, .705, .710, .715, .720, .725, .730, .735, .740, .745, .750, .755, .760, .765, .770, .775, .780, .785, .790, .795, .800, .805, .810, .815, .820, .825, .830, .835, .840, .845, .850, .855, .860, .865, .870, .875, .880, .885, .890, .895, .900, .905, .910, .915, .920, .925, .930, .935, .940, .945, .950, .955, .960, .965, .970, .975, .980, .985, .990, .995, 1.000, 1.005, 1.010, 1.015, 1.020, 1.025, 1.030, 1.035, 1.040, 1.045, 1.050, 1.055, 1.060, 1.065, 1.070, 1.075, 1.080, 1.085, 1.090, 1.095, 1.100, 1.105, 1.110, 1.115, 1.120, 1.125, 1.130, 1.135, 1.140, 1.145, 1.150, 1.155, 1.160, 1.165, 1.170, 1.175, 1.180, 1.185, 1.190, 1.195, 1.200, 1.205, 1.210, 1.215, 1.220, 1.225, 1.230, 1.235, 1.240, 1.245, 1.250, 1.255, 1.260, 1.265, 1.270, 1.275, 1.280, 1.285, 1.290, 1.295, 1.300, 1.305, 1.310, 1.315, 1.320, 1.325, 1.330, 1.335, 1.340, 1.345, 1.350, 1.355, 1.360, 1.365, 1.370, 1.375, 1.380, 1.385, 1.390, 1.395, 1.400, 1.405, 1.410, 1.415, 1.420, 1.425, 1.430, 1.435, 1.440, 1.445, 1.450, 1.455, 1.460, 1.465, 1.470

APPENDIX 1 (CONTINUED)



WIRING DIAGRAMS

2-Speed 700 Series hoist with geared limit switch, block limit switch and motor thermal switch.

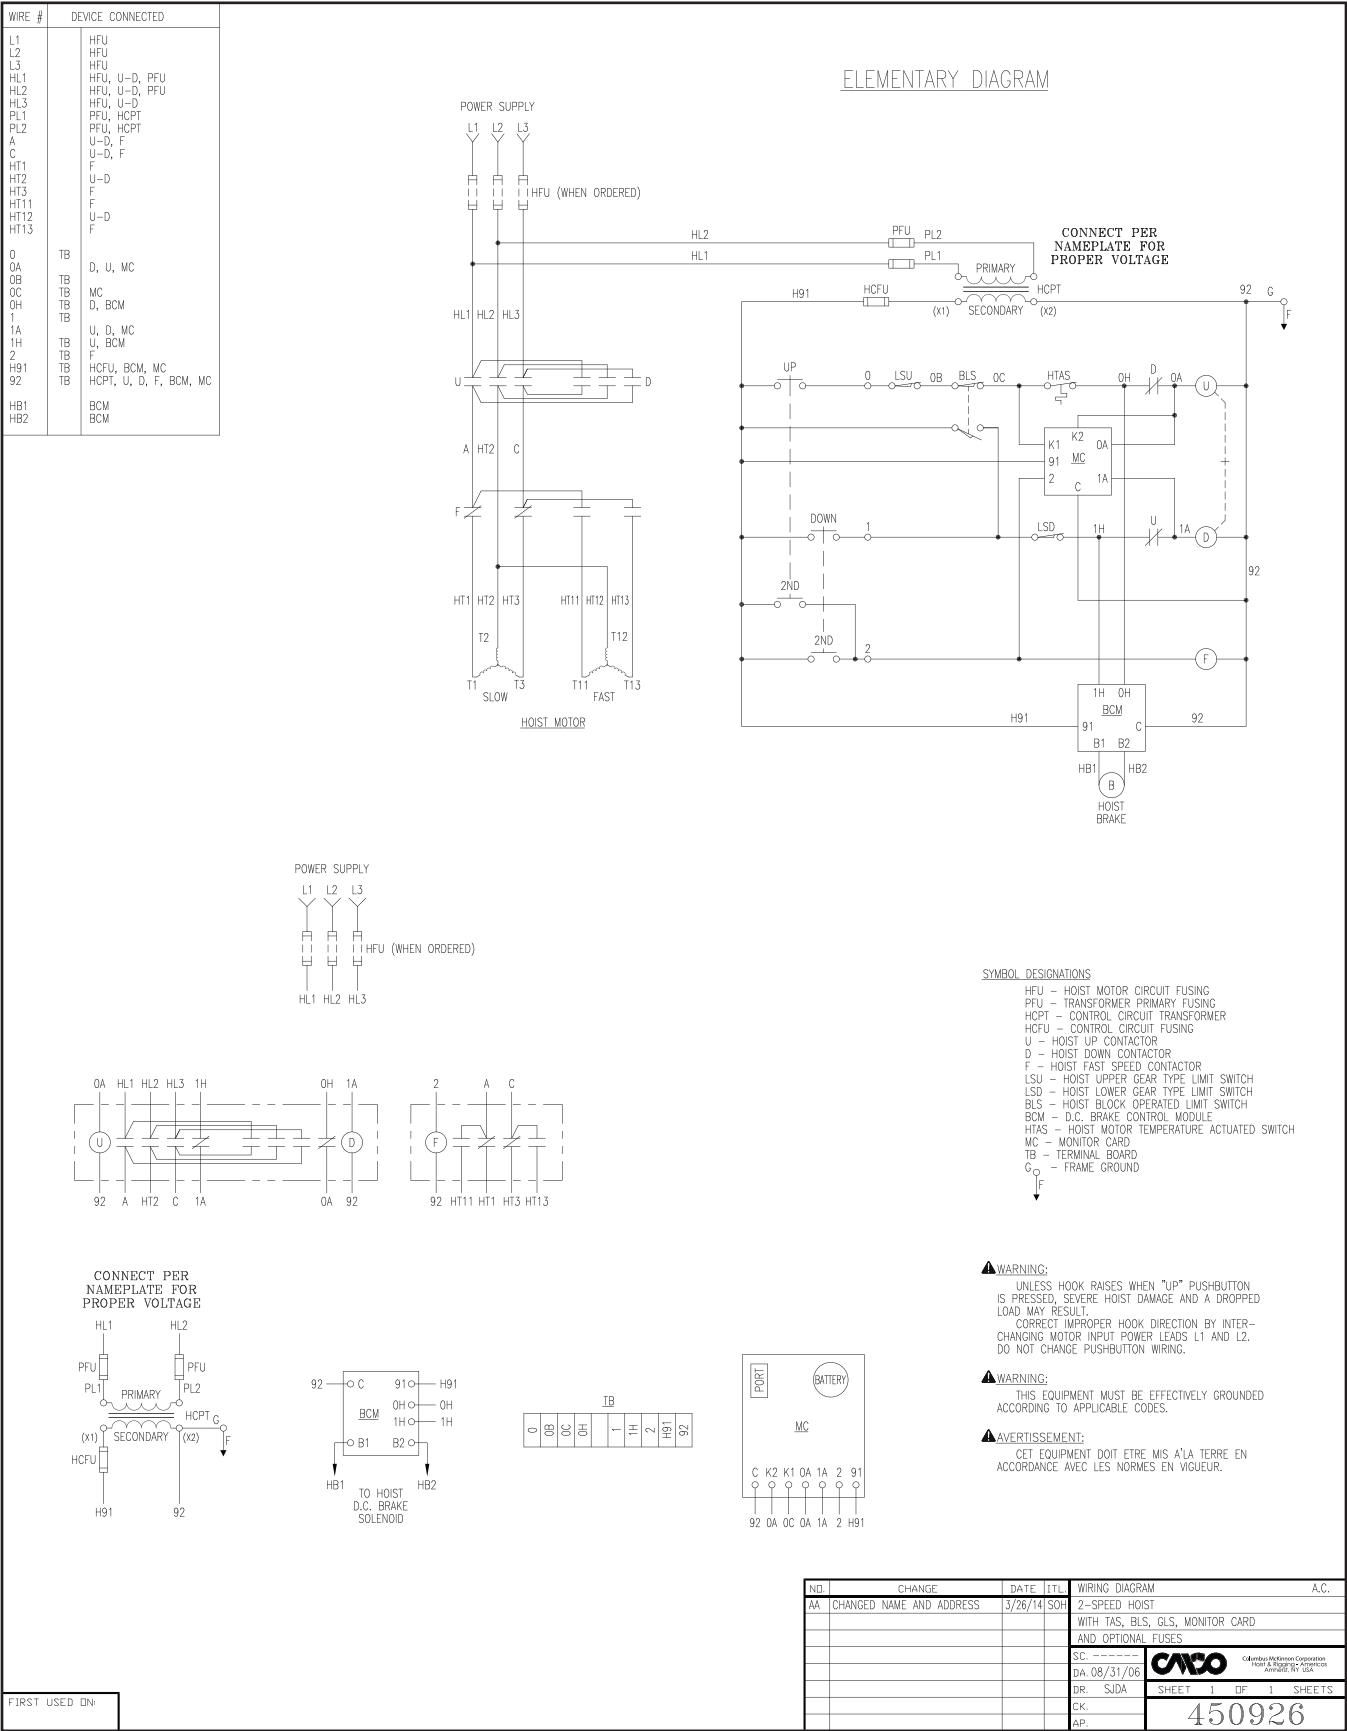



WIRING DIAGRAMS

WIRE #	DEVICE CONNECTED
HL1	U-D, HCP1
HL2	U-D, HCP1
HL3	U-D, HCP1
A	U-D, F
C	U-D, F
F	U-D, F
HT1	F
HT2	U-D
HT3	F
HT11	F
HT13	F
OA	
OB	D, U, MC
OW	MC
OH	D
I	
1A	U, D, MC
1H	U, MC
	F, MC
H91	HCP1, MC
92	HCP1, G, U, D, F, MC
B1	U-D
B2	U, D

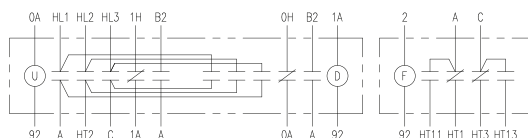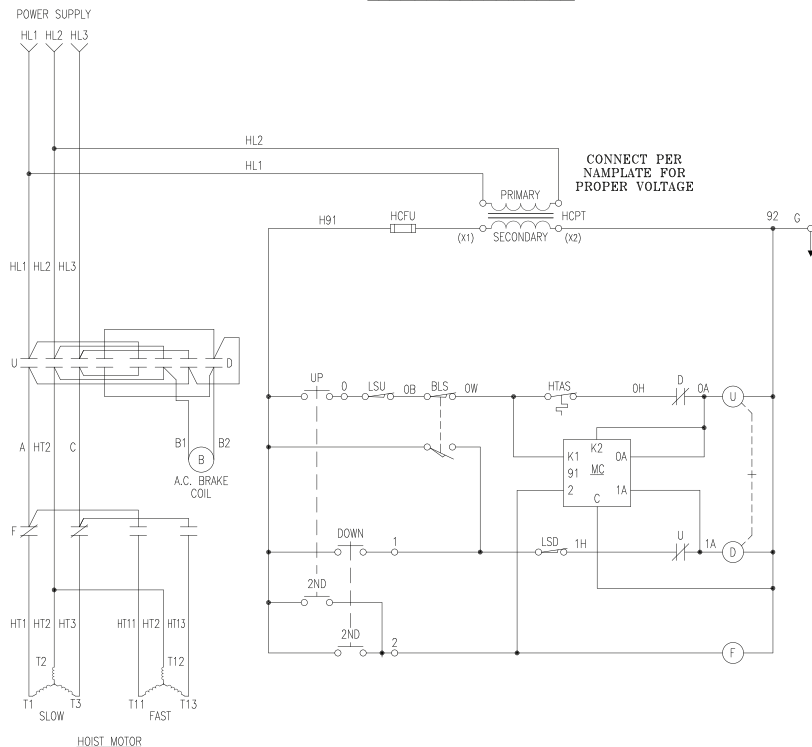

SYMBOL DESIGNATIONS

HCPT - CONTROL CIRCUIT TRANSFORMER
HCFU - CONTROL CIRCUIT FUSING
U - HOIST UP CONTACTOR
D - HOIST DOWN CONTACTOR
F - HOIST FAST SPEED CONTACTOR
BLS - HOIST BLOCK OPERATED LIMIT SWITCH
LSD - HOIST UPPER GEAR TYPE LIMIT SWITCH
LSD - HOIST LOWER GEAR TYPE LIMIT SWITCH
HTAS - HOIST MOTOR TEMPERATURE ACTIVATED SWITCH
MC - MONITOR CARD
T - TERMINAL BOARD
G - FRAME GROUND
F

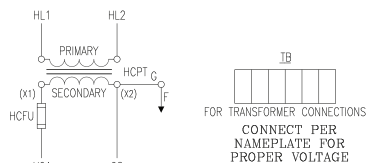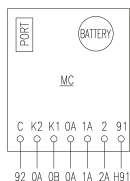

⚠ WARNING:

UNLESS HOOK RAISES WHEN "UP" PUSHBUTTON IS PRESSED, SEVERE HOIST DAMAGE AND A DROPPED LOAD MAY RESULT.


CORRECT IMPROPER HOOK DIRECTION BY INTER-CHANGING MOTOR INPUT POWER LEADS L1 AND L2. DO NOT CHANGE PUSHBUTTON WIRING.

⚠ WARNING:

THIS EQUIPMENT MUST BE EFFECTIVELY GROUNDED
ACCORDING TO APPLICABLE CODES.




⚠ Avertissement

CET EQUIPMENT DOIT ETRE MIS A LA TERRE EN
ACCORDANCE AVEC LES NORMES EN VIGUEUR.


ND	CHANGE	DATE	ITL	WIRING DIAGRAM	A.C.
AA	INITIAL RELEASE	3/26/14	SOH	2-SPEED HOST WITH TAS, BLs, GLs, AND MONITOR CARD	
				SC. ----- DA. 3/26/14 DR. SOH CK. R.P.	 <small>© 2008 Cisco Systems, Inc. All rights reserved. Cisco Systems, Inc. 2008, NY, USA</small> SHEET 1 OF MORE SHEETS <div style="font-size: 2em; font-weight: bold; text-align: center;">454596</div>

WIRING DIAGRAMS

WIRE #	DEVICE	CONNECTED
L1		HFU
L2		HFU
L3		HFU
HL1		HFU, U-D, PFU
HL2		HFU, U-D, PFU
HL3		HFU, U-D
PL1		PFU, HCPT
PL2		PFU, HCPT
HT1		U-D
HT2		U-D
HT3		U-D
0	TB	OLC
0A		D, U, MC
0B	TB	
0C		MC
0D		OLC, MC
0H		D
1	TB	
1A		U, D, MC
1B		U
19		OLC
H91		TCFU, MC
92		HCPT, G, OLC, U, D, MC
H91		U-D
H92		U-D
H93 **	TB	U-D

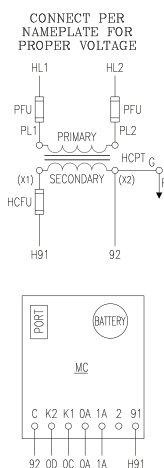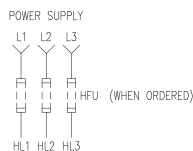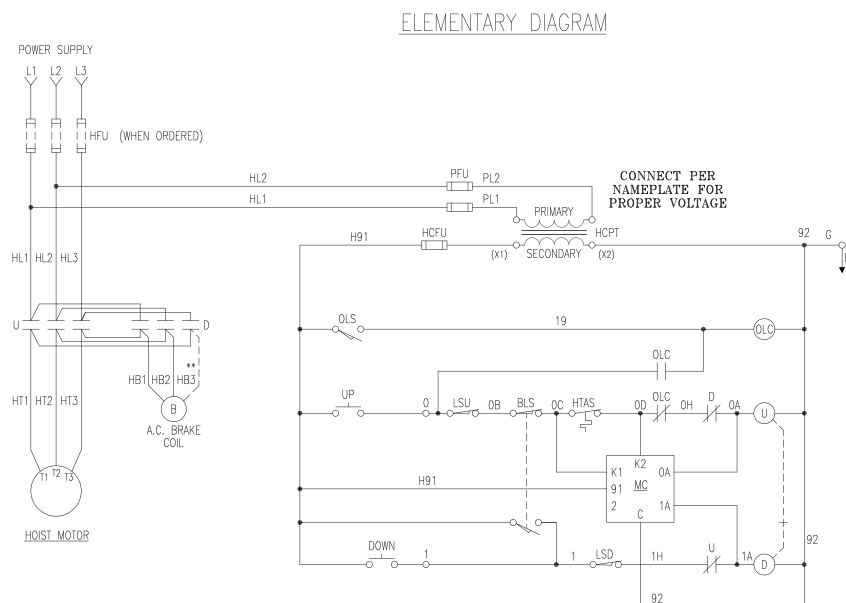

- SYMBOL DESIGNATIONS**
- HFU = HOIST MOTOR CIRCUIT FUSING
 - PFU = TRANSFORMER PRIMARY FUSING
 - HCPT = CONTROL CIRCUIT TRANSFORMER
 - HCPU = CONTROL CIRCUIT FUSING
 - HU = HOIST UP CONTACTOR
 - D = HOIST DOWN CONTACTOR
 - OLS = OVERLOAD LIMIT SWITCH
 - OLC = OVERLOAD LIMIT SWITCH CONTACTOR
 - LSU = HOIST UPPER GEAR TYPE LIMIT SWITCH
 - LSD = HOIST LOWER GEAR TYPE LIMIT SWITCH
 - BLS = HOIST BLOCK OPERATED LIMIT SWITCH
 - HTAS = HOIST MOTOR TEMPERATURE ACTUATED SWITCH
 - MC = MONITOR CARD
 - TB = TERMINAL BOARD
 - G = FRAME GROUND
 - F

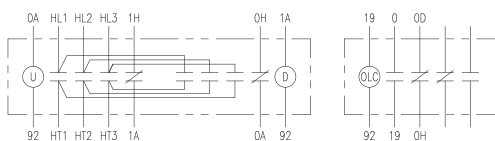

0	0B	0C	0D	1	1H	19		H91	92
---	----	----	----	---	----	----	--	-----	----

** HB3 NEEDED ONLY WHEN A 3-PHASE BRAKE IS CONNECTED.

⚠ WARNING:

UNLESS HOOK RAISES WHEN "UP" PUSHBUTTON IS PRESSED, SEVERE HOIST DAMAGE AND A DROPPED LOAD MAY RESULT.

CORRECT IMPROPER HOOK DIRECTION BY INTERCHANGING MOTOR INPUT POWER LEADS L1 AND L2. DO NOT CHANGE PUSHBUTTON WIRING.

⚠ WARNING:
THIS EQUIPMENT MUST BE EFFECTIVELY GROUNDED
ACCORDING TO APPLICABLE CODES.

⚠ AVERTISSEMENT:
CET EQUIPMENT DOIT ETRE MIS A LA TERRE EN
ACCORDANCE AVEC LES NORMES EN VIGUEUR.

ND	CHANGE	DATE	ITL	WIRING DIAGRAM	A.C.
DA	CHANGED NAME AND ADDRESS	3/26/14	SOH	1-SPEED HOIST	
				WITH TAS, BLS, GLS, FUSES, OVERLOAD SWITCH	
				AND MONITOR CARD	
				SC. -----	
				DA. 12/31/06	
				DR. SJDA	
				CK.	
				42	

WIRING DIAGRAMS

WIRE #	DEVICE CONNECTED
L1	HFU
L2	HFU
L3	HFU
HL1	HFU, HB, INVERTER, PFU
HL2	HFU, HB, INVERTER, PFU
HL3	HFU, HB, INVERTER
HT1	INVERTER
HT2	INVERTER
HT3	INVERTER
PL1	PFU, HCPT
PL2	PFU, HCPT
0	OLC
OB	MC
OC	OLC, MC
OD	OLC, INTERFACE CARD, MC
OH	MC
1	INTERFACE CARD, MC
2	INTERFACE CARD
3	INTERFACE CARD
4	INTERFACE CARD
5	INTERFACE CARD
17	HB, SA, BRAKE OUTPUT RELAY
19	OLC, SA
H91	HCPU, BRAKE OUTPUT RELAY
92	HCPT, HB, OLC, SA, MC
92	INTERFACE CARD
HB1	HB
HB2	HB
HB3	HB
HDB1	INVERTER
HDB2	INVERTER

ELEMENTARY DIAGRAM

CONNECT PER NAMEPLATE FOR PROPER VOLTAGE

CONNECT PER NAMEPLATE FOR PROPER VOLTAGE

IMPULSE G+ MINI INVERTER

SYMBOL DESIGNATIONS

HFU - HOIST MOTOR CIRCUIT FUSING
 PFU - TRANSFORMER PRIMARY FUSING
 HCPT - CONTROL CIRCUIT TRANSFORMER
 HCFU - CONTROL CIRCUIT FUSING
 BLS - BLOCK OPERATED LIMIT SWITCH
 LSU - UPPER GEAR TYPE LIMIT SWITCH
 LSD - LOWER GEAR TYPE LIMIT SWITCH
 OLS - OVERLOAD LIMIT SWITCH
 OLC - OVERLOAD LIMIT SWITCH CONTACTOR
 HB - BRAKE RELAY
 SA - SURGE ABSORBER
 HDBR - DYNAMIC BRAKING RESISTOR
 HTAS - HOIST MOTOR TEMPERATURE ACTUATED SWITCH
 MC - MONITOR CARD
 TB - TERMINAL BOARD
 G - FRAME GROUND

FIRST USED ON:

FROM: 45092801

WARNING:

UNLESS HOOK RAISES WHEN "UP" PUSHBUTTON IS PRESSED, SEVERE HOIST DAMAGE AND A DROPPED LOAD MAY RESULT. CORRECT IMPROPER HOOK DIRECTION BY INTER-CHANGING MOTOR INPUT POWER LEADS T1 AND T2. DO NOT CHANGE PUSHBUTTON WIRING.

AVERTISSEMENT:

CET EQUIPEMENT DOIT ETRE MIS A LA TERRE EN ACCORDANCE AVEC LES NORMES EN VIGUEUR.

NO.	CHANGE	DATE	INIT.	WIRING DIAGRAM
AA	INITIAL RELEASE	3/26/14	SOH	G+ MINI ADJUSTABLE FREQUENCY CONTROL
				HOIST: 5-SPEED WITH OVERLOAD LIMIT SWITCH


SC	DA	DR	CK	SR
SC	3/26/14	SOH		
DA				
DR				
CK				
SR				

450928

APPENDIX 1 (CONTINUED)

WIRING DIAGRAMS

2-Speed trolley with motor thermal switch.

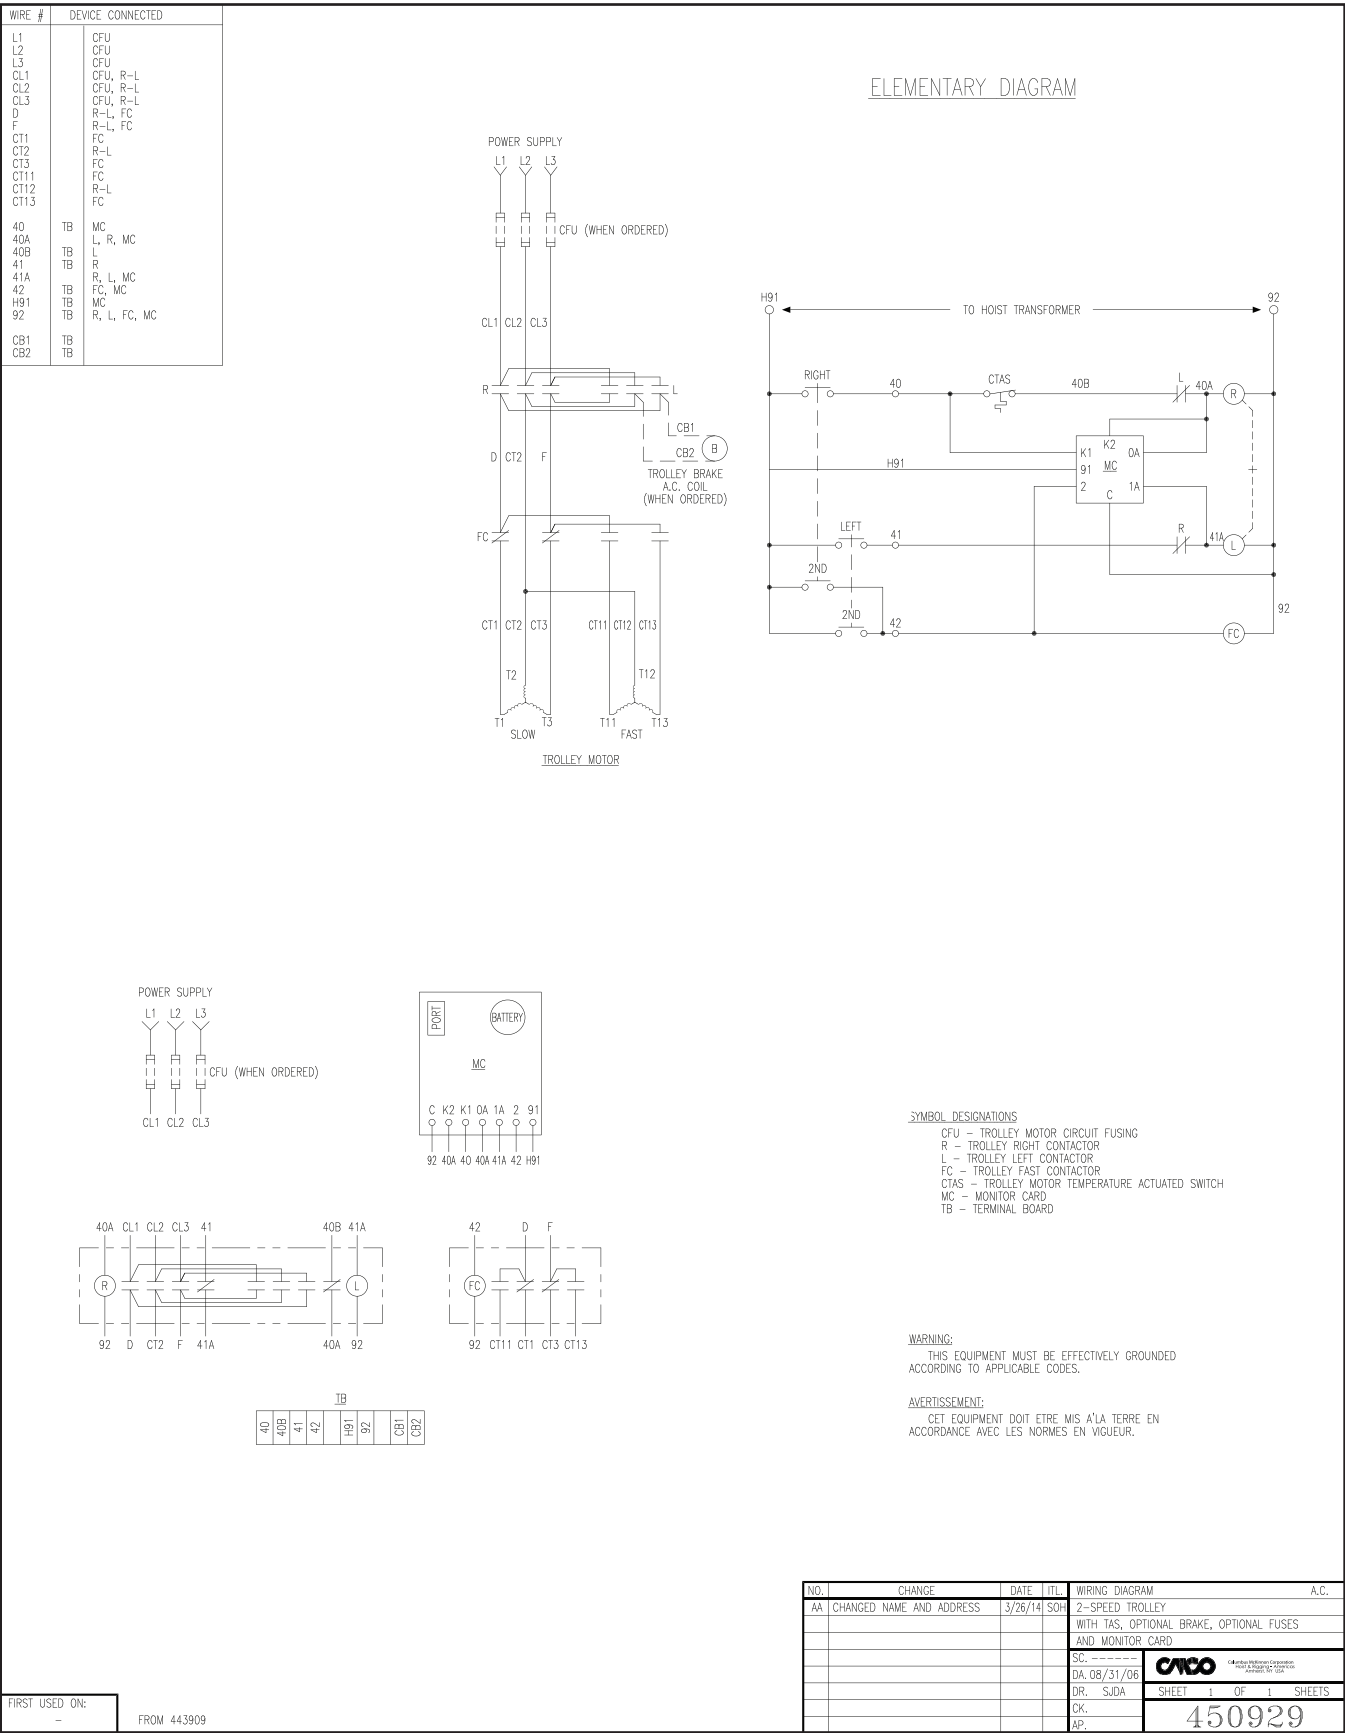

APPENDIX 2

VOLTAGE MEASUREMENT ACCURACY

While the Pulse monitor itself is capable of +/-5% voltage measurement accuracy, two additional factors may further decrease accuracy. Motor voltage is calculated using the control voltage powering the Pulse monitor. This calculation is based on the ideal ratio of the control transformer (primary voltage to secondary voltage). Any variation in the control transformer ratio will consistently skew the motor voltage data. Additionally, this voltage measurement is made at the point where the Pulse monitor is connected. If this point is significantly removed from the motor being monitored, a noticeable voltage drop may exist. The user is cautioned to consider both these contributing factors while interpreting the stored voltage data.

REPLACEMENT PARTS

Description	Part Number
Serial Port to USB Adaptor Cable	23596401
Serial Extension Cable	23386403

CUSTOMER SERVICE

For Customer Service, please call 1-800-888-0895

NOTES

[illegible]

NOTES

[illegible]

NOTES

[illegible]



140 John James Audubon Parkway • Amherst, New York 14228-1197
1-800-888-0985 • Fax 716-689-5644 • www.cmworks.com

© 2014 Columbus McKinnon Corporation. All Rights Reserved.