

EVERY DAY SINCE 1946

LR Motor Shop Repairs

Job Number 102833

Prepared for Welspun Tubular (11685)

9301 Frazier Pike Little Rock AR 72206

Table of Contents

AC Inspection as Found - LR MOTORSHOP



LR MOTORSHOP

21109

Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

> FolderID: 102833 FormID: 20174542

AC Inspection as Found

Welspun Tubular (11685) 9301 Frazier Pike Little Rock, AR 72206

AC Inspection - Rev. 2

Description:12.5HP AJAY

Location:

Serial Number:

Hi-Speed Job Number:	102833
Manufacturer:	Other
Product Number:	HECO005123
Serial Number:	21109
HP/kW:	12.5 (HP)
RPM:	3450 (RPM)
Voltage:	480
Phase:	Three
Hz:	60 (Hz)
J-box Included:	Complete
Coupling/Sheave:	None
Date Received:	04/23/2024
Repair Stage:	Final
	Manufacturer: Product Number: Serial Number: HP/kW: RPM: Voltage: Phase: Hz: J-box Included: Coupling/Sheave: Date Received:

Priorities Found: 🛑 1 - High

🔵 6 - Good

Overall Condition

1. Report Date

2. Nameplate Picture




3. Photos of all six sides of the machine.









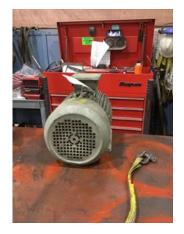



















4.	Describe the Overall Condition of the	Equipment as Received		
Initial	Mechanical/Electrical			
5 .	Does Shaft Turn Freely?			(N) No
6.	Does the shaft require T.I.R in Lathe t	o identify additional repairs?		
7.	Does Shaft Have Visible Damage?			
8.	Assembled Shaft Runout			
9.	Assembled Shaft End Play			
10.	Air Gap Variation <10%			
11.	Lead Condition			
12.	Lead Length			
13.	Does it have Lugs?, If so what is the S	Stud Size?		
14.	Lead Numbers			
15.	Stator Temperature Detector Rating a	nd Function		
	Quantity	Rating	Quantity Passed	
16.	Bearing Temperature Detector Rating	and Function		
	Quantity	Rating	Quantity Passed	
47				
	Frame Condition			
	Fan Condition			
19.	Heater Quantity, Ratings			
	Quantity	Volts/Watts	Pass/Fail	
20.	Broken or Missing Components			
Initial	Electrical Inspection			
	•			

21. Insulation Resistance/Megger



22	Winding Resistance			
22.	-			
	1-2	1-3	2-3	
	.693	.693	.693	
23.	Perform Surge Test		(P) Pass	
24.	Number of Stator Slots		24	
25.	Stator Condition		good	
26.	Stator Thermistors/Ohms		none	
27.	Stator Overloads/Ohms		none	
Mecha	anical Inspection			
28.	Drive End Bearing Brand		SKF	



29. Drive End Bearing Number-	6308
30. Drive End Bearing Qty.	1
31. Drive End Bearing Type	(Ball) Ball Bearing
32. Drive End Lubrication Type	(Grease) Grease Lubricated
33. Drive End Bearing Insulation or Grounding Device?	none
34. Drive End Wavy Washer/Snap-Ring Other Retention Device?	none
35. Drive End Bearing Condition	ok
36. Opposite Drive End Bearing Brand	SKF
37. Opposite Drive End Bearing Number-	6206
38. Opposite Drive End Bearing Qty.	6206
39. Opposite Drive End Bearing Type	(Ball) Ball Bearing

40.	Opposite Drive End Lubrication Type		(Grease) Grease Lubricated
	Opposite Drive End Bearing Insulation	n or Grounding Device?	none
42.	Opposite Drive End Wavy Washer/Sr	-	none
43.	Opposite Drive End Bearing Condition		ok
44.	Drive End Seal		none
45.	Opposite Drive End Seal		none
46.	DE Sleeve Bearing Inside Diameter		
	0 degrees	120 degrees	240 degrees
	0	0	0
47.	DE Sleeve Bearing Outside Diameter		
	0 degrees	120 degrees	240 degrees
	0	0	0
48.	DE Sleeve Bearing Housing Inside Di	ameter	
	0 degrees	120 degrees	240 degrees
	0	0	0
49.	DE Sleeve Bearing to Housing Cleara	ance	
	0 degrees	120 degrees	240 degrees
	0		-
50.	ODE Sleeve Bearing Inside Diameter		
	0 degrees	120 degrees	240 degrees
	0	0	0
51.	ODE Sleeve Bearing Outside Diameter	er	
	0 degrees	120 degrees	240 degrees
50	ODE Clasue Desting Hausing Inside		
52.	ODE Sleeve Bearing Housing Inside		040 1
	0 degrees	120 degrees	240 degrees
50		0	0
53.	ODE Sleeve Bearing to Housing Clea		040 1
	0 degrees	120 degrees	240 degrees
Deter	0	0	0
	Inspection Rotor Type/Material		(Squirrel Aluminum) Squirrel
			Cage Aluminum Die Cast
55.	Growler Test		(Pass) Pass
56.	Number of Rotor Bars		44
57.	Rotor Condition)-l	ok
58.	List the Parts needed for the Repair E 6308 6306, mech seal.	Selow	
59.	Signature of Technician that Disasser	nbled Motor	David Maclin
/	$\sqrt{1}$		
//		\neg	
Mecha	anical Fits- Rotor		

61. Rotor Runout Opposite Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 0 0 0 0 62. Coupling Fit Closest to Bearing Housing 120 Degrees 0 0 Degrees 90 Degrees 120 Degrees 0 0 0 0 63. Coupling Fit Closest to the end of the Shaft 0 0 0 Degrees 60 Degrees 120 Degrees 0 0 0 0 0 Degrees 60 Degrees 120 Degrees 1.575 1.575 1.575 1.575 1.575 1.575 0 Degrees 60 Degrees 120 Degrees 1.815 1.1815 1.1814 0 Degrees 60 Degrees 120 Degrees 1.815 1.1815 1.1814 0 Fire End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Tits Drive End Air Seal Opposite Drive End Air Seal 0 K 0k 0k 0k 0 Degrees 60 Degrees 120 Degrees 3.544 3.544 3.544					
0 0 0 62. Coupling Fit Closest to Bearing Housing 120 Degrees 120 Degrees 0 0 0 63. Coupling Fit Closest to the end of the Shaft 0 0 0 0 0 0 64. Drive End Bearing Shaft Fit 0 0 0 0 0 0 0 0 65. Drive End Bearing Shaft Fit 0 0 0 0 Degrees 60 Degrees 120 Degrees 1.575 1.575 1.575 1.575 66. Droote Drive End Bearing Shaft Fit 0 0 0 Degrees 60 Degrees 120 Degrees 1.1815 1.1815 1.1814 (P) Pass 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Tits Opposite Drive End Air Seal 0 Nore End - Endbell Bearing Fit 0 0 0 Degrees 60 Degrees 120 Degrees 3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit 0 (P) Pass 67. Opposite Drive End - Endbell Bearing Fit (P) Pass 71. Opposite Drive End - Endbell Bearing Fit 0 Degrees 120 Degrees 2.8351 2.8351 2.8351	61.	Rotor Runout			
62. Coupling Fit Closest to Bearing Housing 120 Degrees 0 0 0 63. Coupling Fit Closest to the end of the Shaft 0 0 0 Degrees 60 Degrees 120 Degrees 0 0 0 0 64. Drive End Bearing Shaft Fit 0 0 0 Degrees 60 Degrees 120 Degrees 1.575 1.575 1.575 65. Drive End Bearing Shaft Fit 0 0 0 Degrees 60 Degrees 120 Degrees 1.1815 1.1815 1.1814 0 Degrees 60 Degrees 120 Degrees 1.1815 1.1814 (P) Pass 68. Shaft Air Seal Fits Opposite Drive End Air Seal (P) Pass 69. Drive End Air Seal 0 Degrees 120 Degrees 1.815 1.814 . . 69. Drive End - Endbell Bearing Fit 0 0 Degrees 1.0 Degrees 60 Degrees 120 Degrees 3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit 0 Degrees 120 Degrees 2.355 2.3351 2.3351<		Drive End Bearing Fit	Rotor Body	Opposite Drive Er	nd Bearing
0 Degrees 120 Degrees 0 0 0 0. 0.0 0 0. 0.0 0 0. 0.0 0 0. 0.0 0 0. 0.0 0 0. 0.0 0 0. 0.0 0 0. 0.0 0 0. 0.0 0 0.0 0.0 0 0.0 0.0 0 0.0 0.0 0 0.0 0.0 0 0.0 0.0 0 0.0 0.0 0 0.0 0.0 0 0.0 0.0 0 0.0 0.0 0 0.0 0.0 0 0.1815 1.1815 1.1814 0.1815 1.1815 1.1814 0.1815 0.1814 1.801 0.1815 0.1814 1.801		0	0	0	
0 0 0 63. Coupling Fit Closest to the end of the Shaft 120 Degrees 0 Degrees 60 Degrees 120 Degrees 0 0 0 0 64. Drive End Bearing Shaft Fit 0 0 0 Degrees 60 Degrees 120 Degrees 1.575 1.575 1.575 65. Drive End Bearing Shaft Fit Condition (P) Pass 66. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 7 Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Fits (P) Pass 68. Shaft Air Seal Fits (P) Pass 7 Opposite Drive End Air Seal Opposite Drive End Air Seal 0 begrees 60 Degrees 120 Degrees 3.544 3.544 3.544 7 Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 7 Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 7 Opposite Drive End - Endbell Bearing Fit Condition (P) Pass	62.	Coupling Fit Closest to Bearing Housi	ng		
63. Coupling Fit Closest to the end of the Shaft 0 0 0 0 0 0 0 0 64. Drive End Bearing Shaft Fit 0 0 0 0 Degrees 60 Degrees 120 Degrees 120 Degrees 1.575 1.575 1.575 1.575 65. Drive End Bearing Shaft Fit Condition (P) Pass 66 0 Degrees 60 Degrees 120 Degrees 1.1815 1.1815 1.1814 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Fits Opposite Drive End Air Seal 0k Mechanical Fits-Bearing Housings 60 Degrees 120 Degrees 69. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 3.544 3.544 3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit Condition (P) Pass (P) Pass 71. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass (P) Pass 73. Bearing Cap Condition (P) Pass (P) Pass (P) Pass 74. End Bearing Cap Opposite Drive End Air Seal ok ok (A		0 Degrees	90 Degrees	120 Degrees	
0 Degrees 60 Degrees 120 Degrees 0 0 0 64. Drive End Bearing Shaft Fit 0 Degrees 120 Degrees 1575 1.575 1.575 65. Drive End Bearing Shaft Fit (P) Pass 66. Opposite Drive End Bearing Shaft Fit (P) Pass 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Fits Opposite Drive End Air Seal (P) Pass 69. Drive End Air Seal Opposite Drive End Air Seal (P) Pass 69. Drive End - Endbell Bearing Fit 0 Degrees 120 Degrees (P) Pass 69. Drive End - Endbell Bearing Fit 0 Degrees 120 Degrees 0 90. Drive End - Endbell Bearing Fit 0 Degrees 120 Degrees 2.8351 71. Opposite Drive End - Endbell Bearing Fit 0 Degrees 120 Degrees 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass (P) Pass 73. Bearing Cap Condition Opposite Drive End Air Seal (P) Pass 74. End Bel Air Seal Fits Drive End Air Seal Fits Drive End Air Seal Fits Drive End Air Seal Fits		0	0	0	
0 0 0 64. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 1.575 1.575 1.575 65. Drive End Bearing Shaft Fit Condition (P) Pass 66. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Ari Seal Fits 1.1815 1.1814 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Ari Seal Fits 0 0 Drive End Air Seal Opposite Drive End Air Seal (P) Pass 69. Drive End - Endbell Bearing Fit 0 0 (P) Pass 69. Drive End - Endbell Bearing Fit 0 0 Degrees 120 Degrees 69. Drive End - Endbell Bearing Fit 0 0 Degrees 120 Degrees 70. Drive End - Endbell Bearing Fit Condition (P) Pass (P) Pass 71. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition (P) Pass 73. Bearing Cap Condition (P) Pass 74. End Bel Air Seal Fits Drive End Air Seal Fits <th>63.</th> <th>Coupling Fit Closest to the end of the</th> <th>Shaft</th> <th></th> <th></th>	63.	Coupling Fit Closest to the end of the	Shaft		
64. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 1.575 1.575 1.575 65. Drive End Bearing Shaft Fit Condition (P) Pass 66. Opposite Drive End Bearing Shaft Fit 0 Degrees 120 Degrees 1.1815 1.1815 1.1814 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Fits 0 Doposite Drive End Air Seal 0 K 0 K 9. Drive End - Endbell Bearing Fit 0 Degrees 0 Degrees 60 Degrees 1.0 Degrees 60 Degrees 1.0 Drive End - Endbell Bearing Fit 0 Degrees 0 Degrees 60 Degrees 1.0 Drive End - Endbell Bearing Fit 0 Degrees 0 Degrees 60 Degrees 2.354 3.544 3.543 2.8351 2.835 2.8351 2.835 2.8351 2.835 2.8351 2.835 2.8351 2.835 2.8351 2.835 2.8351 2.835 2.8351 0 K oK 0 K oK		0 Degrees	60 Degrees	120 Degrees	
0 Degrees 60 Degrees 120 Degrees 1.575 1.575 1.575 6 65. Drive End Bearing Shaft Fit Condition (P) Pass 66. Opposite Drive End Bearing Shaft Fit 0 Degrees 120 Degrees 1.1815 1.1815 1.1814 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Fits Opposite Drive End Bearing Shaft Fit Drive End Air Seal Opposite Drive End Air Seal ok ok Mechanical Fits-Bearing Housings 60 Degrees 69. Drive End - Endbell Bearing Fit 0 Degrees 0 Degrees 60 Degrees 120 Degrees 3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit Condition (P) Pass 71. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition Drive End Air Seal Opposite Drive End Air Seal ok ok ok 74. End Bearing Cap Opposite Drive End Air Seal Drive End Air Seal Fits Drive End Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal Oppo		0	0	0	
1.575 1.575 (P) Pass 6 65. Drive End Bearing Shaft Fit Condition (P) Pass 66. Opposite Drive End Bearing Shaft Fit 0 0 Degrees 60 Degrees 120 Degrees 1.1815 1.1815 1.1814 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal ok ok ok Mechanical Fits- Bearing Housings 60 Degrees 120 Degrees 69. Drive End - Endbell Bearing Fit 0 0 Degrees 60 Degrees 3.544 3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit Condition (P) Pass 71. Opposite Drive End - Endbell Bearing Fit (P) Pass 72. Opposite Drive End - Endbell Bearing Fit (P) Pass 73. Bearing Cap Condition (P) Pass 74. End Belaring Cap Opposite Drive End Air Seal Orive End Bearing Cap Opposite Drive End Air Seal Orive End Bearing Cap Opposite Drive End Bearing Cap ok ok ok 75. List Machine Work Needed Below None 76. Technician	64.	Drive End Bearing Shaft Fit			
 65. Drive End Bearing Shaft Fit Condition (P) Pass 66. Opposite Drive End Bearing Shaft Fit 0 Degrees 11815 11815 11814 (P) Pass 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Opposite Drive End Air Seal Ok Ok Ok Obegrees 60. Degrees 120 Degrees 61. Drive End Air Seal Obegrees 62. Drive End - Endbell Bearing Fit O Degrees 63. Drive End - Endbell Bearing Fit O Degrees 64. 3544 3544 3544 3544 3544 71. Opposite Drive End - Endbell Bearing Fit O Degrees 60. Degrees 61. Drive End - Endbell Bearing Fit O Degrees 62. 28351 2.8351 3.544 3.545 3.545 3.545 3.545 3.545 3.545 3.546 3.547 3.547 3.548 3.548 3.549 3.549 3.549 3.541 3.541 3.541 3.541 <l< th=""><th></th><th>0 Degrees</th><th>60 Degrees</th><th>120 Degrees</th><th></th></l<>		0 Degrees	60 Degrees	120 Degrees	
66. Opposite Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 1.1815 1.1815 1.1814 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Fits Opposite Drive End Air Seal (P) Pass 69. Drive End Air Seal Opposite Drive End Air Seal (P) Pass 69. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 69. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 70. Drive End - Endbell Bearing Fit (P) Pass (P) Pass 71. Opposite Drive End - Endbell Bearing Fit 0 Degrees 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass (P) Pass 73. Bearing Cap Condition (P) Pass (P) Pass 74. End Bell Air Seal Opposite Drive End Air Seal ok ok ok ok ok 75. List Machine Work Needed Below None David Maclin 76. Technician Optice End David Maclin		1.575	1.575	1.575	
0 Degrees 60 Degrees 120 Degrees 1.1815 1.1815 1.1814 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Fits Opposite Drive End Air Seal (P) Pass ok ok (P) Pass 69. Drive End Air Seal Opposite Drive End Air Seal (P) Pass 69. Drive End - Endbell Bearing Fit 0 Degrees 120 Degrees 0 Degrees 60 Degrees 120 Degrees 3.544 70. Drive End - Endbell Bearing Fit Condition (P) Pass (P) Pass 71. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass (P) Pass 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass (P) Pass 73. Bearing Cap Condition Upposite Drive End Bearing Cap (P) Pass ok ok ok (P) Pass 74. End Bell Air Seal Fits Drive End Air Seal Fits Drive End Air Seal Fits Drive End Air Seal Fits Drive End Air Seal Fits Opposite Drive End Air Seal Ok Ok 75. List Machine Work Needed Below None None David Maclin 76. Technician David Maclin David Maclin	65.	Drive End Bearing Shaft Fit Condition			(P) Pass
1.1815 1.1815 1.1814 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Fits Drive End Air Seal Fits Opposite Drive End Air Seal ok ok ok ok 69. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 3.544 3.544 70. Drive End - Endbell Bearing Fit Condition (P) Pass 71. Opposite Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 60 Degrees 120 Degrees 2.835 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Opposite Drive End Bearing Cap Opposite Drive End Bearing Cap Optive End Bearing Cap Opposite Drive End Air Seal Fits Drive End Air Seal Fits Drive End Air Seal Fits Optive End Air Seal Below None 76. Technician Failure locations 	66.	Opposite Drive End Bearing Shaft Fit			
 67. Opposite Drive End Bearing Shaft Fit Condition (P) Pass 68. Shaft Air Seal Fits Drive End Air Seal ok ok ok ok Opposite Drive End Air Seal ok Mechanical Fits- Bearing Housings 69. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 60 Degrees 120 Degrees 3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 60 Degrees 120 Degrees 3.544 3.544 71. Opposite Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 60 Degrees 120 Degrees 2.835 2.8351 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition Drive End Bearing Cap ok ok		0 Degrees	60 Degrees	120 Degrees	
68. Shaft Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal ok ok Mechanical Fits- Bearing Housings 69. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 10. Opposite Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 2.835 2.8351 2.8351 71. Opposite Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 2.835 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition prive End Bearing Cap ok ok ok ok ok 74. End Bell Air Seal Fits Drive End Air Seal ok ork ok ok ok 75. List Machine Work Needed Below None David Maclin 76. Technician David Maclin David Maclin Mathematicate of Failure 77. Failure locations Seators		1.1815	1.1815	1.1814	
Drive End Air Seal Opposite Drive End Air Seal ok ok Mechanical Fits- Bearing Housings 60 69. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit Condition (P) Pass 71. Opposite Drive End - Endbell Bearing Fit (P) Pass 0 Degrees 60 Degrees 120 Degrees 2.835 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition (P) Pass 74. End Beal Air Seal Opposite Drive End Air Seal ok ok ok 74. End Bell Air Seal Fits Opposite Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal ok ok ok 75. List Machine Work Needed Below None Opposite Drive End Air Seal 76. Technician David Maclin David Maclin	67.	Opposite Drive End Bearing Shaft Fit	Condition		(P) Pass
ok ok Mechanical Fits- Bearing Housings 60 69. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 0 Degrees 60 Degrees 120 Degrees 3.544 3.544 3.544 0 Dive End - Endbell Bearing Fit Condition (P) Pass 71. Opposite Drive End - Endbell Bearing Fit 0 Degrees 0 Degrees 60 Degrees 120 Degrees 2.835 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition (P) Pass 74. End Bell Air Seal Fits Opposite Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal ok ok ok 75. List Machine Work Needed Below Nore Nore 76. Technician David Maclin David Maclin	68.	Shaft Air Seal Fits			
Mechanical Fits- Bearing Housings 69. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 3.544 3.544 70. Drive End - Endbell Bearing Fit Condition (P) Pass 71. Opposite Drive End - Endbell Bearing Fit (P) Pass 0 Degrees 60 Degrees 120 Degrees 2.835 2.8351 (P) Pass 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition (P) Pass Drive End Bearing Cap Opposite Drive End Air Seal ok ok ok 74. End Bell Air Seal Fits Opposite Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal ok ok ok 75. List Machine Work Needed Below None 76. Technician David Maclin David Maclin Machine Urive locations		Drive End Air Seal	Opposite Drive End Air Seal		
69. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit Condition (P) Pass 71. Opposite Drive End - Endbell Bearing Fit 0 Degrees 0 Degrees 60 Degrees 120 Degrees 2.835 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition prive End Bearing Cap Drive End Bearing Cap Opposite Drive End Bearing Cap ok ok 74. End Bell Air Seal Fits Opposite Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal ok ok 75. List Machine Work Needed Below None 76. Technician David Maclin Mathematican State Prive Cause of Failure 77. Failure locations State		ok	ok		
0 Degrees 60 Degrees 120 Degrees 3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit Condition (P) Pass 71. Opposite Drive End - Endbell Bearing Fit 0 Degrees 0 Degrees 60 Degrees 120 Degrees 2.835 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition (P) Pass Drive End Bearing Cap Opposite Drive End Bearing Cap ok ok (P) Pass 74. End Bell Air Seal Opposite Drive End Air Seal ok ok ok 75. List Machine Work Needed Below None 76. Technician David Maclin David Maclin	Mecha	anical Fits- Bearing Housings			
3.544 3.544 3.544 70. Drive End - Endbell Bearing Fit Condition (P) Pass 71. Opposite Drive End - Endbell Bearing Fit 120 Degrees 0 Degrees 60 Degrees 120 Degrees 2.835 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition (P) Pass Drive End Bearing Cap Opposite Drive End Bearing Cap ok ok 74. End Bell Air Seal Opposite Drive End Air Seal ok ok 75. List Machine Work Needed Below ok None 76. Technician 76. Technician David Maclin	69.	Drive End - Endbell Bearing Fit			
 70. Drive End - Endbell Bearing Fit Condition (P) Pass 71. Opposite Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 2.835 2.835 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition Drive End Bearing Cap ok ok ok ok ok ok ok ok Technician Centration David Maclin Root Cause of Failure 		0 Degrees	60 Degrees	120 Degrees	
71. Opposite Drive End - Endbell Bearing Fit 120 Degrees 0 Degrees 60 Degrees 120 Degrees 2.835 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition (P) Pass Drive End Bearing Cap Opposite Drive End Bearing Cap ok ok 74. End Bell Air Seal Fits Upposite Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal ok ok 75. List Machine Work Needed Below None Vertice August 76. Technician David Maclin David Maclin		3.544	3.544	3.544	
0 Degrees 60 Degrees 120 Degrees 2.835 2.8351 2.8351 7.2. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 7.3. Bearing Cap Condition ok 0 rive End Bearing Cap Opposite Drive End Bearing Cap 0 k ok 7.4. End Bell Air Seal Fits Upposite Drive End Air Seal 0 rive End Air Seal Opposite Drive End Air Seal 0 rive End Air Seal Opposite Drive End Air Seal 0 rive End Air Seal Opposite Drive End Air Seal 0 rive End Air Seal Opposite Drive End Air Seal 0 rive End Air Seal Opposite Drive End Air Seal 0 rive End Air Seal Opposite Drive End Air Seal 0 rive End Air Seal Opposite Drive End Air Seal 0 rive End Air Seal Opposite Drive End Air Seal 0 rive End Air Seal Opposite Drive End Air Seal 75. List Machine Work Needed Below None 76. Technician David Maclin David Maclin Other End Eature 77. Failure locations					(P) Pass
2.835 2.8351 2.8351 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition Opposite Drive End Bearing Cap ok ok ok 74. End Bell Air Seal Fits Opposite Drive End Air Seal ok ok ok 75. List Machine Work Needed Below None David Maclin 76. Technician David Maclin David Maclin	71.				
 72. Opposite Drive End - Endbell Bearing Fit Condition (P) Pass 73. Bearing Cap Condition Drive End Bearing Cap Opposite Drive End Bearing Cap ok ok 74. End Bell Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal ok ok 75. List Machine Work Needed Below None 76. Technician David Maclin Root Cause of Failure 77. Failure locations 		-	-	-	
73. Bearing Cap Condition Drive End Bearing Cap Opposite Drive End Bearing Cap ok ok 74. End Bell Air Seal Fits Opposite Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal ok ok 75. List Machine Work Needed Below None David Maclin 76. Technician David Maclin Root Cause of Failure 77. Failure locations				2.8351	
Drive End Bearing Cap Opposite Drive End Bearing Cap ok ok 74. End Bell Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal ok ok 75. List Machine Work Needed Below None 76. Technician David Maclin Root Cause of Failure 77. Failure locations			Fit Condition		(P) Pass
ok ok 74. End Bell Air Seal Fits Drive End Air Seal Opposite Drive End Air Seal ok ok 75. List Machine Work Needed Below None 76. Technician David Maclin Root Cause of Failure 77. Failure locations	73.	÷ .			
74. End Bell Air Seal Fits Opposite Drive End Air Seal ok ok ok ok 75. List Machine Work Needed Below None 76. Technician David Maclin David Maclin Root Cause of Failure 77. Failure locations		U .			
Drive End Air Seal Opposite Drive End Air Seal ok ok 75. List Machine Work Needed Below None David Maclin 76. Technician David Maclin Root Cause of Failure 77. Failure locations			ok		
ok ok 75. List Machine Work Needed Below None 76. Technician David Maclin Output Amount Amount Amount Foot Cause of Failure 77. Failure locations	74.				
75. List Machine Work Needed Below None 76. Technician David Maclin Root Cause of Failure 77. Failure locations					
None David Maclin 76. Technician David Maclin Image: Comparison of the state of the	7-		OK		
76. Technician David Maclin Control Cause of Failure 77. Failure locations David Maclin David Ma	75.				
Root Cause of Failure 77. Failure locations	70				Devid Meelin
77. Failure locations	70.				
77. Failure locations		$ \land$			
77. Failure locations					
77. Failure locations	Poot	Cause of Failure			
	11.				

	Root cause of failure		
78.	Seal		
)ynar	mic Balance Report		
79.	Rotor Weight and Balance Grade		
	Rotor Weight	Balance Grade	
	0	0	
80.	Initial Balance Readings		
	Drive End	Opposite Drive End	
	.54	.86	
81.	Final Balance Readings		
	Drive End	Opposite Drive End	
	.16	.23	
82.	Technician	\sim	David Maclin
Rewin	nd		
83.	Core Test Results - Watts loss per P	ound	
	Pre-Burnout	Post Burnout	
	na	na	
84.	Core Hot Spot Test		
	Pre-Burnout	Post-Burnout	
	na	na	
85.	na Post Rewind Electrical Test- Insulation		2000 Megohms
			2000 Megohms 0 Polarization Index
86.	Post Rewind Electrical Test- Insulation		
86.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index		
86.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index Post Rewind Winding Resistance	on Resistance	0 Polarization Index
86. 87.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index Post Rewind Winding Resistance 1-2	1-3	0 Polarization Index 2-3
86. 87.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index Post Rewind Winding Resistance 1-2 0 Post Rewind Surge Test	1-3	0 Polarization Index 2-3 0
86. 87. 88. 88.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index Post Rewind Winding Resistance 1-2 0 Post Rewind Surge Test	1-3	0 Polarization Index 2-3 0 (Pass) Pass
86. 87. 88. 89. 90.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index Post Rewind Winding Resistance 1-2 0 Post Rewind Surge Test Post Rewind Hi-Pot Technician	1-3	0 Polarization Index 2-3 0 (Pass) Pass 0 micro-amps David Maclin
86. 87. 88. 89. 90. /lecha 91.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index Post Rewind Winding Resistance 1-2 0 Post Rewind Surge Test Post Rewind Hi-Pot Technician Anical Fits- Rotor - Post Repair Shaft Runout Post Repair	1-3	0 Polarization Index 2-3 0 (Pass) Pass 0 micro-amps
86. 87. 88. 89. 90. /lecha 91.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index Post Rewind Winding Resistance 1-2 0 Post Rewind Surge Test Post Rewind Hi-Pot Technician	1-3	0 Polarization Index 2-3 0 (Pass) Pass 0 micro-amps David Maclin
86. 87. 88. 89. 90. /lecha 91.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index Post Rewind Winding Resistance 1-2 0 Post Rewind Surge Test Post Rewind Hi-Pot Technician Anical Fits- Rotor - Post Repair Shaft Runout Post Repair	1-3	0 Polarization Index 2-3 0 (Pass) Pass 0 micro-amps David Maclin
86. 87. 88. 89. 90. 90.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index Post Rewind Winding Resistance 1-2 0 Post Rewind Surge Test Post Rewind Hi-Pot Technician Anical Fits- Rotor - Post Repair Shaft Runout Post Repair Rotor Runout Post Repair Drive End Bearing Fit 0	1-3 0 Rotor Body 0	0 Polarization Index 2-3 0 (Pass) Pass 0 micro-amps David Maclin 0 inches 0 inches
86. 87. 88. 89. 90. 90.	Post Rewind Electrical Test- Insulation Post Rewind Polarization Index Post Rewind Winding Resistance 1-2 0 Post Rewind Surge Test Post Rewind Hi-Pot Technician Anical Fits- Rotor - Post Repair Shaft Runout Post Repair Rotor Runout Post Repair Drive End Bearing Fit	1-3 0 Rotor Body 0	0 Polarization Index 2-3 0 (Pass) Pass 0 micro-amps David Maclin 0 inches 0 inches

94.	Coupling Fit Closest to the end of the	Shaft Post Repair	
	0 Degrees	60 Degrees	120 Degrees
	0	0	0
95.	Drive End Bearing Shaft Fit Post Rep	air	
	0 Degrees	60 Degrees	120 Degrees
	0	0	0
96.	Opposite Drive End Bearing Shaft Fit	Post Repair	
	0 Degrees	60 Degrees	120 Degrees
	0	0	0
97.	Shaft Air Seal Fits Post Repair		
	Drive End Air Seal	Opposite Drive End Air Seal	
	0	0	
98.	Shaft Repair Sign-off		David Maclin
Mech	anical Fits- Bearing Housings - F	Post Repair	
	Drive End - Endbell Bearing Fit Post	-	
55.	0 Degrees	60 Degrees	120 Degrees
	0 Degrees	0	0
100	Opposite Drive End - Endbell Bearing	-	0
100.	0 Degrees	60 Degrees	120 Degrees
	0	0	0
101	Bearing Cap Condition Post Repair	0	0
101.	Drive End Bearing Cap	Opposite Drive End Bearing Cap	
	na	a	
102	End Bell Air Seal Fits Post Repair	ä	
102.	Drive End Air Seal	Opposite Drive End Air Seal	
	na	na	
103.	DE Sleeve Bearing Inside ID Post Re		
	Measure 1	Measure 2	Measure 3
	0	0	0
104.	DE Sleeve Bearing Outside ID Post F	Repair	
	Measure 1	Measure 2	Measure 3
	0	0	0
105.	DE Sleeve Bearing Inside OD Post R	epair	
	Measure 1	Measure 2	Measure 3
	0	0	0
106.	DE Sleeve Bearing Outside OD Post	Repair	
	Measure 1	Measure 2	Measure 3
	0	0	0

107. End Bell Repair Sign-off		David Maclin
L		2
108. ODE Sleeve Bearing Inside	ID Post Repair	
Measure 1	Measure 2	Measure 3
0	0	0
109. ODE Sleeve Bearing Outsid	de ID Post Repair	
Measure 1	Measure 2	Measure 3
0	0	0
110. ODE Sleeve Bearing Inside	OD Post Repair	
Measure 1	Measure 2	Measure 3
0	0	0
111. ODE Sleeve Bearing Outsid	le OD Post Repair	
Measure 1	Measure 2	Measure 3
0	0	0



Assembly

112. QC Check All Parts for Cleanliness Prior to Assembly

David Maclin

113. Photograph All Major Components prior to assembly









114. Final Insulation Resistance Test 2000 Megohr 115. Assembled Shaft Endplay 0 inch 116. Assembled Shaft Runout 0 inch 117. Test Run Voltage 0 inch Volts Volts 459 460 118. Test Run Amperage Amps Amps Amps 4 4	
116. Assembled Shaft Runout 0 inch 117. Test Run Voltage 0 inch Volts Volts 459 460 118. Test Run Amperage Amps Amps Amps	ns
117. Test Run Voltage Volts Volts 459 460 118. Test Run Amperage Amps Amps	es
VoltsVoltsVolts459460460118. Test Run AmperageAmpsAmps	es
459 460 460 118. Test Run Amperage Amps Amps	
118. Test Run Amperage Amps Amps	
Amps Amps Amps	
38 4	
119. Drive End Vibration Readings - Inches Per Second	
Horizontal Vertical Axial	
0.0369 0 0	
120. Opposite Drive End Vibration Readings - Inches Per Second	
Horizontal Vertical Axial	
0.0246 0 0	
121. Ambient Temperature - Fahrenheit	4
122. Drive End Bearing Temps - Fahrenheit	
5 Minutes 10 Minutes 15 Minutes	
0 0 0	

23.	Drive End Bearing Temps - Fahrenhe	it 20-30 Minutes	
	20 Minutes	25 Minutes	30 Minutes
	0	0	0
24.	Drive End Bearing Temps - Fahrenhe	it 35-45 Minutes	
	35 Minutes	40 Minutes	45 Minutes
	0	0	0
25.	Drive End Bearing Temps - Fahrenhe	it 50-60 Minutes	
	50 Minutes	55 Minutes	60 Minutes
	0	0	0
26.	Opposite Drive End Bearing Temps -	Fahrenheit	
	5 Minutes	10 Minutes	15 Minutes
	0	0	0
27.	Opposite Drive End Bearing Temps -	Fahrenheit 20-30 Minutes	
	20 Minutes	25 Minutes	30 Minutes
	0	0	0
28.	Opposite Drive End Bearing Temps -	Fahrenheit 35-45 Minutes	
	35 Minutes	40 Minutes	45 Minutes
	0	0	0
29.	Opposite Drive End Bearing Temps -	Fahrenheit 50-60 Minutes	
	50 Minutes	55 Minutes	60 Minutes
	0	0	0
30.	Stator Temperatures- Fahrenheit		
	5 Minutes	10 Minutes	15 Minutes
	0	0	0
31.	Stator Temperatures- Fahrenheit 20-3	30 Minutes	
	20 Minutes	25 Minutes	30 Minutes
	0	0	0
32.	Stator Temperatures- Fahrenheit 35-4	5 Minutes	
	35 Minutes	40 Minutes	45 Minutes
	0	0	0
33.	Stator Temperatures- Fahrenheit 50-6	60 Minutes	
	50 Minutes	55 Minutes	60 Minutes
	0	0	0
34.	Document Final Condition with Picture	es after paint	looks good
35.	Final Pics and QC Review		David Maclin











STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. <u>APPLICABILITY.</u> The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. <u>SCOPE OF GOODS AND/OR SERVICES.</u> The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only be effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. DELIVERY OF GOODS AND/OR SERVICES. Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- 6. DELIVERY SITE AND TIME FOR PERFORMANCE. Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

TermsAndConditions

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. LIMITATION OF DAMAGES. HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY</u>. The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. <u>GOVERNING LAW AND JURISDICTION.</u> Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER</u>. No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. <u>ASSIGNMENT.</u> The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. <u>NO INDIVIDUAL LIABILITY</u>. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.