

EVERY DAY SINCE 1946 ——

Motor Shop Repairs

Job Number 99452

Prepared for Sage V Foods

5901 SLOAN DRIVE LITTLE ROCK AR 72206

Table of Contents



Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Printed on 3/7/2022 Powered by INSPECTALL Table of Contents



Submersible Pump Repair Report

Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

> FolderID: 99452 FormID: 12992278

Sage V Foods 5901 SLOAN DRIVE LITTLE ROCK, AR 72206

Priorities Found: 6 5 - High

23 - Good


General		
1. Job Number		99452
2. Report Date		3/3/2022
3. Customer		Sage V Foods
Name Plate Informa	ation	

Zoeller Manufacturer







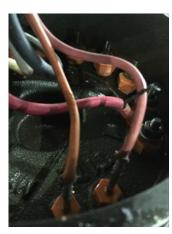

















5.	Model	G6221-A
6.	Serial Number	27927
7.	Horsepower	7.5
8.	KW	
9.	Volts	460
10.	Amps	11
11.	RPM	1750
12.	Frame	
13.	Enclosure	
14.	Cycles	60
15.	Phase	3
16.	Service Factor	
17.	Motor Mount Position	
18.	Inlet Diameter	
19.	Outlet Diameter	
20.	Flow Rate	
21.	Pressure Head	
Initial	Pump Inspection	
22.	Power Cord Wire Size	12 AWG
23.	Power Cord # of Conductors	4
24.	Power Cord Length	22 ft
2 5.	Power Cord Condtion	(P) Pass
26.	Sensor Cord Wire Size	18 AWG
27.	Sensor Cord # of Conductors	5
28.	Sensor Cord Length	22 ft
2 9.	Sensor Cord Condition	(P) Pass
3 0.	Sensor Cord for Thermal Protection?	(Y) Yes
31.	Sensor Cord for Water Protection	(Y) Yes

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.





33. Impeller Condition(P) Pass



34.	Number of Wear Rings	0
35.	Wear Ring Condition	
36.	Wear Ring Size	
37.	Wear Ring Clearance to Impeller	
38.	Wear Ring Material	
39.	Seal Surfaces Condition	(P) Pass



40. Seal Type

Mechanical

41.	Number of Seals	2
42.	Seal Material on Rotary Face	carbon
43.	Seal Material on Stationary Seat	ceramic
44.	Elastic Component Material	Buna
45.	Seal OD	2.125 in
46.	Seal ID	1.5 in
47.	Seal Sleeve Material	stainless shaft
48.	Seal Plate Condition	(P) Pass



49. Water Sensor in Seal Cavity?

(Y) Yes



Initial Inspection	
51. Oil Filled Stator?	(Y) Yes
50. Oil Filled Seal Cavity?	(Y) Yes

52. Number of Leads



53.	Lead Length	12 Inches
54.	Lead Size	
55.	Lead Condition	(P) Pass
56.	Lead Markings	
57.	Lead Size for Oil Filled Stator	
58.	Lug Size, Condition, and Type	
59.	Overload Required?	(Y) Yes
60.	Winding RTD's	
61.	Winding Rtd's Condition	
62.	Shaft Run Out	0.001
63.	Does Shaft Turn Freely	yes
64.	Does Shaft Have Visible Damage	no



65.	Bearing Rtd's	
66.	Bearing Rtd's Condition	
67.	Contamination	
68.	Frame Condition	(P) Pass
69.	Fan Condition	
70.	Broken or missing components	
Initial	Electric Test	
71.	Resistance to Ground	20000 Mohm
72.	Winding Resistance 1-2	







78.		rewind
79.	Failure Location	in slot
Initial	Rotor Inspection	
80.	Rotor Type	cast aluminum
81.	Air Gap <10% Variation	
82.	Number of Rotor Bars	45
83.	Number of Broken Rotor Bars	0
8 4.	Growler Test	(P) Pass
8 5.	Rotor Condition	(P) Pass
Mech	anical Inspection	
86.	Bearing Manufacturer	skf and koyo
87.	Bearing DE Size	3309 c3
88.	Bearing DE Type	double row ball
89.	DE Bearing Qty.	1
90.	Bearing ODE Size	6205 zc3
91.	Bearing ODE Type	ball
92.	ODE Bearing Qty.	1
93.	Insulated Bearing	no
94.	Lubrication Type	oil
95.	Grease Condition	
96.	Bearing Retainers	(Y) Yes
-	Snap ring	
97.	Shaft Grounding Device	(N) No
98.	DE Seal	(Y) Yes
99.	DE Seal Type/Size	carbon ceramic 2.125 x 1.50
100.	ODE Seal	(Y) Yes
101.	ODE Seal Type/Size	carbon ceramic 2.125 x 1.50
Root	Cause of Failure	
102.	Component Failure	windings

103. Cause of Failure Shorted	
104. Comments	
105. Service Technician	Trevor Hall

/ - July

Machine Fit Inspection Report			
107. Initial Shaft Run Out 0.001 " 108. Final Shaft Run Out " 109. DE Bearing Shaft Fit (P) Pass 110. DE Initial Shaft Bearing Fit Size 1 1.7722 " 111. DE Initial Shaft Bearing Fit Size 2 1.7722 " 112. DE Initial Shaft Bearing Fit Size 3 1.7722 " 113. DE Finial Shaft Bearing Fit Size 1 End to the Staft Bearing Fit Size 2 114. DE Finial Shaft Bearing Fit Size 2 End to the Staft Bearing Fit Size 3 116. ODE Bearing Shaft Fit (P) Pass 117. ODE Initial Shaft Bearing Fit Size 3 0.9847 " 118. ODE Initial Shaft Bearing Fit Size 2 0.9847 " 119. ODE Initial Shaft Bearing Fit Size 3 0.9847 " 120. ODE Finial Shaft Bearing Fit Size 3 0.9847 " 120. ODE Finial Shaft Bearing Fit Size 3 0.9847 " 121. ODE Finial Shaft Bearing Fit Size 3 0.9847 " 122. ODE Finial Shaft Bearing Fit Size 3 0.9847 " 123. DE Air Seal Shaft Fit (P) Pass 124. DE Initial Air Seal Shaft Size (P) Pass 125. DE Final Air Seal Shaft Size (P) Pass 126. ODE Air Seal Shaft Fit (P) Pass 127. ODE Initi	Mach	ine Fit Inspection Report	
108. Final Shaft Run Out " 109. DE Bearing Shaft Fit (P) Pass 110. DE Initial Shaft Bearing Fit Size 1 1.7722 " 111. DE Initial Shaft Bearing Fit Size 2 1.7722 " 112. DE Initial Shaft Bearing Fit Size 3 1.7722 " 113. DE Finial Shaft Bearing Fit Size 1 1.7722 " 114. DE Finial Shaft Bearing Fit Size 2 1.7722 " 115. DE Finial Shaft Bearing Fit Size 3 5.772 " 116. ODE Bearing Shaft Fit (P) Pass 117. ODE Initial Shaft Bearing Fit Size 1 0.9847 " 118. ODE Initial Shaft Bearing Fit Size 2 0.9847 " 119. ODE Initial Shaft Bearing Fit Size 3 0.9847 " 110. ODE Finial Shaft Bearing Fit Size 2 0.9847 " 110. ODE Finial Shaft Bearing Fit Size 3 0.9847 " 121. ODE Finial Shaft Bearing Fit Size 4 1.002 Finial Shaft Bearing Fit Size 1 122. ODE Finial Shaft Shaft Size 1 1.002 Finial Shaft Shaft Size 1 123. DE Air Seal Shaft Fit 1.002 Finial Shaft Size 1 124. DE Initial Air Seal Shaft Size 1 1.002 Finial Shaft Size 1 125. DE Final Air Seal Shaft Size 1 1.002 Finial Shaft Size 1 126. DE Finial Air Seal Shaft Size 1	1 06.	Shaft Run Out	(P) Pass
109. DE Bearing Shaft Fit	107.	Initial Shaft Run Out	0.001 "
110. DE Initial Shaft Bearing Fit Size 1 1.7722 " 111. DE Initial Shaft Bearing Fit Size 2 1.7722 " 112. DE Initial Shaft Bearing Fit Size 3 1.7722 " 113. DE Finial Shaft Bearing Fit Size 1 1.7722 " 114. DE Finial Shaft Bearing Fit Size 2 5.72 " 115. DE Finial Shaft Bearing Fit Size 3 6.72 " 116. ODE Bearing Shaft Fit (P) Pass 117. ODE Initial Shaft Bearing Fit Size 1 0.9847 " 118. ODE Initial Shaft Bearing Fit Size 2 0.9847 " 119. ODE Initial Shaft Bearing Fit Size 3 0.9847 " 120. ODE Finial Shaft Bearing Fit Size 3 0.9847 " 121. ODE Finial Shaft Bearing Fit Size 3 0.9847 " 122. ODE Finial Shaft Bearing Fit Size 3 0.9847 " 123. DE Air Seal Shaft Fit 5.72 Einial Shaft Bearing Fit Size 9 124. DE Initial Air Seal Shaft Size 5.72 Einial Air Seal Shaft Size 125. DE Finial Air Seal Shaft Size 5.72 Einial Shaft Size 126. ODE Air Seal Shaft Size 5.72 Einial Shaft Size 127. ODE Initial Air Seal Shaft Size 6.72 Einial Shaft Size 128. DE Einial Air Seal Shaft Size 3.9378 " 130. DE Initial Endbell Fit Size 3 <td>108.</td> <td>Final Shaft Run Out</td> <td>"</td>	108.	Final Shaft Run Out	"
111. DE Initial Shaft Bearing Fit Size 2 1.7722 " 112. DE Initial Shaft Bearing Fit Size 3 1.7722 " 113. DE Finial Shaft Bearing Fit Size 1 114. DE Finial Shaft Bearing Fit Size 2 115. DE Finial Shaft Bearing Fit Size 3 116. ODE Bearing Shaft Fit (P) Pass 117. ODE Initial Shaft Bearing Fit Size 1 118. ODE Initial Shaft Bearing Fit Size 1 119. ODE Initial Shaft Bearing Fit Size 2 110. ODE Initial Shaft Bearing Fit Size 3 111. ODE Initial Shaft Bearing Fit Size 3 112. ODE Finial Shaft Bearing Fit Size 1 112. ODE Finial Shaft Bearing Fit Size 2 112. ODE Finial Shaft Bearing Fit Size 2 112. ODE Finial Shaft Bearing Fit Size 3 113. DE Air Seal Shaft Fit 114. DE Initial Air Seal Shaft Size 115. DE Initial Air Seal Shaft Size 116. ODE Air Seal Shaft Size 117. ODE Initial Air Seal Shaft Size 118. ODE Finial Air Seal Shaft Size 119. DE Initial Endbell Fit Size 1 110. DE Initial Endbell Fit Size 3 110. DE Initial Endbell Fit Size 3 111. DE Initial Endbell Fit Size 3 112. DE Initial Endbell Fit Size 3 113. DE Initial Endbell Fit Size 3 114. DE Finial Endbell Fit Size 3 115. DE Finial Endbell Fit Size 3 116. DE Finial Endbell Fit Size 3 117. DE Endbell Fit Size 3 118. DE Finial Endbell Fit Size 3 119. DE Finial Endbell Fit Size 3	1 09.	DE Bearing Shaft Fit	(P) Pass
112. DE Initial Shaft Bearing Fit Size 1 113. DE Finial Shaft Bearing Fit Size 2 115. DE Finial Shaft Bearing Fit Size 3 116. ODE Bearing Shaft Fit 117. ODE Initial Shaft Bearing Fit Size 1 118. ODE Initial Shaft Bearing Fit Size 2 119. ODE Initial Shaft Bearing Fit Size 2 119. ODE Initial Shaft Bearing Fit Size 2 119. ODE Initial Shaft Bearing Fit Size 3 110. ODE Finial Shaft Bearing Fit Size 3 111. ODE Finial Shaft Bearing Fit Size 3 112. ODE Finial Shaft Bearing Fit Size 2 113. ODE Finial Shaft Bearing Fit Size 2 114. ODE Finial Shaft Bearing Fit Size 2 115. ODE Finial Shaft Bearing Fit Size 3 116. ODE Finial Shaft Bearing Fit Size 3 117. ODE Initial Air Seal Shaft Fit 118. ODE Initial Air Seal Shaft Size 119. ODE Initial Air Seal Shaft Size 120. ODE Finial Shaft Bearing Fit Size 3 121. ODE Initial Air Seal Shaft Size 122. ODE Finial Shaft Bearing Fit Size 3 123. DE Initial Air Seal Shaft Size 124. ODE Initial Air Seal Shaft Size 125. DE Final Air Seal Shaft Size 126. ODE Air Seal Shaft Size 127. ODE Initial Air Seal Shaft Size 128. ODE Finial Air Seal Shaft Size 129. DE Endbell Fit Size 3 130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 3 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 3 133. DE Final Endbell Fit Size 3 134. DE Finial Endbell Fit Size 3 135. DE Final Endbell Fit Size 2 136. DE Final Endbell Fit Size 3 137. DE Endbell Fit Size 3 138. DE Final Endbell Fit Size 3	110.	DE Initial Shaft Bearing Fit Size 1	1.7722 "
113. DE Finial Shaft Bearing Fit Size 1 114. DE Finial Shaft Bearing Fit Size 2 115. DE Finial Shaft Bearing Fit Size 3 116. ODE Bearing Shaft Fit 117. ODE Initial Shaft Bearing Fit Size 1 118. ODE Initial Shaft Bearing Fit Size 2 119. ODE Initial Shaft Bearing Fit Size 3 119. ODE Initial Shaft Bearing Fit Size 3 110. ODE Finial Shaft Bearing Fit Size 1 111. ODE Finial Shaft Bearing Fit Size 1 112. ODE Finial Shaft Bearing Fit Size 2 112. ODE Finial Shaft Bearing Fit Size 2 112. ODE Finial Shaft Bearing Fit Size 3 112. ODE Finial Shaft Bearing Fit Size 3 112. DE Air Seal Shaft Fit 112. DE Finial Shaft Bearing Fit Size 3 112. DE Air Seal Shaft Fit 112. DE Initial Air Seal Shaft Size 112. DE Finial Air Seal Shaft Size 112. DE Finial Air Seal Shaft Size 113. DE Initial Air Seal Shaft Size 114. DE Finial Air Seal Shaft Size 115. DE Finial Air Seal Shaft Size 118. ODE Finial Air Seal Shaft Size 119. DE Initial Endbell Fit Size 1 119. DE Initial Endbell Fit Size 1 119. DE Initial Endbell Fit Size 3 119. DE Initial Endbell Fit Size 3 119. DE Initial Endbell Fit Size 3 119. DE Finial Endbell Fit Size 3	111.	DE Initial Shaft Bearing Fit Size 2	1.7722 "
114. DE Finial Shaft Bearing Fit Size 2 115. DE Finial Shaft Bearing Fit Size 3 116. ODE Bearing Shaft Fit (P) Pass 117. ODE Initial Shaft Bearing Fit Size 1 0.9847 " 118. ODE Initial Shaft Bearing Fit Size 2 0.9847 " 119. ODE Initial Shaft Bearing Fit Size 3 0.9847 " 119. ODE Initial Shaft Bearing Fit Size 3 0.9847 " 120. ODE Finial Shaft Bearing Fit Size 1 121. ODE Finial Shaft Bearing Fit Size 2 122. ODE Finial Shaft Bearing Fit Size 3 123. DE Air Seal Shaft Fit 124. DE Initial Air Seal Shaft Size 125. DE Finial Air Seal Shaft Size 126. ODE Air Seal Shaft Size 127. ODE Initial Air Seal Shaft Size 128. ODE Finial Air Seal Shaft Size 129. DE Endbell Fit Mean Shaft Size 129. DE Initial Endbell Fit Size 1 3.9378 " 131. DE Initial Endbell Fit Size 2 3.9378 " 132. DE Initial Endbell Fit Size 3 3.9378 " 133. DE Final Endbell Fit Size 1 134. DE Finial Endbell Fit Size 1 135. DE Finial Endbell Fit Size 2 136. DE Finial Endbell Fit Size 3 137. DE Finial Endbell Fit Size 3 138. DE Final Endbell Fit Size 3 139. DE Final Endbell Fit Size 3 130. DE Final Endbell Fit Size 1 131. DE Finial Endbell Fit Size 3 132. DE Finial Endbell Fit Size 3 133. DE Final Endbell Fit Size 1 134. DE Finial Endbell Fit Size 1 135. DE Finial Endbell Fit Size 3 136. DE Final Endbell Fit Size 3 137. DE Endbell Air Seal Fit Size 1	112.	DE Initial Shaft Bearing Fit Size 3	1.7722 "
115. DE Finial Shaft Bearing Fit Size 3 116. ODE Bearing Shaft Fit 117. ODE Initial Shaft Bearing Fit Size 1 118. ODE Initial Shaft Bearing Fit Size 2 119. ODE Initial Shaft Bearing Fit Size 3 119. ODE Initial Shaft Bearing Fit Size 3 120. ODE Finial Shaft Bearing Fit Size 1 121. ODE Finial Shaft Bearing Fit Size 2 122. ODE Finial Shaft Bearing Fit Size 3 123. DE Air Seal Shaft Fit 124. DE Initial Air Seal Shaft Size 125. DE Finial Air Seal Shaft Size 126. ODE Air Seal Shaft Fit 127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit 109. DE Initial Endbell Fit Size 1 130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 3 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 1 134. DE Finial Endbell Fit Size 1 135. DE Final Endbell Fit Size 2 136. DE Final Endbell Fit Size 3 137. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit Size	113.	DE Finial Shaft Bearing Fit Size 1	
116. ODE Bearing Shaft Fit 17. ODE Initial Shaft Bearing Fit Size 1 18. ODE Initial Shaft Bearing Fit Size 2 19. ODE Initial Shaft Bearing Fit Size 3 19. ODE Finial Shaft Bearing Fit Size 3 19. ODE Finial Shaft Bearing Fit Size 1 19. ODE Finial Shaft Bearing Fit Size 1 19. ODE Finial Shaft Bearing Fit Size 2 19. ODE Finial Shaft Bearing Fit Size 2 19. ODE Finial Shaft Bearing Fit Size 3 19. DE Air Seal Shaft Fit 19. ODE Finial Shaft Bearing Fit Size 3 19. DE Air Seal Shaft Size 19. DE Air Seal Shaft Size 19. DE Final Air Seal Shaft Size 19. ODE Air Seal Shaft Size 19. ODE Initial Air Seal Shaft Size 19. DE Endbell Fit 19. ODE Initial Fit Size 1 19. DE Initial Endbell Fit Size 1 19. DE Initial Endbell Fit Size 2 19. DE Initial Endbell Fit Size 3 19. DE Initial Endbell Fit Size 3 19. DE Finial Endbell Fit Size 3 19. DE Endbell Air Seal Fit Size	114.	DE Finial Shaft Bearing Fit Size 2	
117. ODE Initial Shaft Bearing Fit Size 1 118. ODE Initial Shaft Bearing Fit Size 2 119. ODE Initial Shaft Bearing Fit Size 3 10.9847 " 119. ODE Initial Shaft Bearing Fit Size 3 120. ODE Finial Shaft Bearing Fit Size 1 121. ODE Finial Shaft Bearing Fit Size 2 122. ODE Finial Shaft Bearing Fit Size 3 123. DE Air Seal Shaft Fit 124. DE Initial Air Seal Shaft Size 125. DE Final Air Seal Shaft Size 126. ODE Air Seal Shaft Size 127. ODE Initial Air Seal Shaft Size 128. ODE Finial Air Seal Shaft Size 129. DE Endbell Fit 120. DE Endbell Fit Size 1 130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Finial Endbell Fit Size 1 134. DE Finial Endbell Fit Size 1 135. DE Finial Endbell Fit Size 3 136. DE Endbell Fit Size 3 137. DE Endbell Fit Size 3 138. Initial Endbell Air Seal Fit Size	115.	DE Finial Shaft Bearing Fit Size 3	
118. ODE Initial Shaft Bearing Fit Size 2 119. ODE Initial Shaft Bearing Fit Size 3 120. ODE Finial Shaft Bearing Fit Size 1 121. ODE Finial Shaft Bearing Fit Size 2 122. ODE Finial Shaft Bearing Fit Size 3 123. DE Air Seal Shaft Fit 124. DE Initial Air Seal Shaft Size 125. DE Final Air Seal Shaft Size 126. ODE Air Seal Shaft Size 127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit Size 1 129. DE Endbell Fit Size 1 130. DE Initial Endbell Fit Size 2 131. DE Initial Endbell Fit Size 3 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 3 134. DE Final Endbell Fit Size 3 135. DE Final Endbell Fit Size 1 136. DE Final Endbell Fit Size 3 137. DE Final Endbell Fit Size 3 138. DE Final Endbell Fit Size 3 139. DE Final Endbell Fit Size 3 130. DE Final Endbell Fit Size 3 131. DE Final Endbell Fit Size 1 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 1 134. DE Final Endbell Fit Size 3 135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Size 3 137. DE Endbell Fit Size 3 138. Initial Endbell Air Seal Fit Size	1 16.	ODE Bearing Shaft Fit	(P) Pass
119. ODE Initial Shaft Bearing Fit Size 3 120. ODE Finial Shaft Bearing Fit Size 1 121. ODE Finial Shaft Bearing Fit Size 2 122. ODE Finial Shaft Bearing Fit Size 3 123. DE Air Seal Shaft Fit 124. DE Initial Air Seal Shaft Size 125. DE Final Air Seal Shaft Size 126. ODE Air Seal Shaft Fit 127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit 129. DE Endbell Fit 130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 3 134. DE Finial Endbell Fit Size 1 135. DE Finial Endbell Fit Size 1 136. DE Finial Endbell Fit Size 3 137. DE Finial Endbell Fit Size 3 138. DE Finial Endbell Fit Size 3 139. DE Finial Endbell Fit Size 3 130. DE Finial Endbell Fit Size 1 131. DE Finial Endbell Fit Size 3 132. DE Finial Endbell Fit Size 3 133. DE Finial Endbell Fit Size 1 134. DE Finial Endbell Fit Size 1 135. DE Finial Endbell Fit Size 3 136. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	117.	ODE Initial Shaft Bearing Fit Size 1	0.9847 "
120. ODE Finial Shaft Bearing Fit Size 1 121. ODE Finial Shaft Bearing Fit Size 2 122. ODE Finial Shaft Bearing Fit Size 3 123. DE Air Seal Shaft Fit 124. DE Initial Air Seal Shaft Size 125. DE Final Air Seal Shaft Size 126. ODE Air Seal Shaft Fit 127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit 129. DE Endbell Fit 130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 3 134. DE Finial Endbell Fit Size 2 135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	118.	ODE Initial Shaft Bearing Fit Size 2	0.9847 "
121. ODE Finial Shaft Bearing Fit Size 2 122. ODE Finial Shaft Bearing Fit Size 3 123. DE Air Seal Shaft Fit 124. DE Initial Air Seal Shaft Size 125. DE Final Air Seal Shaft Size 126. ODE Air Seal Shaft Fit 127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit 129. DE Endbell Fit Size 1 130. DE Initial Endbell Fit Size 2 131. DE Initial Endbell Fit Size 3 132. DE Final Endbell Fit Size 3 133. DE Final Endbell Fit Size 1 134. DE Finial Endbell Fit Size 2 135. DE Final Endbell Fit Size 3 136. DE Final Endbell Fit Size 3 137. DE Final Endbell Fit Size 3 138. DE Final Endbell Fit Size 3 139. DE Final Endbell Fit Size 3 130. DE Final Endbell Fit Size 3 131. DE Final Endbell Fit Size 3 132. DE Final Endbell Fit Size 1 133. DE Final Endbell Fit Size 1 134. DE Final Endbell Fit Size 3 135. DE Final Endbell Fit Size 3 136. DE Endbell Air Seal Fit 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	119.	ODE Initial Shaft Bearing Fit Size 3	0.9847 "
122. ODE Finial Shaft Bearing Fit Size 3 123. DE Air Seal Shaft Fit 124. DE Initial Air Seal Shaft Size 125. DE Final Air Seal Shaft Size 126. ODE Air Seal Shaft Fit 127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit 129. DE Endbell Fit Size 1 130. DE Initial Endbell Fit Size 2 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 1 134. DE Finial Endbell Fit Size 1 135. DE Finial Endbell Fit Size 2 136. DE Finial Endbell Fit Size 3 137. DE Finial Endbell Fit Size 3 138. DE Finial Endbell Fit Size 3 139. DE Finial Endbell Fit Size 3 130. DE Finial Endbell Fit Size 3 131. DE Finial Endbell Fit Size 3 132. DE Finial Endbell Fit Size 1 133. DE Finial Endbell Fit Size 3 134. DE Finial Endbell Fit Size 3 135. DE Finial Endbell Fit Size 3 136. DE Endbell Air Seal Fit 137. DE Endbell Air Seal Fit	120.	ODE Finial Shaft Bearing Fit Size 1	
123. DE Air Seal Shaft Fit 124. DE Initial Air Seal Shaft Size 125. DE Final Air Seal Shaft Size 126. ODE Air Seal Shaft Fit 127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit 129. DE Initial Endbell Fit Size 1 130. DE Initial Endbell Fit Size 2 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 3 134. DE Final Endbell Fit Size 1 135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	121.	ODE Finial Shaft Bearing Fit Size 2	
124. DE Initial Air Seal Shaft Size 125. DE Final Air Seal Shaft Size 126. ODE Air Seal Shaft Fit 127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit 129. DE Initial Endbell Fit Size 1 130. DE Initial Endbell Fit Size 2 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 3 134. DE Final Endbell Fit Size 1 135. DE Final Endbell Fit Size 2 136. DE Endbell Fit Size 3 137. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit Size	122.	ODE Finial Shaft Bearing Fit Size 3	
125. DE Final Air Seal Shaft Size 126. ODE Air Seal Shaft Fit 127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit (P) Pass 130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 3 134. DE Final Endbell Fit Size 1 135. DE Final Endbell Fit Size 2 136. DE Final Endbell Fit Size 3 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	123.	DE Air Seal Shaft Fit	
126. ODE Air Seal Shaft Fit 127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit (P) Pass 130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Initial Endbell Fit Size 3 134. DE Final Endbell Fit Size 1 135. DE Final Endbell Fit Size 2 136. DE Final Endbell Fit Size 3 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	124.	DE Initial Air Seal Shaft Size	
127. ODE Initial Air Seal Shaft Size 128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit (P) Pass 130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 3 134. DE Final Endbell Fit Size 1 135. DE Final Endbell Fit Size 2 136. DE Final Endbell Fit Size 3 137. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	125.	DE Final Air Seal Shaft Size	
128. ODE Final Air Seal Shaft Size 129. DE Endbell Fit (P) Pass 130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 1 134. DE Final Endbell Fit Size 2 135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	126.	ODE Air Seal Shaft Fit	
129. DE Endbell Fit 130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 1 134. DE Finial Endbell Fit Size 1 135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Insulated 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	127.	ODE Initial Air Seal Shaft Size	
130. DE Initial Endbell Fit Size 1 131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 1 134. DE Finial Endbell Fit Size 2 135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	128.	ODE Final Air Seal Shaft Size	
131. DE Initial Endbell Fit Size 2 132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 1 134. DE Finial Endbell Fit Size 2 135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	1 29.	DE Endbell Fit	(P) Pass
132. DE Initial Endbell Fit Size 3 133. DE Final Endbell Fit Size 1 134. DE Finial Endbell Fit Size 2 135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Insulated 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	130.	DE Initial Endbell Fit Size 1	3.9378 "
133. DE Final Endbell Fit Size 1 134. DE Finial Endbell Fit Size 2 135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	131.	DE Initial Endbell Fit Size 2	3.9378 "
134. DE Finial Endbell Fit Size 2 135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	132.	DE Initial Endbell Fit Size 3	3.9378 "
135. DE Final Endbell Fit Size 3 136. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	133.	DE Final Endbell Fit Size 1	
136. DE Endbell Fit Insulated (N) No 137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	134.	DE Finial Endbell Fit Size 2	
137. DE Endbell Air Seal Fit 138. Initial Endbell Air Seal Fit Size	135.	DE Final Endbell Fit Size 3	
138. Initial Endbell Air Seal Fit Size	136.	DE Endbell Fit Insulated	(N) No
	137.	DE Endbell Air Seal Fit	
	138.	Initial Endbell Air Seal Fit Size	
139. Finial Endbell Air Seal Fit Size	139.	Finial Endbell Air Seal Fit Size	
140. ODE Endbell Fit (P) Pass	1 40.	ODE Endbell Fit	(P) Pass
141. ODE Initial Endbell Fit Size 1 2.0479 "	141.	ODE Initial Endbell Fit Size 1	2.0479 "
142. ODE Initial Endbell Fit Size 2 2.0479 "	142.	ODE Initial Endbell Fit Size 2	2.0479 "
143. ODE Initial Endbell Fit Size 3 2.0479 "	143.	ODE Initial Endbell Fit Size 3	2.0479 "

	ODE Final Endbell Fit Size 1	
	ODE Final Endbell Fit Size 2	
	ODE Final Endbell Fit Size 3	
_	ODE Endbell Fit Insulated	(N) No
	ODE Endbell Air Seal Fit	
	ODE Initial Endbell Seal Fit Size	
150.	ODE Finial Endbell Seal Fit Size	
	Foot Flatness	
	Foot Condition	
	Flange Condition	
154.	Service Technician	Trevor Hall
	cing Report	
	Balance Type	
	Balance Operating Speed	
_	Start Left End	
	Start Right End	
	Balancing Specification	
	Finish Left End	
	Finish Right End	
	Service Technician	
	ibly and Final Test	
	Rotor and Impeller Balanced	
	Stator Housing Refilled with Oil (if required)	
	Stator Pressure Test	
	Seal Cavity Pressure Test	
	Time Under Pressure	
	Overload Continuity	
	Water Sensor Open?	
	Meggar Testing Reading	
	Surge Test	
	Hi-Pot	
	Winding Resistance 1-2	
	Winding Resistance 2-3	
	Winding Resistance 1-3	
_	Test Run	
	Test Run Voltage Phase A	
	Test Run Amps A	
	Test Run Voltage Phase B	
	Test Run Amps B	
181	Test Run Voltage Phase C	
182.	Test Run Amps C DE Horizontal Vibration Reading	

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

184. DE Vertical Vibration Reading

185.	DE Axial Vibration Reading
186.	ODE Horizontal Vibration Reading
187.	ODE Vertical Vibration Reading
188.	ODE Axial Vibration Reading
189.	Ambient Temp at start of Test Run
190.	Temp at 5 minutes
191.	Temp at 10 minutes
192.	Temp at 15 minutes
193.	Temp at 20 minutes
194.	Temp at 25 minutes
195.	Temp at 30 minutes
196.	Temp at 35 minutes
197.	Temp at 40 minutes
198.	Temp at 45 minutes
199.	Temp at 50 minutes
200.	Temp at 55 minutes
201.	Temp at 60 minutes
202.	Motor Paint
203.	Service Technician



STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. APPLICABILITY. The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. SCOPE OF GOODS AND/OR SERVICES. The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only bee effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. <u>DELIVERY OF GOODS AND/OR SERVICES.</u> Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- **DELIVERY SITE AND TIME FOR PERFORMANCE.** Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have sixty (60) days to cure the alleged discrepancy and/or nonconformance. If Hi-Speed fails to cure in this time period, Buyer shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. <u>WARRANTIES.</u> Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. <u>LIMITATION OF DAMAGES.</u> HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY.</u> The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. **GOVERNING LAW AND JURISDICTION.** Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER.</u> No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. **ASSIGNMENT.** The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. NO INDIVIDUAL LIABILITY. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.