

Motor Shop Repairs

Job Number 99372

Prepared for Peco Foods

625 S. Allen Street Batesville AR 72501

Table of Contents

AC Recondition Repair Report	1.0
Split Case Centrifugal Pump Report	2.0

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Printed on 2/16/2022 Powered by INSPECTALL Table of Contents



FolderID: 99372

FormID: 12802763



AC Recondition Repair Report

Peco Foods

625 S. Allen Street Batesville, AR 72501

Priorities Found: 1 - High

16 - Good

Gene	ral	
1.	Job Number	99372
2.	Report Date	2/10/2022
3.	Customer	PECO Foods Batesville

Name Plate Information

Manufacturer **Baldor**












































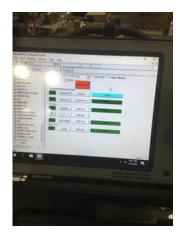













5.	Model	EJMM2333T
-	SPEC 09P014Z910G1	
6.	Serial Number	Z1709211097
7.	Horsepower	15
8.	KW	
9.	Volts	460
10.	Amps	18.1
11.	RPM	1765
12.	Frame	254JM

13.	Enclosure	TEFC
14.	Cycles	60
15.	Phase	3
16.	Service Factor	1.15
17.	Motor Mount Position	
Initial	Inspection	
18.	Number of Leads	9
19.	Lead Length	16 Inches
20.	Lead Size	12
2 1.	Lead Condition	(P) Pass



22.	Lead Markings	1-9
23.	Lug Size, Condition, and Type	
24.	Winding RTD's	(NA) Not Applicable
25.	Winding Rtd's Condition	(NA) Not Applicable
26.	Shaft Run Out	
27.	Does Shaft Turn Freely	no
28.	Does Shaft Have Visible Damage	
29.	Bearing Rtd's	(NA) Not Applicable
30.	Bearing Rtd's Condition	(NA) Not Applicable
31.	Contamination	
32.	Frame Condition	(P) Pass
33.	Fan Condition	(P) Pass



34.	roken or missing components
Initial	lectric Test
35.	tesistance to Ground
36.	Vinding Resistance 1-2
37.	Vinding Resistance 2-3
38.	Vinding Resistance 1-3
39.	tesistive Imbalance
40.	li-Pot
4 1.	Surge Test (P) Pass



42.	Stator Condition	
43.	Failure Location	
Initial	Rotor Inspection	
44.	Rotor Type	cast aluminum
45.	Air Gap <10% Variation	
46.	Number of Rotor Bars	
47.	Number of Broken Rotor Bars	0
48.	Growler Test	(P) Pass
4 9.	Rotor Condition	(P) Pass
Mech	anical Inspection	
50.	Bearing Manufacture	FAG
51.	Bearing DE Size	6309
52.	Bearing DE Type	ball bearing
53.	DE Bearing Qty.	1
54.	Bearing ODE Size	6208
55.	Bearing ODE Type	ball bearing
56.	ODE Bearing Qty.	1
57.	Insulated Bearing	
58.	Lubrication Type	grease

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.







60. Bearing Retainers(Y) Yes



61.	Shaft Grounding Device	
62.	DE Seal	(NA) Not Applicable
63.	DE Seal Type/Size	
64.	ODE Seal	
65.	ODE Seal Type/Size	
Root	Cause of Failure	
66.	Component Failure	bearings
67.	Cause of Failure	
	Wear and mixing of grease	
68.	Comments	
	Recommend reconditioning and new bearings	
69.	Service Technician	
Mach	ne Fit Inspection Report	
70.	Shaft Run Out	
71.	Initial Shaft Run Out	
72.	Final Shaft Run Out	
3 .	DE Bearing Shaft Fit	(P) Pass
74.	DE Initial Shaft Bearing Fit Size 1	1.772 "
75.	DE Initial Shaft Bearing Fit Size 2	1.7721 "

76.	DE Initial Shaft Bearing Fit Size 3	1.7721 "
77.	DE Finial Shaft Bearing Fit Size 1	
78.	DE Finial Shaft Bearing Fit Size 2	
79.	DE Finial Shaft Bearing Fit Size 3	
8 0.	•	(P) Pass
81.		1.5752 "
82.		1.5752 "
83.	ODE Initial Shaft Bearing Fit Size 3	1.5753 "
	ODE Finial Shaft Bearing Fit Size 1	
85.		
86.		
87.	DE Air Seal Shaft Fit	
88.	DE Initial Air Seal Shaft Size	
	DE Final Air Seal Shaft Size	
90.		
91.		
92.		
93.	DE Endbell Fit	(P) Pass
	DE Initial Endbell Fit Size 1	3.938 "
95.		3.9379 "
96.		3.938 "
	DE Final Endbell Fit Size 1	
	DE Finial Endbell Fit Size 2	
	DE Final Endbell Fit Size 3	
	DE Endbell Fit Insulated	
	DE Endbell Air Seal Fit	
102.	Initial Endbell Air Seal Fit Size	
103.	Finial Endbell Air Seal Fit Size	
1 04.	ODE Endbell Fit	(P) Pass
105.	ODE Initial Endbell Fit Size 1	3.1496 "
106.	ODE Initial Endbell Fit Size 2	3.1497 "
107.	ODE Initial Endbell Fit Size 3	3.1496 "
108.	ODE Final Endbell Fit Size 1	
	ODE Final Endbell Fit Size 2	
	ODE Final Endbell Fit Size 3	
	ODE Endbell Fit Insulated	
	ODE Endbell Air Seal Fit	
113.	ODE Initial Endbell Seal Fit Size	
	ODE Finial Endbell Seal Fit Size	
115.	Foot Flatness	(P) Pass
	Foot Condition	(P) Pass
	Flange Condition	(P) Pass
	Service Technician	. ,
	cing Report	
	Balance Type	
	Balance Operating Speed	
	Start Left End	
1.		

Start Right End Balancing Specification
Salaricing Openitioning
Finish Left End
Finish Right End
·
Service Technician
bly and Final Test
Meggar Testing Reading
Surge Test
Hi-Pot
Winding Resistance 1-2
Winding Resistance 2-3
Winding Resistance 1-3
Test Run Voltage Phase A
Test Run Amps A
Test Run Voltage Phase B
Test Run Amps B
Test Run Voltage Phase C
Test Run Amps C
DE Horizontal Vibration Reading
DE Vertical Vibration Reading
DE Axial Vibration Reading
DDE Horizontal Vibration Reading
DDE Vertical Vibration Reading
DDE Axial Vibration Reading
Ambient Temp at start of Test Run
Γemp at 5 minutes
Γemp at 10 minutes
Γemp at 15 minutes
Γemp at 20 minutes
Temp at 25 minutes
Temp at 30 minutes
Femp at 35 minutes
Femp at 40 minutes
Γemp at 45 minutes
Temp at 50 minutes
Temp at 55 minutes
Temp at 60 minutes
Motor Paint
Service Technician

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.



FolderID: 99372 FormID: 12802764



Split Case Centrifugal Pump Report

Peco Foods 625 S. Allen Street Batesville, AR 72501

Priorities Found: A 2 - High

Priorities	s Found: (a) 2 - High	1 - Low	2 - Good		
Gene	ral				
1.	Job Number			99372	
2.	Report Date			2/10/2022	
3.	Customer			PECO Foods Batesville	
Name	Plate Information				
4.	Manufacturer			pentair	
5.	Model				
6.	Serial Number				
7.	RPM			1800	
8.	Flow Rate				
9.	Pressure Head				
10.	Inlet Diameter				
11.	Outlet Diameter				
Initial	Inspection				
1 2.	Bowl Condition			(P) Pass	
13.	Impeller Condition			(F) Fail	








18.	Seal Type	Mechanical
17.	Number of Seals	1
16.	Seal Surfaces Condition	(P) Pass
15.	Wear Ring Material	brass

(F) Fail

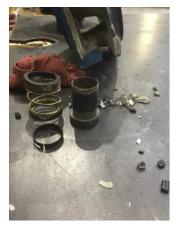

19.	Seal Material on Rotary Face	carbon
20.	Seal Material on Stationary Seat	carbon ceramic
21.	Mechanical Seal ID/Shaft Diameter	1.5 in
22.	Mechanical Seal OD	2.125 in
23.	Mechanical Seal Length	2.1 in
-	Seal has been compressed, not accurate measurement	
24.	Lip Seal Elastic Material	Viton
25.	Lip Seal ID/Shaft Diameter	40 in
26.	Lip Seal OD/Bore Diameter	in
27.	Lip Seal Height	
28.	Seal Sleeve Material	brass
29.	Seal Plate Condition	
30.	Seal Cavity	Water Lubricated
31.	Shaft Run Out	
32.	Does Shaft Turn Freely	yes
33.	Does Shaft Have Visible Damage	no

	Contamination	
35.	Frame Condition	(P) Pass
36.	Fan Condition	. ,
37.	Broken or missing components	
Mech	anical Inspection	
	Bearing Manufacture	
	Bearing DE Size	
	Bearing DE Type	
	DE Bearing Qty.	
	Bearing ODE Size	
	Bearing ODE Type	
	ODE Bearing Qty.	
	Insulated Bearing	
	Lubrication Type	
47.	Grease Condition	
48.	Bearing Retainers	
	Shaft Grounding Device	
	DE Seal	
51.	DE Seal Type/Size	
	ODE Seal	
53.	ODE Seal Type/Size	
	Wear Ring Size	
55.	Clearances on Wear Ring to Impeller	
56.	Number of Wear Rings	
57.	Wear Ring Material	
Root	Cause of Failure	
58.	Component Failure	impeller, wear ring, and seal
59.	Cause of Failure	
	Wear	
60.	Comments	
	Recommend new impeller, new seal, new wear ring	
61.	Service Technician	
Mach	ine Fit Inspection Report	
	ine Fit Inspection Report Shaft Run Out	
62. 63.	Shaft Run Out	
62. 63.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out	
62. 63. 64.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out	
62. 63. 64. 65.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out DE Bearing Shaft Fit	
62. 63. 64. 65. 66.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out DE Bearing Shaft Fit DE Initial Shaft Bearing Fit Size 1 DE Initial Shaft Bearing Fit Size 2	
62. 63. 64. 65. 66. 67.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out DE Bearing Shaft Fit DE Initial Shaft Bearing Fit Size 1 DE Initial Shaft Bearing Fit Size 2	
62. 63. 64. 65. 66. 67.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out DE Bearing Shaft Fit DE Initial Shaft Bearing Fit Size 1 DE Initial Shaft Bearing Fit Size 2 DE Initial Shaft Bearing Fit Size 3	
62. 63. 64. 65. 66. 67. 68.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out DE Bearing Shaft Fit DE Initial Shaft Bearing Fit Size 1 DE Initial Shaft Bearing Fit Size 2 DE Initial Shaft Bearing Fit Size 3 DE Finial Shaft Bearing Fit Size 1	
62. 63. 64. 65. 66. 67. 68. 69.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out DE Bearing Shaft Fit DE Initial Shaft Bearing Fit Size 1 DE Initial Shaft Bearing Fit Size 2 DE Initial Shaft Bearing Fit Size 3 DE Finial Shaft Bearing Fit Size 1 DE Finial Shaft Bearing Fit Size 2	
62. 63. 64. 65. 66. 67. 68. 69. 70.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out DE Bearing Shaft Fit DE Initial Shaft Bearing Fit Size 1 DE Initial Shaft Bearing Fit Size 2 DE Initial Shaft Bearing Fit Size 3 DE Finial Shaft Bearing Fit Size 1 DE Finial Shaft Bearing Fit Size 2 DE Finial Shaft Bearing Fit Size 2 DE Finial Shaft Bearing Fit Size 2	
62. 63. 64. 65. 66. 67. 68. 69. 71. 72. 73.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out DE Bearing Shaft Fit DE Initial Shaft Bearing Fit Size 1 DE Initial Shaft Bearing Fit Size 2 DE Initial Shaft Bearing Fit Size 3 DE Finial Shaft Bearing Fit Size 1 DE Finial Shaft Bearing Fit Size 2 DE Finial Shaft Bearing Fit Size 2 DE Finial Shaft Bearing Fit Size 3 ODE Bearing Shaft Fit ODE Initial Shaft Bearing Fit Size 1 ODE Initial Shaft Bearing Fit Size 2	
62. 63. 64. 65. 66. 67. 68. 69. 71. 72. 73.	Shaft Run Out Initial Shaft Run Out Final Shaft Run Out DE Bearing Shaft Fit DE Initial Shaft Bearing Fit Size 1 DE Initial Shaft Bearing Fit Size 2 DE Initial Shaft Bearing Fit Size 3 DE Finial Shaft Bearing Fit Size 1 DE Finial Shaft Bearing Fit Size 1 DE Finial Shaft Bearing Fit Size 2 DE Finial Shaft Bearing Fit Size 3 ODE Bearing Shaft Fit ODE Initial Shaft Bearing Fit Size 1	

76. ODE Finial Shaft Bearing Fit Size 2 77. ODE Finial Shaft Bearing Fit Size 2 78. ODE Finial Shaft Bearing Fit Size 3 79. DE Air Seal Shaft Fit 80. DE Initial Air Seal Shaft Size 81. DE Final Air Seal Shaft Size 82. ODE Air Seal Shaft Fit 83. ODE Initial Air Seal Shaft Size 84. ODE Final Air Seal Shaft Size 85. DE Endbell Fit Size 1 86. DE Initial Air Seal Shaft Size 86. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 1 88. DE Initial Endbell Fit Size 2 89. DE Final Endbell Fit Size 3 89. DE DE Final Endbell Fit Size 3 89. DE Final Endbell Fit Size 3 89. DE DE Final Endbell Fit Size 3 89. DE DE Final Endbell Fit Size 3 89. DE DE Endbell Fit Size 3 89. DE DE Endbell Fit Size 3 89. DE Endbell Fit Size 3 89. DE Endbell Fit Size 3 89. DE Final Endbell Fit Size 6 80. DE Endbell Fit Size 6 81. DE Final Endbell Fit Size 7 82. DE Endbell Fit Size 8 83. DE Final Endbell Fit Size 8 84. DE Final Endbell Fit Size 8 85. DE Final Endbell Fit Size 8 86. DE Final Endbell Fit Size 8 87. DE Final Endbell Fit Size 8 88. DE Final Endbell Fit Size 8 89. DE Final Endbell Fit		
78. ODE Finial Shaft Bearing Fit Size 3 79. DE Air Saal Shaft Fit 80. DE Initial Air Seal Shaft Size 81. DE Finial Air Seal Shaft Size 82. ODE Air Seal Shaft Fit 83. ODE Initial Air Seal Shaft Size 84. ODE Finial Air Seal Shaft Size 85. DE Endball Fit 86. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 2 89. DE Finial Endbell Fit Size 3 89. DE Endbell Fit Size 1 80. DE Pinial Endbell Fit Size 3 80. DE Endbell Fit Size 1 80. DE Endbell Fit Size 3 80. DE Endbell Fit Size 4 80. DE Endbell Fit Size 5 81. DE Endbell Fit Size 6 82. DE Endbell Fit Size 6 83. ODE Endbell Fit Size 6 84. ODE Endbell Fit Size 6 85. DE Endbell Fit Size 6 86. ODE Endbell Fit Size 7 87. ODE Initial Endbell Fit Size 6 88. ODE Initial Endbell Fit Size 6 89. ODE Initial Endbell Fit Size 6 80. ODE Finial Endbell Fit Size 7 80. ODE Finial Endbell Fit Size 8 80. ODE Finial Endbell Fit Size 8 80. ODE Finial Endbell Fit Size 9 80. ODE Finial Endbel	76.	ODE Finial Shaft Bearing Fit Size 1
79. DE Air Seal Shaft Fit 80. DE Initial Air Seal Shaft Size 81. DE Final Air Seal Shaft Size 82. ODE Air Seal Shaft Fit 83. ODE Initial Air Seal Shaft Size 84. ODE Final Air Seal Shaft Size 85. DE Endbell Fit 86. DE Endbell Fit 86. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 2 88. DE Initial Endbell Fit Size 2 89. DE Final Endbell Fit Size 1 90. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 3 91. DE Final Endbell Fit Size 3 92. DE Endbell Air Seal Fit Size 3 93. DE Endbell Air Seal Fit Size 3 94. DE Endbell Air Seal Fit Size 3 95. Final Endbell Fit Size 3 96. ODE Endbell Air Seal Fit Size 3 97. DE Initial Endbell Fit Size 3 98. DE Initial Endbell Fit Size 3 99. ODE Initial Endbell Fit Size 3 90. ODE Initial Endbell Fit Size 5 91. ODE Initial Endbell Fit Size 6 91. ODE Endbell Fit Size 6 92. ODE Initial Endbell Fit Size 7 93. ODE Initial Endbell Fit Size 8 94. ODE Initial Endbell Fit Size 9 95. ODE Initial Endbell Fit Size 9 96. ODE Final Endbell Fit Size 1 97. ODE Initial Endbell Fit Size 2 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 2 90. ODE Final Endbell Fit Size 3 100. ODE Final Endbell Fit Size 3 101. ODE Final Endbell Fit Size 6 102. ODE Final Endbell Fit Size 8 103. ODE Endbell Fit Insulated 104. ODE Endbell Air Seal Fit Size 105. ODE Initial Endbell Seal Fit Size 106. ODE Final Endbell Fit Size 8 107. Foot Flatness 108. Foot Condition 109. Flange Condition 109. Flange Condition 109. Flange Condition 109. Flange Condition 100. Flange Condition 100. Flange Condition 101. Service Technician Balancing Report 111. Balance Type 112. Balance Type 113. Start Left End 114. Start Right End 115. Service Technician Assembly and Final Test	77.	ODE Finial Shaft Bearing Fit Size 2
80. DE Initial Air Seal Shaft Size 81. DE Final Air Seal Shaft Size 82. ODE Air Seal Shaft Size 83. ODE Initial Air Seal Shaft Size 84. ODE Final Air Seal Shaft Size 84. ODE Final Air Seal Shaft Size 85. DE Endbell Fit 86. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 2 88. DE Initial Endbell Fit Size 2 89. DE Final Endbell Fit Size 1 90. DE Final Endbell Fit Size 1 91. DE Final Endbell Fit Size 2 92. DE Endbell Fit Size 3 93. DE Endbell Fit Size 3 94. Initial Endbell Fit Size 3 95. DE Endbell Air Seal Fit Size 9 96. ODE Endbell Air Seal Fit Size 9 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 1 99. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 2 90. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 3 101. ODE Final Endbell Fit Size 3 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Size 3 104. ODE Final Endbell Fit Size 3 105. ODE Final Endbell Fit Size 3 106. ODE Final Endbell Fit Size 3 107. ODE Final Endbell Fit Size 3 108. ODE Endbell Fit Size 3 109. ODE Final Endbell Fit Size 3 100. ODE Final Endbell Fit Size 3 101. ODE Final Endbell Fit Size 3 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Size 3 104. ODE Endbell Fit Size 3 105. ODE Initial Endbell Fit Size 9 106. ODE Final Endbell Fit Size 9 107. Foot Final Endbell Fit Size 9 108. ODE Final Endbell Fit Size 9 109. Final Endbell Fit Size 9 109. ODE Final Endbell Fit Size 9 109. Fire Fire Fire Fire Fire Fire Fire Fire	78.	ODE Finial Shaft Bearing Fit Size 3
81. DE Final Air Seal Shatt Size 82. ODE Air Seal Shatt Fit 83. ODE Initial Air Seal Shatt Size 84. ODE Final Air Seal Shatt Size 85. DE Endbell Fit Size 1 87. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 2 88. DE Initial Endbell Fit Size 3 89. DE Final Endbell Fit Size 2 89. DE Final Endbell Fit Size 3 89. DE Final Endbell Fit Size 5 80. DE Endbell Fit Size 8 81. DE Endbell Fit Size 8 82. DE Endbell Fit Size 8 83. DE Endbell Fit Size 8 84. Initial Endbell Fit Size 8 85. Final Endbell Fit Size 1 86. ODE Endbell Fit Size 1 87. ODE Initial Endbell Fit Size 2 89. ODE Initial Endbell Fit Size 2 89. ODE Initial Endbell Fit Size 3 80. ODE Final Endbell Fit Size 3 80. ODE Final Endbell Fit Size 3 80. ODE Final Endbell Fit Size 8 80. ODE Endbell Fit Insulated 80. ODE Final Endbell Fit Size 9 80. ODE Final Endbell	79.	DE Air Seal Shaft Fit
82. ODE Air Seal Shaft Fit 83. ODE Initial Air Seal Shaft Size 85. DE Endbell Fit 86. DE Endbell Fit Size 1 87. DE Initial Endbell Fit Size 2 88. DE Initial Endbell Fit Size 2 88. DE Initial Endbell Fit Size 3 89. DE Final Endbell Fit Size 3 89. DE Endbell Fit Size 6 80. DE Endbell Air Seal Fit Size 6 81. DE Endbell Air Seal Fit Size 8 82. DE Endbell Fit Size 8 83. DE Endbell Fit Size 8 84. Initial Endbell Air Seal Fit Size 8 85. Final Endbell Air Seal Fit Size 8 86. ODE Endbell Fit Size 8 87. ODE Initial Endbell Fit Size 8 88. ODE Initial Endbell Fit Size 1 89. ODE Initial Endbell Fit Size 1 89. ODE Initial Endbell Fit Size 8 80. ODE Final Endbell Fit Size 9	80.	DE Initial Air Seal Shaft Size
83. ODE Initial Air Seal Shaft Size 84. ODE Final Air Seal Shaft Size 85. DE Endbell Fit 86. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 2 88. DE Initial Endbell Fit Size 3 89. DE Final Endbell Fit Size 3 90. DE Final Endbell Fit Size 2 91. DE Final Endbell Fit Size 2 92. DE Endbell Fit Size 1 93. DE Final Endbell Fit Size 3 94. Initial Endbell Air Seal Fit Size 95. Final Endbell Fit Insulated 97. DE Initial Endbell Fit Size 9 96. ODE Endbell Air Seal Fit Size 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 1 99. ODE Initial Endbell Fit Size 1 90. ODE Initial Endbell Fit Size 1 91. ODE Initial Endbell Fit Size 2 92. ODE Initial Endbell Fit Size 3 93. ODE Initial Endbell Fit Size 3 94. ODE Initial Endbell Fit Size 3 95. Final Endbell Fit Size 3 96. ODE Initial Endbell Fit Size 3 97. ODE Initial Endbell Fit Size 3 98. ODE Initial Endbell Fit Size 3 99. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 3 101. ODE Final Endbell Fit Size 3 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Air Seal Fit 1 104. ODE Endbell Air Seal Fit Size 3 105. ODE Initial Endbell Seal Fit Size 1 106. ODE Final Endbell Seal Fit Size 1 107. Foot Fialness 108. Foot Condition 110. Service Technician 8alancing Report 111. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 117. Finish Right End 118. Service Technician Assembly and Final Test	81.	DE Final Air Seal Shaft Size
84. ODE Final Air Seal Shaft Size 85. DE Endoell Fit 86. DE Initial Endoell Fit Size 1 87. DE Initial Endoell Fit Size 2 88. DE Initial Endoell Fit Size 3 89. DE Final Endoell Fit Size 3 89. DE Final Endoell Fit Size 2 91. DE Final Endoell Fit Size 2 91. DE Final Endoell Fit Size 2 92. DE Endoell Fit Insulated 93. DE Endoell Fit Insulated 94. Initial Endoell Air Seal Fit Size 95. Final Endoell Air Seal Fit Size 96. ODE Endoell Air Seal Fit Size 97. ODE Initial Endoell Air Seal Fit Size 98. ODE Endoell Fit Size 1 99. ODE Initial Endoell Fit Size 1 99. ODE Initial Endoell Fit Size 1 90. ODE Pinal Endoell Fit Size 2 100. ODE Final Endoell Fit Size 2 101. ODE Final Endoell Fit Size 3 102. ODE Final Endoell Fit Size 3 103. ODE Endoell Fit Size 3 104. ODE Endoell Fit Size 3 105. ODE Endoell Fit Size 3 106. ODE Final Endoell Fit Size 3 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Finish Right End 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	82.	ODE Air Seal Shaft Fit
85. DE Endbell Fit 86. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 2 89. DE Finial Endbell Fit Size 3 89. DE Finial Endbell Fit Size 2 90. DE Finial Endbell Fit Size 2 91. DE Finial Endbell Fit Size 3 92. DE Endbell Fit Insulated 93. DE Endbell Air Seal Fit 94. Initial Endbell Air Seal Fit Size 95. Finial Endbell Fit Size 1 96. ODE Endbell Air Seal Fit Size 97. ODE Initial Endbell Fit Size 1 98. ODE Endbell Fit Size 1 99. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 1 90. ODE Finial Endbell Fit Size 2 90. ODE Finial Endbell Fit Size 1 91. ODE Finial Endbell Fit Size 3 92. DE Endbell Fit Size 1 93. ODE Endbell Fit Size 1 94. ODE Finial Endbell Fit Size 2 95. DE Initial Endbell Fit Size 3 96. ODE Finial Endbell Fit Size 3 97. ODE Initial Endbell Fit Size 3 98. ODE Finial Endbell Fit Size 4 99. ODE Initial Endbell Fit Size 5 99. ODE Initial Endbell Fit Size 6 90. ODE Finial Endbell Fit Size 6 90. ODE Finial Endbell Fit Size 6 90. ODE Finial Endbell Fit Size 8 90. ODE Finial Endbell Fit Size 8 90. ODE Endbell Air Seal Fit Size 9 90. ODE Initial Endbell Seal Fit Size 9 90. ODE Sinial Endbell Seal	83.	ODE Initial Air Seal Shaft Size
86. DE Initial Endbell Fit Size 1 87. DE Initial Endbell Fit Size 2 88. DE Initial Endbell Fit Size 3 89. DE Final Endbell Fit Size 1 90. DE Final Endbell Fit Size 2 91. DE Final Endbell Fit Size 3 92. DE Endbell Fit Insulated 93. DE Endbell Air Seal Fit 94. Initial Endbell Air Seal Fit 95. Finial Endbell Air Seal Fit 96. ODE Endbell Air Seal Fit Size 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 1 99. ODE Initial Endbell Fit Size 1 99. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 2 100. ODE Final Endbell Fit Size 2 101. ODE Final Endbell Fit Size 3 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Size 1 104. ODE Endbell Fit Size 1 105. ODE Initial Endbell Seal Fit Size 1 106. ODE Final Endbell Seal Fit Size 1 107. Foot Flanses 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Operating Speed 112. Start Left End 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	84.	ODE Final Air Seal Shaft Size
87. DE Initial Endbell Fit Size 2 88. DE Initial Endbell Fit Size 3 89. DE Final Endbell Fit Size 1 90. DE Final Endbell Fit Size 2 91. DE Final Endbell Fit Size 3 92. DE Endbell Fit Insulated 93. DE Endbell Air Seal Fit 94. Initial Endbell Air Seal Fit Size 95. Finial Endbell Air Seal Fit Size 96. ODE Endbell Fit Size 3 97. ODE Initial Endbell Fit Size 3 98. ODE Initial Endbell Fit Size 1 99. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 3 101. ODE Final Endbell Fit Size 3 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Size 3 104. ODE Endbell Fit Size 3 105. ODE Initial Endbell Fit Size 3 106. ODE Final Endbell Fit Size 3 107. ODE Final Endbell Fit Size 3 108. ODE Gnotbell Air Seal Fit Size 1 109. ODE Initial Endbell Seal Fit Size 1 109. ODE Gnotbell Air Seal Fit Size 1 109. ODE Gnotbell Air Seal Fit Size 1 109. ODE Gnotbell Air Seal Fit Size 1 109. ODE Final Endbell Seal Fit Size 1 109. Sort Seal Fit Size 1 109. Foot Flaness 109. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	85.	DE Endbell Fit
88. DE Initial Endbell Fit Size 1 90. DE Finial Endbell Fit Size 2 91. DE Finial Endbell Fit Size 3 92. DE Endbell Fit Insulated 93. DE Endbell Fit Size 8 94. Initial Endbell Air Seal Fit 94. Initial Endbell Air Seal Fit Size 9 95. Finial Endbell Air Seal Fit Size 9 96. ODE Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 1 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 2 100. ODE Final Endbell Fit Size 2 101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 2 103. ODE Endbell Fit Size 3 104. ODE Endbell Fit Size 8 105. ODE Initial Endbell Fit Size 9 106. ODE Final Endbell Fit Size 9 107. Foot Endbell Fit Size 1 108. Foot Condition 109. Flange Condition 110. Service Technician 8alancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 117. Finish Right End 118. Service Technician 8asembly and Final Test	86.	DE Initial Endbell Fit Size 1
89. DE Final Endbell Fit Size 2 91. DE Final Endbell Fit Size 2 92. DE Endbell Fit Insulated 93. DE Endbell Air Seal Fit 94. Initial Endbell Air Seal Fit Size 95. Finial Endbell Air Seal Fit Size 96. ODE Endbell Fit Size 1 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 3 100. ODE Finial Endbell Fit Size 3 101. ODE Final Endbell Fit Size 3 102. ODE Final Endbell Fit Size 3 103. ODE Final Endbell Fit Size 3 104. ODE Final Endbell Fit Size 3 105. ODE Final Endbell Fit Size 3 106. ODE Final Endbell Fit Size 3 107. Foot Pathell Fit Size 8 108. Foot Condition 109. Flange Condition 109. Flange Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	87.	DE Initial Endbell Fit Size 2
90. DE Final Endbell Fit Size 3 92. DE Endbell Fit Insulated 93. DE Endbell Air Seal Fit Insulated 94. Initial Endbell Air Seal Fit Size 95. Final Endbell Air Seal Fit Size 96. ODE Endbell Fit Size 1 97. ODE Initial Endbell Fit Size 2 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 3 100. ODE Final Endbell Fit Size 1 101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Insulated 104. ODE Endbell Air Seal Fit 105. ODE Initial Endbell Fit Size 3 106. ODE Initial Endbell Fit Size 1 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	88.	DE Initial Endbell Fit Size 3
91. DE Final Endbell Fit Insulated 92. DE Endbell Fit Insulated 93. DE Endbell Air Seal Fit 94. Initial Endbell Air Seal Fit Size 95. Final Endbell Air Seal Fit Size 96. ODE Endbell Fit 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 2 100. ODE Final Endbell Fit Size 3 100. ODE Final Endbell Fit Size 2 101. ODE Final Endbell Fit Size 3 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Size 8 104. ODE Endbell Fit Size 8 105. ODE Initial Endbell Seal Fit Size 106. ODE Final Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	89.	DE Final Endbell Fit Size 1
92. DE Endbell Air Seal Fit 94. Initial Endbell Air Seal Fit Size 95. Finial Endbell Air Seal Fit Size 96. ODE Endbell Fit Size 1 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 3 101. ODE Final Endbell Fit Size 1 101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Size 3 104. ODE Endbell Fit Size 3 105. ODE Initial Endbell Fit Size 3 106. ODE Final Endbell Fit Size 8 107. ODE Initial Endbell Seal Fit Size 1 108. Foot Condition 1 109. Final Endbell Seal Fit Size 1 109. Foot Flatness 109. Foot Platness 109. Foot Platness 109. Foot Platness 109. Foot Platness 109. Falage Condition 1 100. Service Technician 1 8alancing Report 1 111. Balance Type 1 112. Balance Operating Speed 1 113. Start Left End 1 114. Start Right End 1 115. Balancing Specification 1 116. Finish Left End 1 117. Finish Right End 1 118. Service Technician 1 Assembly and Final Test	90.	DE Finial Endbell Fit Size 2
93. DE Endbell Air Seal Fit 94. Initial Endbell Air Seal Fit Size 95. Finial Endbell Air Seal Fit Size 96. ODE Endbell Fit 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 3 101. ODE Final Endbell Fit Size 3 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Size 3 104. ODE Endbell Fit Size 3 105. ODE Initial Endbell Fit Size 3 106. ODE Initial Endbell Seal Fit Size 1 107. Foot Flanel Seal Fit Size 1 108. ODE Initial Endbell Seal Fit Size 1 109. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	91.	DE Final Endbell Fit Size 3
94. Initial Endbell Air Seal Fit Size 95. Finial Endbell Air Seal Fit Size 96. ODE Endbell Fit 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 2 100. ODE Final Endbell Fit Size 3 100. ODE Final Endbell Fit Size 3 101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Insulated 104. ODE Endbell Fit Insulated 105. ODE Initial Endbell Seal Fit Size 106. ODE Initial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Enlancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	92.	DE Endbell Fit Insulated
95. Finial Endbell Air Seal Fit Size 96. ODE Endbell Fit 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 1 101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Insulated 104. ODE Endbell Fit Insulated 105. ODE Initial Endbell Seal Fit 106. ODE Finial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Belancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	93.	DE Endbell Air Seal Fit
96. ODE Endbell Fit 97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 1 101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Insulated 104. ODE Endbell Fit Insulated 105. ODE Initial Endbell Fit Size 106. ODE Final Endbell Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician	94.	Initial Endbell Air Seal Fit Size
97. ODE Initial Endbell Fit Size 1 98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 1 101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Insulated 104. ODE Endbell Fit Insulated 105. ODE Initial Endbell Seal Fit 105. ODE Initial Endbell Seal Fit Size 106. ODE Final Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	95.	Finial Endbell Air Seal Fit Size
98. ODE Initial Endbell Fit Size 2 99. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 1 101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Insulated 104. ODE Endbell Fit Insulated 105. ODE Initial Endbell Seal Fit Size 106. ODE Finial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	96.	ODE Endbell Fit
99. ODE Initial Endbell Fit Size 3 100. ODE Final Endbell Fit Size 1 101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Insulated 104. ODE Endbell Air Seal Fit 105. ODE Initial Endbell Seal Fit Size 106. ODE Finial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	97.	ODE Initial Endbell Fit Size 1
100. ODE Final Endbell Fit Size 1 101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Insulated 104. ODE Endbell Air Seal Fit 105. ODE Initial Endbell Seal Fit Size 106. ODE Finial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	98.	ODE Initial Endbell Fit Size 2
101. ODE Final Endbell Fit Size 2 102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Insulated 104. ODE Endbell Air Seal Fit 105. ODE Initial Endbell Seal Fit Size 106. ODE Finial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	99.	ODE Initial Endbell Fit Size 3
102. ODE Final Endbell Fit Size 3 103. ODE Endbell Fit Insulated 104. ODE Endbell Air Seal Fit 105. ODE Initial Endbell Seal Fit Size 106. ODE Finial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	100.	ODE Final Endbell Fit Size 1
103. ODE Endbell Fit Insulated 104. ODE Endbell Air Seal Fit 105. ODE Initial Endbell Seal Fit Size 106. ODE Finial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	101.	ODE Final Endbell Fit Size 2
104. ODE Endbell Air Seal Fit 105. ODE Initial Endbell Seal Fit Size 106. ODE Finial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	102.	ODE Final Endbell Fit Size 3
105. ODE Initial Endbell Seal Fit Size 106. ODE Finial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	103.	ODE Endbell Fit Insulated
106. ODE Finial Endbell Seal Fit Size 107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	104.	ODE Endbell Air Seal Fit
107. Foot Flatness 108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	105.	ODE Initial Endbell Seal Fit Size
108. Foot Condition 109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	106.	ODE Finial Endbell Seal Fit Size
109. Flange Condition 110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	107.	Foot Flatness
110. Service Technician Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	108.	Foot Condition
Balancing Report 111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test		
111. Balance Type 112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	110.	Service Technician
112. Balance Operating Speed 113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	Balan	cing Report
113. Start Left End 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	111.	Balance Type
 114. Start Right End 115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test 	112.	Balance Operating Speed
115. Balancing Specification 116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test	113.	Start Left End
116. Finish Left End 117. Finish Right End 118. Service Technician Assembly and Final Test		
117. Finish Right End 118. Service Technician Assembly and Final Test	115.	Balancing Specification
118. Service Technician Assembly and Final Test		
Assembly and Final Test	117.	Finish Right End
	118.	Service Technician
119. Impeller Balanced	Assen	nbly and Final Test
	119.	Impeller Balanced

120. Seal Cavity Test Pressure	
121. Pressure Test Time	
122. Painted	
123. Final Assembly Completed	
124. Service Technician	



STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. APPLICABILITY. The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. SCOPE OF GOODS AND/OR SERVICES. The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only bee effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. <u>DELIVERY OF GOODS AND/OR SERVICES.</u> Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- **DELIVERY SITE AND TIME FOR PERFORMANCE.** Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have sixty (60) days to cure the alleged discrepancy and/or nonconformance. If Hi-Speed fails to cure in this time period, Buyer shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. <u>LIMITATION OF DAMAGES.</u> HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY.</u> The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. **GOVERNING LAW AND JURISDICTION.** Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. ABANDONED EQUIPMENT. Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER.</u> No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. **ASSIGNMENT.** The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. NO INDIVIDUAL LIABILITY. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.