

EVERY DAY SINCE 1946

LR Motor Shop Repairs

Job Number 99929

Prepared for Searcy Water and Sewer System (11242)

300 N. Elm Street Searcy AR 72145

Table of Contents

AC Recondition As Found - MOTOR SHOP LR



Hi-Speed Industrial Service 7030 Ryburn Dr Millington, Tn 38053 901-873-5300

> FolderID: 99929 FormID: 13851783

AC Recondition As Found

Searcy Water and Sewer System (11242) 300 N. Elm Street

Searcy, AR 72145

AC Recondition - Rev. 2

Location:	MOTOR SHOP LR	
Serial Number:	92708153	

Description:150HP TOSHIBA 3600RPM 445TS

Hi-Speed Job Number:	99929
Manufacturer:	Toshiba
Product Number:	A1503FLG3USH
Serial Number:	92708153
HP/kW:	150 (HP)
RPM:	3575 (RPM)
Frame:	445TS
Voltage:	230 / 460
Current:	338/169
Phase:	Three
Hz:	60 (Hz)
Service Factor:	1.15
Enclosure:	TEFC
J-box Included:	Complete
Coupling/Sheave:	None
Date Received:	06/16/2022
Bearing RTDs:	No
Stator RTDs:	No
Repair Stage:	Final
Heaters:	No
Winding Type :	Random Wound
Bearing Type:	Rolling Element

Priorities Found: **8 - Good**

Overall Condition


- 1. Report Date
- 2. Nameplate Picture









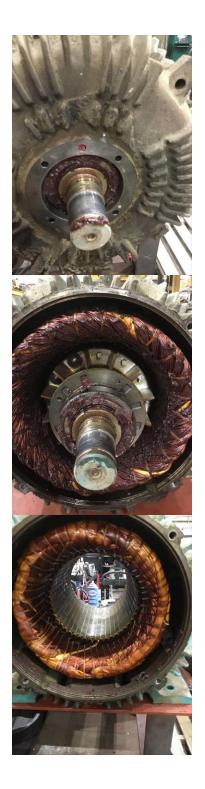







	A REAL PROPERTY AND A REAL		
3.	Describe the Overall Condition	n of the Equipment as Received	
	Dirty		
4.	Photos of all six sides of the m	achine.	
nitial	Mechanical/Electrical		
5.	Does Shaft Turn Freely?		(Yes) Yes
6.	Does Shaft Have Visible Dama	age?	
7.	Assembled Shaft Runout		Inches
8.	Assembled Shaft End Play		
9.	Air Gap Variation <10%		
10.	Lead Condition		(P) Pass
11.	Lead Length		15 Inches
12.	Frame Condition		good
13.	Fan Condition		(P) Pass
14.	Broken or Missing Component	S	
nitial	Electrical Inspection		
15.	Insulation Resistance/Megger		
16.	Winding Resistance		
	1-2	1-3	2-3
) 17.	Perform Surge Test		(P) Pass
18.	Stator Condition		good
Nech			
	anical Inspection		C C
19.	anical Inspection Drive End Bearing Number-		6313 2Z
	•		
20.	Drive End Bearing Number-		6313 2Z
20.	Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type		6313 2Z 1
20. 21.	Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type Drive End Lubrication Type	or Grounding Device?	6313 2Z 1 (Ball) Ball Bearing
20. 21. 22.	 Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type Drive End Lubrication Type Drive End Bearing Insulation of 	or Grounding Device? o-Ring Other Retention Device?	6313 2Z 1 (Ball) Ball Bearing
20. 21. 22. 23.	 Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type Drive End Lubrication Type Drive End Bearing Insulation of Drive End Wavy Washer/Snap 	-	6313 2Z 1 (Ball) Ball Bearing (Grease) Grease Lubricated
20. 21. 22. 23. 24.	 Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type Drive End Lubrication Type Drive End Bearing Insulation of Drive End Wavy Washer/Snap Drive End Bearing Condition 	P-Ring Other Retention Device?	6313 2Z 1 (Ball) Ball Bearing (Grease) Grease Lubricated spanner nut
20. 21. 22. 23. 24. 25.	 Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type Drive End Lubrication Type Drive End Bearing Insulation of Drive End Wavy Washer/Snap Drive End Bearing Condition Opposite Drive End Bearing N 	o-Ring Other Retention Device?	6313 2Z 1 (Ball) Ball Bearing (Grease) Grease Lubricated spanner nut bad
 20. 21. 22. 23. 24. 25. 26. 	 Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type Drive End Lubrication Type Drive End Bearing Insulation of Drive End Wavy Washer/Snap Drive End Bearing Condition Opposite Drive End Bearing Q 	umber-	6313 2Z 1 (Ball) Ball Bearing (Grease) Grease Lubricated spanner nut bad 6313 2 Z
 20. 21. 22. 23. 24. 25. 26. 27. 	 Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type Drive End Lubrication Type Drive End Bearing Insulation of Drive End Wavy Washer/Snap Drive End Bearing Condition Opposite Drive End Bearing Q Opposite Drive End Bearing Q 	e-Ring Other Retention Device? umber- tty. ype	6313 2Z 1 (Ball) Ball Bearing (Grease) Grease Lubricated spanner nut bad 6313 2 Z 1
20. 21. 22. 23. 24. 25. 26. 27. 28. 29.	 Drive End Bearing Number- Drive End Bearing Qty. Drive End Bearing Type Drive End Lubrication Type Drive End Bearing Insulation of Drive End Wavy Washer/Snap Drive End Bearing Condition Opposite Drive End Bearing Q Opposite Drive End Bearing Q 	e-Ring Other Retention Device? umber- uty. ype n Type	6313 2Z 1 (Ball) Ball Bearing (Grease) Grease Lubricated spanner nut bad 6313 2 Z 1 (Ball) Ball Bearing

35. Rotor Type/Material (Squirel Aluminum) Sc Cage Aluminum Di Cage Aluminum Di (Pass 37. 36. Growler Test (Pass 37. 37. Number of Rotor Bars (Pass 37. 38. Rotor Condition (Pass 37. 39. List the Parts needed for the Repair Below 2 - 6313 2Z (Pass 37. 40. Signature of Technician that Disassembled Motor David M Methanization for the Repair Below 2 - 6313 2Z 40. Signature of Technician that Disassembled Motor David M Methanization for the Repair Below 2 - 6313 2Z Methanization for the Repair Below 2 - 600 Degrees 120 Degrees for Degrees 120 Degrees for Degrees 120 Degrees 120 Degrees 120 Degrees 120 Degrees					
34. Opposite Drive End Seal Rotor Inspection 35. Rotor Type/Material (Squirrel Aluminum) Sc Cage Aluminum Di 36. Growler Test (Pass 37. Number of Rotor Bars (Pass 38. Rotor Condition (Pass 39. List the Parts needed for the Repair Below 2 - 6313 22 40. Signature of Technician that Disassembled Motor David N 41. Shaft Runout 42. 42. Rotor Runout Drive End Bearing Fit Drive End Bearing Fit Rotor Body 0 Degrees 90 Degrees 120 Degrees 90 Degrees 14. Coupling Fit Closest to the end of the Shaft 0 Degrees 0 Degrees 60 Degrees 120 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 0 Degrees 60 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 2.5595 2.5595 2.5595 2.5594 46. Drive End Bearing Shaft Fit Condition (P 70. Opposite Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition			1		
Rotor Inspection (Squirrel Aluminum) Sc Cage Aluminum) Sc Cage Aluminum Sc Cage Aluminum Sc Cage Aluminum Sc Cage Aluminum Sc Cage Aluminum Sc 36. Growler Test (Pass 37. Number of Rotor Bars (Pass 38. Rotor Condition (Pass 39. List the Parts needed for the Repair Below 2 - 6313 2Z (Pass 40. Signature of Technician that Disassembled Motor David N Mechanical Fits- Rotor 141 41. Shaft Runout 2 42. Rotor Runout Drive End Bearing Fit Drive End Bearing Fit Rotor Body 0 Degrees 90 Degrees 43. Coupling Fit Closest to the end of the Shaft 0 0 Degrees 60 Degrees 120 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 0 0 Degrees 60 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit (Paperes) 120 Degrees 46. Drive End Bearing Shaft Fit (Paperes) (Paperes) 120 Degrees 60 Degrees 120 Degrees 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Drive End Alearing Shaft Fit Condition (P 48. Opposite				good	llabyrinth
35. Rotor Type/Material (Squirel Aluminum) Dice Cage Aluminum Dice					
Cage Aluminum Di 36. Growler Test (Pass 37. Number of Rotor Bars (Pass 38. Rotor Condition (Pass 39. List the Parts needed for the Repair Below 2 - 6373 2Z 40. Signature of Technician that Disassembled Motor David N Mechanical Fits- Rotor 41. Shaft Runout 2 42. Rotor Runout Drive End Bearing Fit Drive End Bearing Fit Rotor Body 0 Degrees 90 Degrees 43. Coupling Fit Closest to bearing Housing 0 0 Degrees 60 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 0 Degrees 60 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 0 Degrees 0 Degrees 60 Degrees 120 Degrees 46. Drive End Bearing Shaft Fit 0 0 Degrees 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5595 2.5594 46. Drive End Bearing Shaft Fit 0 0 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5595 2.5596 2.5596		•			
 37. Number of Rotor Bars 38. Rotor Condition 39. List the Parts needed for the Repair Below 2 - 6313 2Z 40. Signature of Technician that Disassembled Motor Mechanical Fits- Rotor 41. Shaft Runout 42. Rotor Runout 42. Rotor Runout Drive End Bearing Fit Rotor Body Opgrees 90 Degrees 90 Degrees 120 Degrees 120 Degrees 120 Degrees 120 Degrees 2.5595 2.5595 2.5595 2.5594 46. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5595 2.5594 46. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 2.5595 2.5595 2.5594 48. Opposite Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 2.5595 2.5595 2.5594 50. Drive End Bearing Shaft Fit Opposite Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 2.5595 2.5594 2.5595 2.5594 50. Drive End Bearing Shaft Fit Condition (P 80 Opposite Drive End Bearing Shaft Fit Condition 60 Degrees 120 Degrees 2.5595 2.5595 2.5596 2.5596 2.5596 2.5595 2.5596 2.5596 2.5596 2.5596 2.5595 2.5596 2.59	35.	Rotor Type/Material		(Squirrel Aluminur) Cage Aluminu	n) Squirrel m Die Cast
 38. Rotor Condition 39. List the Parts needed for the Repair Below 2 - 6373 2Z 40. Signature of Technician that Disassembled Motor David M 41. Shaft Runout 42. Rotor Runout 42. Rotor Runout 43. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 120 Degrees 43. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 120 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Degrees 60 Degrees 120 Degrees 2.5595 2.5596 2.5596 2.5595 2.5596 2.5596 2.5596 3.5596 3.5596	36.	Growler Test		(Pass) Pass
 39. List the Parts needed for the Repair Below 2 - 6313 2Z 40. Signature of Technician that Disassembled Motor David Motor David Motor David Motor David Motor David Motor Mechanical Fits- Rotor 41. Shaft Runout 42. Rotor Runout Drive End Bearing Fit Rotor Body Opposite Drive End Bea 43. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 120 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5594 46. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5594 47. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Opposite Drive End Bearing Shaft Fit Condition (P 49. Opposite Drive End Bearing Shaft Fit Condition (P 49. Opposite Drive End Bearing Shaft Fit Condition (P 49. Opposite Drive End Bearing Shaft Fit Condition (P 49. Opposite Drive End Bearing Shaft Fit Condition (P 49. Opposite Drive End Bearing Shaft Fit Condition (P 49. Opposite Drive End Bearing Shaft Fit Condition (P 49. Opposite Drive End Bearing Shaft Fit Condition (P 41. Shaft Air Seal Pits Drive End Air Seal (P 50. Drive End - Endbell Bearing Fit Opposite Drive End Air Seal (P 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 53. Drive End - Endbell Bearing Fit Condition (P 54. Drive End - Endbell Bearing Fit Condition (P 55. Drive End - Endbell Bearing Fit Condition (P 55. Drive End - Endbell Bearing Fit Condition (P 54. Drive End - Endbell Bearing Fit Condition (P 55. Drive End - Endbell Bearing Fit Condition (P 55. Drive End - Endbell Bearing Fit Condition (P 55. Drive End - Endbell Bearing Fit Condition (P 55. Drive End	37.	Number of Rotor Bars			48
2 - 6313 2Z 40. Signature of Technician that Disassembled Motor David M Mathematical Fits- Rotor Mathematical Fits- Rotor 41. Shaft Runout Mathematical Fits- Rotor 42. Rotor Runout Drive End Bearing Fit 42. Rotor Runout Opposite Drive End Bearing Fit 43. Coupling Fit Closest to Bearing Housing Opposite Drive End Bearing 0 Degrees 90 Degrees 43. Coupling Fit Closest to the end of the Shaft To Degrees 0 Degrees 60 Degrees 44. Coupling Fit Closest to the end of the Shaft To Degrees 0 Degrees 60 Degrees 45. Drive End Bearing Shaft Fit To Degrees 0 Degrees 60 Degrees 2.5595 2.5595 2.5595 2.5594 46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits To Degrees 2.6595 2.6595 49. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits To Degrees 50. Drive End A	38.	Rotor Condition			good
Mechanical Fits- Rotor 41. Shaft Runout 42. Rotor Runout Drive End Bearing Fit Rotor Body Opgrees 90 Degrees 43. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 46. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 2.5595 2.5594 46. Drive End Bearing Shaft Fit (P 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5595 2.5594 46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Opposite Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal Mechanical Fits- Bearing Housings 50. Drive End - Endbell Bearing Fit 50. Drive End - Endbell Bearing Fit Condition	39.	•	selow		
41. Shaft Runout 42. Rotor Runout Drive End Bearing Fit Rotor Body Opposite Drive End Bear 43. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 120 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5595 2.5594 120 Degrees 120 Degrees 46. Drive End Bearing Shaft Fit Condition (P 120 Degrees 2.5595 2.5595 2.5596 46. Drive End Bearing Shaft Fit Condition (P 120 Degrees 2.5596	40.	Signature of Technician that Disasser	nbled Motor	Da	avid Maclin
42. Rotor Runout Drive End Bearing Fit Rotor Body Opposite Drive End Bearing Housing 43. Coupling Fit Closest to Bearing Housing 0 Degrees 90 Degrees 120 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 120 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 120 Degrees 46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits 60 Degrees 120 Degrees 2.5595 2.5595 2.5596 50. Drive End Air Seal Opposite Drive End Air Seal (P 48. Opposite Drive End Bearing Fit (P 9. Shaft Air Seal Fits (P (P 9. Drive End - Endbell Bearing Fit (Opposite Drive End Air Seal (P 50. Drive End - Endbell Bearing Fit 60 Degrees 120 Degrees 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit <	Mecha	anical Fits- Rotor			
Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 43. Coupling Fit Closest to Bearing Housing 120 Degrees 90 Degrees 90 Degrees 120 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 0 Degrees 60 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5595 2.5594 46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Air Seal Opposite Drive End Air Seal 50. Drive End - Endbell Bearing Fit 0 Degrees 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 5					
43. Coupling Fit Closest to Bearing Housing 120 Degrees 9 Degrees 90 Degrees 120 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit 0 Degrees 120 Degrees 2.5595 2.5595 2.5596 2.5595 2.5595 2.5596 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Opposite Drive End Air Seal (P 49. Shaft Air Seal Opposite Drive End Air Seal (P 49. Shaft Air Seal Opposite Drive End Air Seal (P 49. Shaft Air Seal Opposite Drive End Air Seal (P 50. Drive End - Endbell Bearing Fit 0 Degrees 120 Degrees 51. Drive End - Endbell Bearing Fit Condition (P 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit (D 0 Degrees	42.	Rotor Runout			
0 Degrees 90 Degrees 120 Degrees 44. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 120 Degrees 2.5595 2.5595 2.5594 46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit (P 47. Opposite Drive End Bearing Shaft Fit (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Opposite Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal Mechanical Fits- Bearing Housings 50. Drive End - Endbell Bearing Fit 0 Degrees 120 Degrees 51. Drive End - Endbell Bearing Fit 5.1183 5.1182 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit 120 Degrees 51. Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P <td></td> <td>Drive End Bearing Fit</td> <td>Rotor Body</td> <td>Opposite Drive End</td> <td>Bearing</td>		Drive End Bearing Fit	Rotor Body	Opposite Drive End	Bearing
44. Coupling Fit Closest to the end of the Shaft 0 Degrees 60 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5595 2.5594 120 Degrees 46. Drive End Bearing Shaft Fit Condition (P (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Dive End Air Seal Drive End Air Seal Opposite Drive End Air Seal 50. Drive End - Endbell Bearing Fit 0 Degrees 51. Drive End - Endbell Bearing Fit 51.1182 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 51. Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 53.1182 60 Degrees 120 Degrees	43.	Coupling Fit Closest to Bearing Housi	ng		
0 Degrees 60 Degrees 120 Degrees 45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5595 2.5594 46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Opposite Drive End Air Seal (P 50. Drive End Air Seal Opposite Drive End Air Seal (P 51. Drive End - Endbell Bearing Fit 0 Degrees 120 Degrees 51. Drive End - Endbell Bearing Fit Condition (P 51. Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 53. Drive End - Endbell Bearing Fit (P 54. Opoperees		0 Degrees	90 Degrees	120 Degrees	
45. Drive End Bearing Shaft Fit 0 Degrees 60 Degrees 2.5595 2.5595 2.5595 2.5594 46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit (P 47. Opposite Drive End Bearing Shaft Fit (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits (P 9. Drive End - Endbell Bearing Fit (P 9. Drive End - Endbell Bearing Fit (P 9. Drive End - Endbell Bearing Fit Condition (P 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 53. Drive End - Endbell Bearing Fit	44.	Coupling Fit Closest to the end of the	Shaft		
0 Degrees60 Degrees120 Degrees2.55952.55952.559446. Drive End Bearing Shaft Fit Condition(P47. Opposite Drive End Bearing Shaft Fit0 Degrees2.55952.55952.55962.55952.559648. Opposite Drive End Bearing Shaft Fit Condition(P49. Shaft Air Seal Fits Drive End Air SealOpposite Drive End Air Seal50. Drive End - Endbell Bearing Fit 0 Degrees60 Degrees50. Drive End - Endbell Bearing Fit 0 Degrees60 Degrees51. Drive End - Endbell Bearing Fit Condition(P52. Opposite Drive End - Endbell Bearing Fit 0 Degrees(P53. Drive End - Endbell Bearing Fit 0 Degrees(P54. Drive End - Endbell Bearing Fit 0 Degrees(P55. Drive End - Endbell Bearing Fit 0 Degrees(P54. Drive End - Endbell Bearing Fit Condition(P55. Drive End - Endbell Bearing Fit Condition(P54. Drive End - Endbell Bearing Fit Condition(P55. Opposite Drive End - Endbell Bearing Fit 0 Degrees(P55. Opposite Drive End - Endbell Bearing Fit 0 Degrees(P56. Drive End - Endbell Bearing Fit 0 Degrees(P57. Opposite Drive End - Endbell Bearing Fit 0 Degrees(P57. Opposite Drive End - Endbell Bearing Fit 0 Degrees(P57. Opposite Drive End - Endbell Bearing Fit 0 Degrees(P57. Drive End - Endbell Bearing Fit 0 Degrees(P57. Opposite Drive End - Endbell Bearing Fit 0 Degrees(P57. Opposite Drive End -		0 Degrees	60 Degrees	120 Degrees	
2.55952.55952.559446.Drive End Bearing Shaft Fit Condition(P47.Opposite Drive End Bearing Shaft Fit(P47.Opegrees60 Degrees120 Degrees2.55952.55952.55962.559648.Opposite Drive End Bearing Shaft Fit Condition(P49.Shaft Air Seal Fits Drive End Air Seal(P49.Shaft Air Seal Fits Drive End Air Seal(P50.Drive End - Endbell Bearing Fit 0 Degrees60 Degrees120 Degrees51.Drive End - Endbell Bearing Fit Condition(P52.Opposite Drive End - Endbell Bearing Fit 0 Degrees(P52.Opposite Drive End - Endbell Bearing Fit(P53.0.0.120 Degrees54.0.0.120 Degrees55.0.0.120 Degrees	45.	Drive End Bearing Shaft Fit			
46. Drive End Bearing Shaft Fit Condition (P 47. Opposite Drive End Bearing Shaft Fit 60 Degrees 120 Degrees 0 Degrees 60 Degrees 120 Degrees 2.5595 2.5595 2.5596 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Opposite Drive End Air Seal (P 49. Shaft Air Seal Fits Opposite Drive End Air Seal (P 50. Drive End Air Seal Opposite Drive End Air Seal (P 50. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 51. Drive End - Endbell Bearing Fit Condition (P (P 51. Drive End - Endbell Bearing Fit Condition (P (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 52. Opposite Drive End - Endbell Bearing Fit (P 53. Drive End - Endbell Bearing Fit (P 54. Opposite Drive End - Endbell Bearing Fit (P 55. Drive End - Endbell Bearing Fit (P		0 Degrees	60 Degrees	120 Degrees	
47. Opposite Drive End Bearing Shaft Fit 60 Degrees 120 Degrees 0 Degrees 2.5595 2.5595 2.5595 2.5595 2.5596 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Opposite Drive End Air Seal (P 49. Shaft Air Seal Fits Opposite Drive End Air Seal (P Mechanical Fits- Bearing Housings 50. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 51. Drive End - Endbell Bearing Fit Condition (P 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit (P 60 Degrees 60 Degrees 120 Degrees		2.5595	-	2.5594	
47. Opposite Drive End Bearing Shaft Fit 60 Degrees 120 Degrees 2.5595 2.5595 2.5596 48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits 0 Drive End Air Seal Opposite Drive End Air Seal 60 Degrees 0 50. Drive End - Endbell Bearing Fit 0 0 Degrees 60 Degrees 51. Drive End - Endbell Bearing Fit Condition (P 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit (P 60 Degrees 60 Degrees 120 Degrees	46.	Drive End Bearing Shaft Fit Condition			(P) Pass
2.55952.55952.559648.Opposite Drive End Bearing Shaft Fit Condition(P49.Shaft Air Seal FitsOpposite Drive End Air SealDrive End Air SealOpposite Drive End Air Seal(PMechanical Fits- Bearing Housings50.Drive End - Endbell Bearing Fit120 Degrees0 Degrees60 Degrees120 Degrees51.Drive End - Endbell Bearing Fit Condition(P52.Opposite Drive End - Endbell Bearing Fit(P52.Opposite Drive End - Endbell Bearing Fit(P53.0 Degrees60 Degrees120 Degrees54.0 Degrees5.11835.118255.0 Degrees60 Degrees120 Degrees	47.	-			
2.55952.55952.559648.Opposite Drive End Bearing Shaft Fit Condition(P49.Shaft Air Seal FitsOpposite Drive End Air SealDrive End Air SealOpposite Drive End Air Seal(PMechanical Fits- Bearing Housings50.Drive End - Endbell Bearing Fit120 Degrees0 Degrees60 Degrees120 Degrees51.Drive End - Endbell Bearing Fit Condition(P52.Opposite Drive End - Endbell Bearing Fit(P52.Opposite Drive End - Endbell Bearing Fit(P53.0 Degrees60 Degrees120 Degrees54.0 Degrees5.11835.118255.0 Drive End - Endbell Bearing Fit(P52.Opposite Drive End - Endbell Bearing Fit120 Degrees53.0 Degrees60 Degrees120 Degrees				120 Degrees	
48. Opposite Drive End Bearing Shaft Fit Condition (P 49. Shaft Air Seal Fits Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal Mechanical Fits- Bearing Housings 50. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit Condition (P 53. Drive End - Endbell Bearing Fit Condition (P 54. Drive End - Endbell Bearing Fit Condition (P 55. Opposite Drive End - Endbell Bearing Fit Condition (P 56. Degrees 60 Degrees 120 Degrees		-	-	U U	
49. Shaft Air Seal Fits Drive End Air Seal Drive End Air Seal Opposite Drive End Air Seal Mechanical Fits- Bearing Housings 50. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 5.1182 5.1183 5.1182 51. Drive End - Endbell Bearing Fit Conditon (P 52. Opposite Drive End - Endbell Bearing Fit Conditon (P 52. Opposite Drive End - Endbell Bearing Fit Conditon 120 Degrees 52. Opposite Drive End - Endbell Bearing Fit Conditon 120 Degrees	48.				(P) Pass
Drive End Air Seal Opposite Drive End Air Seal Mechanical Fits- Bearing Housings Image: Search of the s					. ,
Mechanical Fits- Bearing Housings 50. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 5.1182 5.1183 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 120 Degrees 120 Degrees 120 Degrees 120 Degrees			Opposite Drive End Air Seal		
50. Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees 5.1182 5.1183 5.1182 51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 60 Degrees 120 Degrees					
0 Degrees60 Degrees120 Degrees5.11825.11835.118251.Drive End - Endbell Bearing Fit Condition(P52.Opposite Drive End - Endbell Bearing Fit0 Degrees60 Degrees120 Degrees					
5.11825.11835.118251.Drive End - Endbell Bearing Fit Condition(P52.Opposite Drive End - Endbell Bearing Fit0 Degrees60 Degrees120 Degrees	50.	Drive End - Endbell Bearing Fit			
51. Drive End - Endbell Bearing Fit Condition (P 52. Opposite Drive End - Endbell Bearing Fit 0 0 Degrees 60 0 Degrees 120		0 Degrees	60 Degrees	120 Degrees	
52. Opposite Drive End - Endbell Bearing Fit 0 Degrees 60 Degrees 120 Degrees		5.1182	5.1183	5.1182	
0 Degrees 60 Degrees 120 Degrees	51.	Drive End - Endbell Bearing Fit Condi	tion		(P) Pass
	52.	Opposite Drive End - Endbell Bearing	Fit		
		0 Degrees	60 Degrees	120 Degrees	
		-	-	=	
53. Opposite Drive End - Endbell Bearing Fit Condition (P	53.	Opposite Drive End - Endbell Bearing	Fit Condition		(P) Pass

54.	Bearing Cap Condition		
	Drive End Bearing Cap	Opposite Drive End Bearing Cap	
55.	End Bell Air Seal Fits		
	Drive End Air Seal	Opposite Drive End Air Seal	
56.	List Machine Work Needed Below		
	Technician	$\neg \bigcirc$	David Maclin
	nic Balance Report		
58.	Rotor Weight and Balance Grade		
	Rotor Weight	Balance Grade	
59.	Initial Balance Readings		
	Drive End	Opposite Drive End	
60.	Final Balance Readings		
	Drive End	Opposite Drive End	
61.	Technician		
Rewin	nd		
62.	Core Test Results - Watts loss per Po	und	
	Pre-Burnout	Post Burnout	
00	Care List Creet Test		
63.	Core Hot Spot Test Pre-Burnout	Post-Burnout	
	FIE-Bulliout	P Ost-Bulliout	
64.	Post Rewind Electrical Test- Insulatio	n Resistance	
65.	Post Rewind Polarization Index		
66.	Post Rewind Winding Resistance		
	1-2	1-3	2-3
67.	Post Rewind Surge Test		
68.	Post Rewind Hi-Pot		
	Technician		
	Cause of Failure		
70.	Failure locations Bearings		
71.	Root cause of failure Lube contamination		
Mecha	anical Fits- Rotor - Post Repair		
	Shaft Runout Post Repair		
73.	Rotor Runout Post Repair		
	Drive End Bearing Fit	Rotor Body	Opposite Drive End Bearing

74	Coupling Fit Closest to Bearing Housing Post Repair			
7 1.	0 Degrees	90 Degrees	120 Degrees	
	0 Degrees	So Degrees	120 Degrees	
75.	. Coupling Fit Closest to the end of the Shaft Post Repair			
	0 Degrees	60 Degrees	120 Degrees	
		-	-	
76.	6. Drive End Bearing Shaft Fit Post Repair			
	0 Degrees	60 Degrees	120 Degrees	
(7.	Opposite Drive End Bearing Shaft Fit	•	100 5	
	0 Degrees	60 Degrees	120 Degrees	
78	Shaft Air Seal Fits Post Repair			
10.	Drive End Air Seal	Opposite Drive End Air Seal		
79.	Shaft Repair Sign-off			
Mecha	anical Fits- Bearing Housings - P	ost Repair		
80.	Drive End - Endbell Bearing Fit Post F	Repair		
	0 Degrees	60 Degrees	120 Degrees	
81.	Opposite Drive End - Endbell Bearing	Fit Post Repair		
	0 Degrees	60 Degrees	120 Degrees	
82.	Bearing Cap Condition Post Repair			
	Drive End Bearing Cap	Opposite Drive End Bearing Cap		
83.	End Bell Air Seal Fits Post Repair			
	Drive End Air Seal	Opposite Drive End Air Seal		
84.	End Bell Repair Sign-off			
Asser	nbly			
85.	Photograph All Major Components pri	or to assembly		
86.	Final Insulation Resistance Test			
87.	Assembled Shaft Endplay			
88.	Assembled Shaft Runout			
89.	Test Run Voltage			
	Volts	Volts	Volts	
90.	Test Run Amperage			
	Amps	Amps	Amps	
91.	Drive End Vibration Readings - Inches			
	Horizontal	Vertical	Axial	
92.	Opposite Drive End Vibration Reading	gs - Inches Per Second		
	Horizontal	Vertical	Axial	
00				
93.	Ambient Temperature - Fahrenheit			

94. Drive End Bearing Temps - Fahrenheit			
5 Minutes	10 Minutes	15 Minutes	
95. Opposite Drive End Bearing	95. Opposite Drive End Bearing Temps - Fahrenheit		
5 Minutes	10 Minutes	15 Minutes	
96. Final Test Run Sign-off			
97. Document Final Condition w	ith Pictures after paint		





98. Final Pics and QC Review







STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. <u>APPLICABILITY.</u> The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. <u>SCOPE OF GOODS AND/OR SERVICES.</u> The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only be effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. DELIVERY OF GOODS AND/OR SERVICES. Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- 6. DELIVERY SITE AND TIME FOR PERFORMANCE. Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

TermsAndConditions

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. LIMITATION OF DAMAGES. HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY</u>. The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. <u>GOVERNING LAW AND JURISDICTION.</u> Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. <u>ABANDONED EQUIPMENT.</u> Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER</u>. No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. <u>ASSIGNMENT.</u> The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. <u>NO INDIVIDUAL LIABILITY</u>. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.