

LR Motor Shop Repairs

Job Number 102191

Prepared for Process & Power

1625 East 145th Street Little Rock AR 72206

Table of Contents

AC Inspection as Found - MOTOR SHOP LR

AC Inspection - Rev. 2: 6308000

1.0



FolderID: 102191

FormID: 18706640



AC Inspection as Found

Process & Power

1625 East 145th Street Little Rock, AR 72206

AC Inspection - Rev. 2

Location: MOTOR SHOP LR

Serial Number: 6308000

Description: 300HP RELIANCE 1800RPM

447TDZ

Hi-Speed Job Number:	102191
Manufacturer:	Reliance
Serial Number:	6308000
HP/kW:	300 (HP)
RPM:	1780 (RPM)
Frame:	447TDZ
Voltage:	460
Current:	344
Phase:	Three
Hz:	60 (Hz)
Service Factor:	1.15
Enclosure:	ODP
J-box Included:	None
Coupling/Sheave:	None
Bearing RTDs:	No
Stator RTDs:	No
Repair Stage:	Final
Heaters:	No
Winding Type :	Random Wound
Bearing Type:	Rolling Element

Priorities Found: **2 - High**

6 - Good

Overall Condition

1. Report Date 12/13/2023

Nameplate Picture





Photos of all six sides of the machine.

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.


























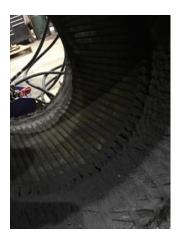







	4.	Describe the Overall Condition of the I	Equipment as Received		
		Dirty, oily			
Ir	itial	Mechanical/Electrical			
	5.	Does Shaft Turn Freely?			(Yes) Yes
	6.	Does Shaft Have Visible Damage?			(No) No
	7.	Assembled Shaft Runout			0 Inches
	8.	Assembled Shaft End Play			0 inches
	9.	Air Gap Variation <10%			ok
	10.	Lead Condition			(P) Pass
	11.	Lead Length			60 Inches
	12.	Lead Numbers			1-6
	13.	Frame Condition			good
	14.	Fan Condition			(N) NA
	15.	Broken or Missing Components			none
Initial Electrical Inspection					
	16.	Insulation Resistance/Megger			2009 Megohms
	17.	Winding Resistance			
		1-2	1-3	2-3	
		.349	.349	.349	
	18.	Perform Surge Test			(P) Pass
	19.	Number of Stator Slots			72
	20.	Stator Condition			good

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

21	Stator Thermistors/Ohms		none
	Stator Overloads/Ohms		none
	anical Inspection		
	Drive End Bearing Brand		NSK
24.			nu222
25.	Drive End Bearing Qty.		1
26.			(Roller) Roller Bearing
27.	Drive End Lubrication Type		(Grease) Grease Lubricated
28.	Drive End Bearing Insulation or Groundin	in Device?	none
29.	Drive End Wavy Washer/Snap-Ring Other	-	snap ring
30.	Drive End Bearing Condition	retention bevice:	normal
31.			NSK
32.	Opposite Drive End Bearing Number-		6318
33.	Opposite Drive End Bearing Number-		1
34.	Opposite Drive End Bearing Type		(Ball) Ball Bearing
35.	Opposite Drive End Lubrication Type		(Grease) Grease Lubricated
36.	Opposite Drive End Bearing Insulation or	Grounding Device?	none
37.	Opposite Drive End Wavy Washer/Snap-	-	
38.	Opposite Drive End Bearing Condition	King Other Retention Device:	spanner nut normal
39.	Drive End Seal		none
	Opposite Drive End Seal		none
	• •		none
	Inspection Deter Type // Meterial		(Carrieral Alemanum) Carrieral
41.	Rotor Type/Material		(Squirrel Aluminum) Squirrel Cage Aluminum Die Cast
42.	Growler Test		(Pass) Pass
43.	Number of Rotor Bars		56
44.	Rotor Condition		ok
45.	List the Parts needed for the Repair Belo Nu222 6318	W	
46.	Signature of Technician that Disassemble	ed Motor	David Maclin
Mecha	anical Fits- Rotor		
47.	Shaft Runout		0 inches
48.	Rotor Runout		
	Drive End Bearing Fit R	otor Body	Opposite Drive End Bearing
	0	,	
49.	Coupling Fit Closest to Bearing Housing		
) Degrees	120 Degrees
	0		.20 209.000
50.	•	aft	
50.		Degrees	120 Degrees
	· ·	Degrees	120 Degrees
	0		

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

54	Drive Ford Decrine Objett Fit			
51.	Drive End Bearing Shaft Fit	00 B	400 B	
	0 Degrees	60 Degrees	120 Degrees	
-	4.3115	4.3116	4.3115	
5 2.	<u> </u>			(F) Fail
53.	Opposite Drive End Bearing Shaft Fit			
	0 Degrees	60 Degrees	120 Degrees	
	3.5437	3.5437	3.5438	
	Opposite Drive End Bearing Shaft Fit	Condition		(P) Pass
55.	Shaft Air Seal Fits			
	Drive End Air Seal	Opposite Drive End Air Seal		
	ok	ok		
Mech	anical Fits- Bearing Housings			
56.	Drive End - Endbell Bearing Fit			
	0 Degrees	60 Degrees	120 Degrees	
	7.8761	7.876	7.8759	
5 7.	Drive End - Endbell Bearing Fit Condi	tion		(P) Pass
58.	Opposite Drive End - Endbell Bearing	Fit		
	0 Degrees	60 Degrees	120 Degrees	
	7.481	7.481	7.4811	
9 59.	Opposite Drive End - Endbell Bearing	Fit Condition		(P) Pass
60.	Bearing Cap Condition			
	Drive End Bearing Cap	Opposite Drive End Bearing Cap		
	ok	ok		
61.	End Bell Air Seal Fits			
	Drive End Air Seal	Opposite Drive End Air Seal		
	ok	ok		
62.	List Machine Work Needed Below			
	Replace shaft, sleeve de			
63.	Technician			David Mac,in
	Cause of Failure			
64.	Failure locations			
	De bearing fit likely causing high vibrat	ions		
65.	Root cause of failure			
	Wear.			
-	mic Balance Report			
66.	Rotor Weight and Balance Grade			
	Rotor Weight	Balance Grade		
	1 1 1 5 1 5 11			
67.	Initial Balance Readings			
	Drive End	Opposite Drive End		

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

Drive End Opposite Drive End 69. Technician Rewind 70. Core Test Results - Watts loss per Pound Pre-Burnout Post Burnout 71. Core Hot Spot Test Pre-Burnout Post-Burnout 72. Post Rewind Electrical Test- Insulation Resistance 73. Post Rewind Polarization Index 74. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Surge Test 77. Technician Mechanical Fits- Rotor - Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 60 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair Drive End - Endbell Bearing Fit Post Repair 0 Degrees 60 Degrees 120 Degrees	68.	68. Final Balance Readings			
Rewind 70. Core Test Results - Watts loss per Pound Pre-Burnout Post Burnout 71. Core Hot Spot Test Pre-Burnout Post-Burnout 72. Post Rewind Electrical Test- Insulation Resistance 73. Post Rewind Polarization Index 74. Post Rewind Polarization Index 75. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Bis Fits Post Repair Drive End Bearing Shaft Fit Post Repair Degrees 60 Degrees 120 Degrees 85. Shaft Repair Spart Fit Post Repair Drive End Air Seal Opposite Drive End Air Seal		•	Opposite Drive End		
Rewind 70. Core Test Results - Watts loss per Pound Pre-Burnout Post Burnout 71. Core Hot Spot Test Pre-Burnout Post-Burnout 72. Post Rewind Electrical Test- Insulation Resistance 73. Post Rewind Polarization Index 74. Post Rewind Polarization Index 77. Post Rewind Winding Resistance 1-2 1-3 2-3 76. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Dive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair Borive End - Endbell Bearing Fit Post Repair		2.110 2.110	opposite 21110 2110		
70. Core Test Results - Watts loss per Pound Pre-Burnout Pre-Burnout Post Burnout 71. Core Hot Spot Test Pre-Burnout Post-Burnout 72. Post Rewind Electrical Test- Insulation Resistance 73. Post Rewind Polarization Index 74. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair Postor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	69.	Technician			
Pre-Burnout Post Burnout 71. Core Hot Spot Test Pre-Burnout Post-Burnout 72. Post Rewind Electrical Test- Insulation Resistance 73. Post Rewind Polarization Index 74. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair Prive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair Borive End - Endbell Bearing Fit Post Repair	Rewin	nd			
71. Core Hot Spot Test Pre-Burnout Post-Burnout Post Rewind Electrical Test- Insulation Resistance 73. Post Rewind Polarization Index 74. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal	70.	Core Test Results - Watts loss per Po	und		
Pre-Burnout Post-Burnout 72. Post Rewind Electrical Test- Insulation Resistance 73. Post Rewind Polarization Index 74. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair		Pre-Burnout	Post Burnout		
Pre-Burnout Post-Burnout 72. Post Rewind Electrical Test- Insulation Resistance 73. Post Rewind Polarization Index 74. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End Bearing Fit Post Repair					
72. Post Rewind Electrical Test- Insulation Resistance 73. Post Rewind Polarization Index 74. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair Prive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	71.	Core Hot Spot Test			
73. Post Rewind Polarization Index 74. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair Prive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair		Pre-Burnout	Post-Burnout		
73. Post Rewind Polarization Index 74. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair Prive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair					
74. Post Rewind Winding Resistance 1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair			n Resistance		
1-2 1-3 2-3 75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair					
75. Post Rewind Surge Test 76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 85. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 86. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	74.				
76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair		1-2	1-3	2-3	
76. Post Rewind Hi-Pot 77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	75	Post Rewind Surge Test			
77. Technician Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair					
Mechanical Fits- Rotor - Post Repair 78. Shaft Runout Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	_				
78. Shaft Runout Post Repair 79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair					
79. Rotor Runout Post Repair Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair					
Drive End Bearing Fit Rotor Body Opposite Drive End Bearing 80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair		·			
80. Coupling Fit Closest to Bearing Housing Post Repair 0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	70.	·	Rotor Body	Opposite Drive End Rearing	
0 Degrees 90 Degrees 120 Degrees 81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair		21110 Ena 20aning Fit	Notor Body	opposite Brivo Eria Boarning	
81. Coupling Fit Closest to the end of the Shaft Post Repair 0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	80.	Coupling Fit Closest to Bearing Housi	ng Post Repair		
0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair		0 Degrees	90 Degrees	120 Degrees	
0 Degrees 60 Degrees 120 Degrees 82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair					
82. Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	81.		·		
0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair		0 Degrees	60 Degrees	120 Degrees	
0 Degrees 60 Degrees 120 Degrees 83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	00 Drive Find Decrine Chaff Fit Deat Decrine				
83. Opposite Drive End Bearing Shaft Fit Post Repair 0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	02.			120 Dograda	
0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair		0 Degrees	ou Degrees	120 Degrees	
0 Degrees 60 Degrees 120 Degrees 84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	83.	Opposite Drive End Bearing Shaft Fit Post Repair			
84. Shaft Air Seal Fits Post Repair Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair			·	120 Degrees	
Drive End Air Seal Opposite Drive End Air Seal 85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair					
85. Shaft Repair Sign-off Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair	84.	Shaft Air Seal Fits Post Repair			
Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair		Drive End Air Seal	Opposite Drive End Air Seal		
Mechanical Fits- Bearing Housings - Post Repair 86. Drive End - Endbell Bearing Fit Post Repair					
86. Drive End - Endbell Bearing Fit Post Repair					
·					
0 Degrees 60 Degrees 120 Degrees			•		
		0 Degrees	60 Degrees	120 Degrees	
87 Opposite Drive End - Endhell Bearing Fit Post Repair		•			
	27	Opposite Drive End - Endhell Rearing	Fit Post Repair		
0 Degrees 60 Degrees 120 Degrees	87.	11	•	120 Degrees	
-	85.	Drive End Air Seal Opposite Drive End Air Seal Shaft Repair Sign-off canical Fits- Bearing Housings - Post Repair			
0 Dogrape 60 Dogrape 120 Dogrape	87.	· · · · · · · · · · · · · · · · · · ·	•	120 Dograps	

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.

88.	Bearing Cap Condition Post Repair			
	Drive End Bearing Cap Opposite Drive End Bearing Cap			
89. End Bell Air Seal Fits Post Repair				
	Drive End Air Seal	Opposite Drive End Air Seal		
00	Find Dall Danair Cinn off			
	End Bell Repair Sign-off			
Asser	•			
	QC Check All Parts for Cleanliness Pr	·		
	Photograph All Major Components pri	or to assembly		
	Final Insulation Resistance Test			
	Assembled Shaft Endplay			
	Assembled Shaft Runout			
96.	Test Run Voltage			
	Volts	Volts	Volts	
97	Test Run Amperage			
51.	Amps	Amps	Amps	
	Amps			
98.	98. Drive End Vibration Readings - Inches Per Second			
	Horizontal	Vertical	Axial	
	Tonzona. Vonda			
99.	99. Opposite Drive End Vibration Readings - Inches Per Second			
	Horizontal	Vertical	Axial	
	00. Ambient Temperature - Fahrenheit			
101. Drive End Bearing Temps - Fahrenheit				
	5 Minutes	10 Minutes	15 Minutes	
102	102. Opposite Drive End Bearing Temps - Fahrenheit			
102.	* '		1E Minutos	
	5 Minutes	10 Minutes	15 Minutes	
103.	3. Document Final Condition with Pictures after paint			
	4. Final Pics and QC Review			

Hi-Speed Industrial Service disclaims all warranties, both express and implied, relating to the information, reports, opinions and analysis disclosed to the Customer by Hi-Speed. Hi-Speed shall not be liable for any errors or omissions, or any losses, injury or damages arising from the use of such information, reports, opinions and analysis by the Customer.



STANDARD TERMS AND CONDITIONS FOR PURCHASE OF GOOD AND/OR SERVICES

- 1. APPLICABILITY. The sale of any and all goods and/or services by Mock, Inc. d/b/a Hi-Speed Industrial Service ("Hi-Speed") shall be specifically conditioned upon and subject to the following terms and conditions which are incorporated by reference into any contracts and purchase orders with Hi-Speed, and which shall form and become a part of any agreement related thereto. Buyer's acceptance of any offer or quotation made by Hi-Speed for sale of any goods or services is expressly made subject to the terms and conditions set forth herein and to be so effective, Buyer need not sign or approve these Terms and Conditions to be bound hereunder provided a copy of same is provided to Buyer through any means. None of the terms and conditions contained herein may be added to, expanded, changed, modified, superseded or otherwise altered except as revised in writing and duly executed by Hi-Speed, and all orders received by Hi-Speed shall be governed only by the terms and conditions contained herein, notwithstanding any terms, conditions or provisions of any purchase order, release order, authorization or any other form issued by the Buyer. Hi-Speed hereby objects to any additional, modified, changed, deleted, altered or other terms and conditions not contained herein and notifies Buyer that any such terms or provisions are expressly rejected by Hi-Speed.
- 2. PRICE. All quoted prices shall remain firm and binding for a period of thirty (30) days from the date of quotation or for the period specifically stated in the quotation. The price for any and all goods and/or services ordered or approved by Buyer after thirty (30) days from the date of any quotation are subject to any increase in price that may occur after the expiration of thirty (30) days from the issuance of the quotation and the date the Buyer releases any shipment.
- 3. SCOPE OF GOODS AND/OR SERVICES. The goods and/or services provided by Hi-Speed pursuant to any quotation shall be limited exclusively to those goods and/or services expressly identified therein. Hi-Speed does not assume any responsibility and/or liability for the failure to provide any other goods and/or services not identified in any quotation. Modifications, additions or deletions to or from the scope referenced in any quotation shall only bee effective if evidenced in writing and signed by Hi-Speed. The sale of any of all goods and/or services affected by such modification, addition or deletion shall be subject to these same Standard Terms and Conditions whether or not referenced therein.
- 4. <u>BILLING AND PAYMENT TERMS.</u> Hi-Speed shall invoice Buyer for all goods and/or services as same are rendered at the address listed on the quotation. Payments for all goods and/or services shall be due thirty (30) days from the date of the current invoice or as otherwise set forth in the quotation. Late payments are subject to a late fee of 5% of the total invoice amount. Recurring late payments may lead to a deposit requirement on future services or sale of goods. Buyer shall be liable to Hi-Speed for any and all fees and expenses incurred by Hi-Speed to collect any invoices or to enforce these Standard Terms and Conditions, including but not limited to, attorney's fees.
- 5. <u>DELIVERY OF GOODS AND/OR SERVICES.</u> Unless otherwise identified in the quotation, all shipments are F.O.B. Hi-Speed's warehouse and the title to and all risk of loss with respect to any goods shipped shall pass to Buyer when such goods are delivered to the carrier at Hi-Speed's warehouse. Hi-Speed will use its best efforts to affect delivery by the date or dates specified in the quotation. However, Hi-Speed shall not be liable for delay in or failure to make shipment, or to perform services, by any identified date for any reason whatsoever, including but not limited to, causes beyond its reasonable control, such as strikes, fires, floods, epidemics, quarantines, restrictions, severe weather, embargos, acts of God, or public enemy, war, riot, delays in transportation or the inability to obtain necessary labor, materials or manufacturing facilities.
- **DELIVERY SITE AND TIME FOR PERFORMANCE.** Hi-Speed and Buver agree that time is of the essence for the purchase order and that Buyer shall fully cooperate with Hi-Speed in order to allow Hi-Speed full access to prosecute its work diligently and in an orderly manner. Buyer shall assist Hi-Speed in every way possible to avoid delaying, disrupting or interfering with the progress of Hi-Speed's work at the project site. In the event Hi-Speed's work is delayed, hindered, suspended, disrupted, re-sequenced or interfered with or rendered less efficient or more costly or adversely affected in any way as a result of acts or omissions of Buyer or other contractors or employees of Buyer or by any other reason beyond Hi-Speed's control and without the fault of Hi-Speed, then, in such event, Buyer shall be liable to Hi-Speed for any damages, additional costs, expenses, labor, materials, man hours, acceleration costs, overtime, additional jobsite overhead, extended home office overhead, and any and all other direct and indirect expenses of whatsoever nature or kind, caused in whole or in part, as a result of any of the above-referenced occurrences. Hi-Speed's project records will be the basis for computing the additional costs and damages of Hi-Speed's labor, materials, expenses and overhead related to such changes. BUYER WARRANTS THAT THE SITE FOR DELIVERY OR INSTALLATION OF ANY GOODS AND/OR FOR THE PERFORMANCE OF ANY SERVICES SHALL BE READY AND ADEQUATE FOR HI-SPEED'S DELIVERY OF GOODS AND/OR PERFORMANCE OF SERVICES AND THAT HI-SPEED SHALL HAVE FULL ACCESS THERETO, FREE OF ALL OBSTRUCTIONS. BUYER SHALL ASSUME ALL EXTRA COSTS ASSOCIATED WITH HI-SPEED'S INABILITY TO INSTALL ANY GOODS OR PERFORM ANY SERVICES AS A RESULT OF BUYER'S FAILURE TO COMPLY WITH THIS PROVISION. HI-SPEED MAY NOT INSPECT THE SITE PRIOR TO DELIVERY AND/OR INSTALLATION OF GOODS AND/OR PERFORMANCE OF SERVICES AND MAKES NO WARRANTY AS TO THE SUFFICIENCY OF THE SITE FOR THE DELIVERY AND/OR INSTALLATION OF GOODS AND/OR THE PERFORMANCE OF SERVICES AT SUCH SITE.
- 7. INSPECTION/ACCEPTANCE. All goods and services ordered pursuant to any quotation shall be subject to inspection by Buyer after delivery or performance to determine conformity with the quotation and/or purchase order and Hi-Speed's advertised or published specifications. Buyer shall have a period of thirty (30) days from shipment of goods at the delivery destination specified in the quotation within which to inspect the goods for conformity with the quotation, order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. Buyer shall have a period of thirty (30) days following completion of any services within which to inspect the services for conformity with the quotation, purchase order and/or Hi-Speed's advertised and published specifications and to provide Hi-Speed with written notice of any discrepancy or rejection. If the goods delivered or services performed do not so conform, upon delivery of notice to Hi-Speed of any discrepancy, nonconformance or rejection, Hi-Speed shall have sixty (60) days to cure the alleged discrepancy and/or nonconformance. If Hi-Speed fails to cure in this time period, Buyer shall have the right to reject such goods or services. After the cure period, goods that have been delivered and rejected, in whole or in part, shall be returned to Hi-Speed. Buyer shall notify Hi-Speed and arrange for the return of the goods as required. Should such non-conforming services be rejected Hi-Speed shall, at its sole cost, re-perform the non-conforming services. Inspection or failure to inspect on any occasion shall not affect Buyer's rights under the warranty provisions herein.
- 8. WARRANTIES. Hi-Speed warrants that all goods shall conform in all material aspects to the goods identified in the quotation to Buyer and/or purchase order, and Hi-Speed makes to Buyer the manufacturer's express warranty for any goods sold to Buyer, which is offered by the manufacturer at the time of acceptance of any quotation by Buyer. This warranty is conditioned upon the installation, operation, and maintenance of the goods in accordance with the manufacturer's recommendations and/or standard industry practice and the goods at all times being operated or used under normal operating conditions for which they were designed. Hi-Speed, at its sole option, will repair or

replace any defective or non-conforming goods in accordance with the applicable manufacturer's warranty. Warranty for any defective or incorrect parts is limited to the repair or replacement of those parts. Hi-Speed warrants that all services will conform in all material respects to the description of services identified in the quotation and will be performed in a good and workmanlike manner in accordance with industry practices and standards. Should the services be reasonably rejected or not conform with the foregoing warranties, Hi-Speed shall, at its sole cost, re-perform the defective or nonconforming services. Notwithstanding the foregoing, these warranties do not extend to goods or services to the extent that such goods have been subject to misuse, neglect or abuse not caused by Hi-Speed or have been used in violation of the approved written instructions furnished to Buyer. THE FOREGOING REPRESENTS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY HI-SPEED WITH RESPECT TO ALL GOODS SOLD AND IS IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. HI-SPEED EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICLAR USE OR PURPOSE. BUYER WAIVES ANY CLAIM THAT THESE EXCLUSIONS OR LIMITATIONS DEPRIVE IT OF AN ADEQUATE REMEDY AT EQUITY OR LAW OR CAUSE THIS AGREEMENT TO FAIL IN ITS ESSENTIAL PURPOSE. BUYER SHALL BE ENTITLED TO NO OTHER REMEDY OTHER THAN AS SET FORTH HEREIN, REGARDLESS OF THE CLAIM OR CAUSE OF ACTION, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, GOODS LIABILITY, STRICT LIABILITY OR OTHERWISE.

- 9. <u>LIMITATION OF DAMAGES.</u> HI-SPEED SHALL HAVE NO LIABILITY TO BUYER WITH RESPECT TO THE SALE OR DELIVERY OF ANY GOODS OR THE REPAIR THEREOF OR WITH RESPECT TO THE SALE OR PERFORMANCE OF ANY SERVICES, FOR LOST PROFITS, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND OR NATURE WHETHER ARISING IN CONTRACT, TORT, GOODS LIABILITY OR OTHERWISE, EVEN IF HI-SPEED WAS ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGES. HI-SPEED SHALL NOT BE LIABLE FOR ANY DAMAGES OR DELAYS CAUSED BY ANY FAILURE TO MAKE ANY DELIVERY OF GOODS BY ANY EXPECTED TIME OR DATE OR THE FAILURE TO PROVIDE OR COMPLETE ANY SERVICES BY ANY EXPECTED DATE OR TIME. IN NO EVENT SHALL HI-SPEED BE LIABLE TO BUYER FOR ANY DAMAGES WHATSOEVER IN EXCESS OF THE TOTAL PRICE PAID FOR ALL GOODS AND/OR SERVICES HEREUNDER OR REFERENCED IN ANY QUOTATION OR THE PURCHASE ORDER.
- 10. <u>SEVERABILITY.</u> The partial or complete invalidity of any provision of these Standard Terms and Conditions shall not affect the enforceability of the remainder of these Standard Terms and Conditions. If any provision is found to be invalid or unenforceable, that portion shall be modified to make it enforceable or shall be stricken and the remainder of these Standard Terms and Conditions shall enforced.
- 11. **GOVERNING LAW AND JURISDICTION.** Any controversy arising out of any quotation, the purchase order, the goods sold or delivered, repair or replacement thereof, or any services provided pursuant to any quotation or any purchase order, or these Standard Terms and Conditions shall be governed by the laws of the state of Tennessee without regard to any choice of law provisions and any cause of action related in any manner thereto shall be brought only in the state or federal courts of Shelby County, Tennessee.
- 12. ABANDONED EQUIPMENT. Hi-Speed requires that Buyer promptly pick up or provide shipment instructions for Buyer equipment or other Buyer property in Hi-Speed's possession. If equipment or other Buyer property is left with Hi-Speed and not picked up within six (6) months after Hi-Speed's final action related to the applicable property (e.g. evaluation, teardown, estimate, completion of services), Hi-Speed will consider such property abandoned and may dispose of it in accordance with applicable law. Buyer agrees to hold Hi-Speed harmless for any damage or claim for such abandoned property and acknowledges that Hi-Speed may discard or recycle it at Hi-Speed's sole and absolute discretion. Specifically, Hi-Speed may sell Buyer's abandoned property at a private or public sale and retain the proceeds to offset Hi-Speed's storage, inspection and servicing costs. For the avoidance of doubt, Hi-Speed reserves its statutory and other lawful liens for unpaid charges related to abandoned property.
- 13. FORCE MAJEURE. Neither party shall be responsible for any delay or failure in performance of any party of the quotation, purchase order or these Standard Terms and Conditions to the extent that such delays or failures are caused by fire, flood, earth quake, explosion, war, embargo, government requirement, civil or military authority, acts of God, or any other circumstances beyond its reasonable control and not involving any fault or negligence on the party affected ("Condition"). If any such Condition occurs, the party delayed or unable to perform shall promptly give written notice to the other party and, if such Condition remains at the end of thirty (30) days, the party affected by the other party's delay and inability to perform may elect to (i) terminate such order or part thereof, or (ii) suspend the order for the duration of the Condition, if the Buyer is the suspending party, buy elsewhere comparable material to be sold under the order and apply to any commitment the purchase price of such purchase, and resume performance of the order once the Condition ceases, with an option in the affected party to extend the period of this order up to the length of the time the Condition endures.
- 14. <u>NONWAIVER.</u> No course of dealing or failure of either party to strictly enforce any term, right, or condition of these Standard Terms and Conditions will be construed as a waiver of such term, right or condition. Any waiver by Hi-Speed will only be in writing and will waive no succeeding breach of a term, right or condition.
- 15. **ASSIGNMENT.** The rights and obligations of the parties shall neither be assigned nor delegated without the prior written consent of the other party. However, any party may assign or delegate its respective rights and obligations, in whole or in part, (i) to any subsidiary, (ii) pursuant to other financing, merger or reorganization or (iii) pursuant to any sale or transfer of substantially all of the assets of the assigning party. These Standard Terms and Conditions shall bind the heirs, successors and assigns of the parties hereto.
- 16. NO INDIVIDUAL LIABILITY. Notwithstanding any other agreement to the contrary, the Buyer agrees that in no event will the Buyer hold and HI-Speed owner, director, officer or employee personally liable for unintentional tortious conduct or conduct that constitutes the breach of any contract between HI-Speed and the Buyer, even if the HI-Speed owner, director, officer or employee is or could be construed to be a party to such contract.