

**C E SERIES
ELECTRIC HOISTS**

**Parts and Instruction
Manual**


Yale®



(800) 713-0101 • www.gohispeed.com

HOIST SERIAL NUMBER
TROLLEY SERIAL NUMBER
YALE ORDER NUMBER
CUSTOMER ORDER NUMBER

"D" CHASSIS

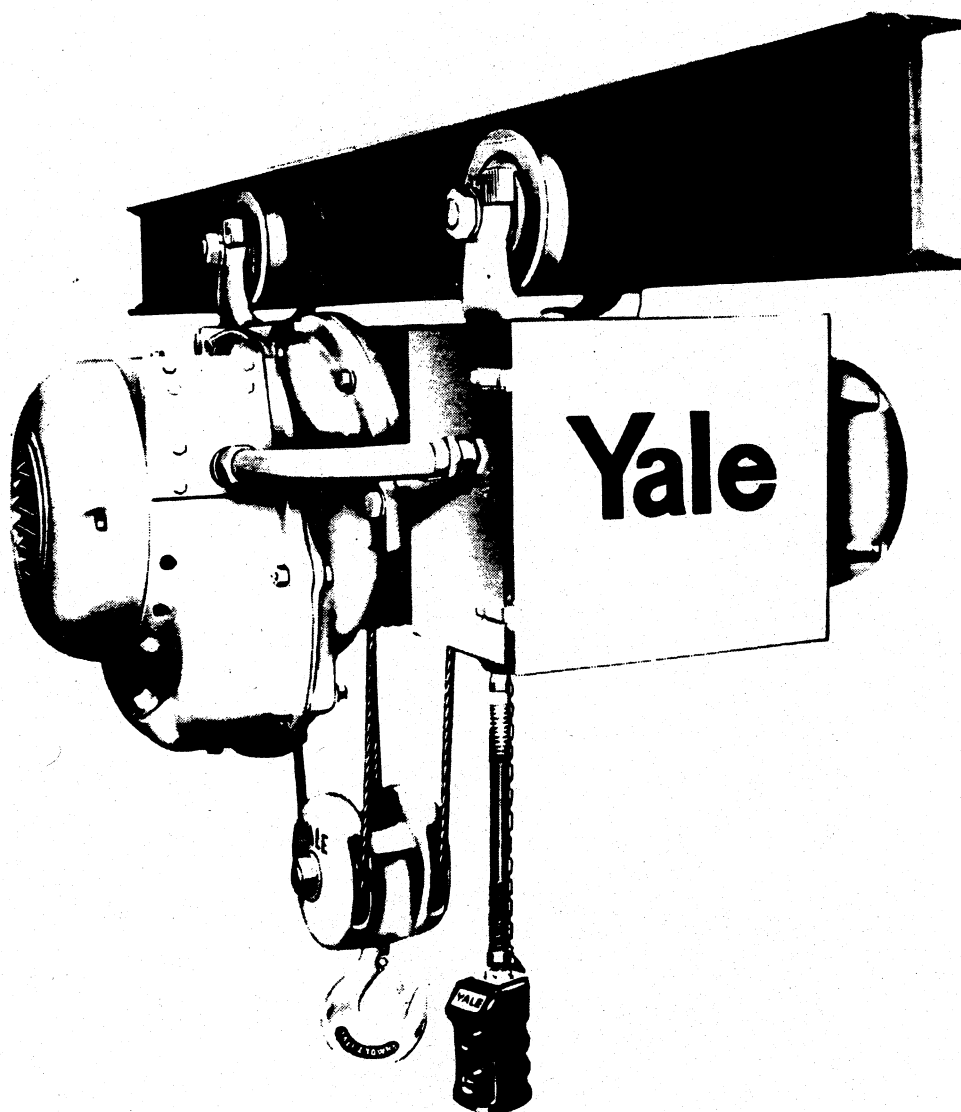



CE Series-FEW Series, Wire Rope Electric Hoist

SPARE PARTS MANUAL

IMPORTANT

IF MOTOR PARTS ARE REQUIRED GIVE
COMPLETE MOTOR NAMEPLATE READING

WHEN ORDERING HOIST PARTS GIVE COMPLETE HOIST NAMEPLATE READING AND NUMBER OF PARTS REQUIRED

Yale®

Capacity, tons _____

Speed, fpm _____

Model _____

Serial No. _____

Volts _____ Phase _____ Hz. _____

Min. Circuit Ampacity _____

Max. Fuse Rating _____

Order no. _____

Yale Industrial Products, Inc.
Highway 1 North
P. O. Box 1000
Forrest City, Arkansas 72335
Telephone (501) 633-2250

CAUTION

NEVER REMOVE PAGES FROM THIS BOOK.

ALWAYS STATE WHETHER PARTS ARE TO BE SHIPPED BY PARCEL POST, EXPRESS OR FREIGHT.

FURNISHING COMPLETE INFORMATION WILL SAVE TIME AND AID US IN SERVING YOU.
SEE REPAIR PARTS ORDERING INFORMATION IN SECTION B

165-901-004


When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts



SECTION F
SUSPENSION FRAME, DRUM
AND ROPE ASSEMBLY

CE Series
Suspension Parts

PD CHASSIS

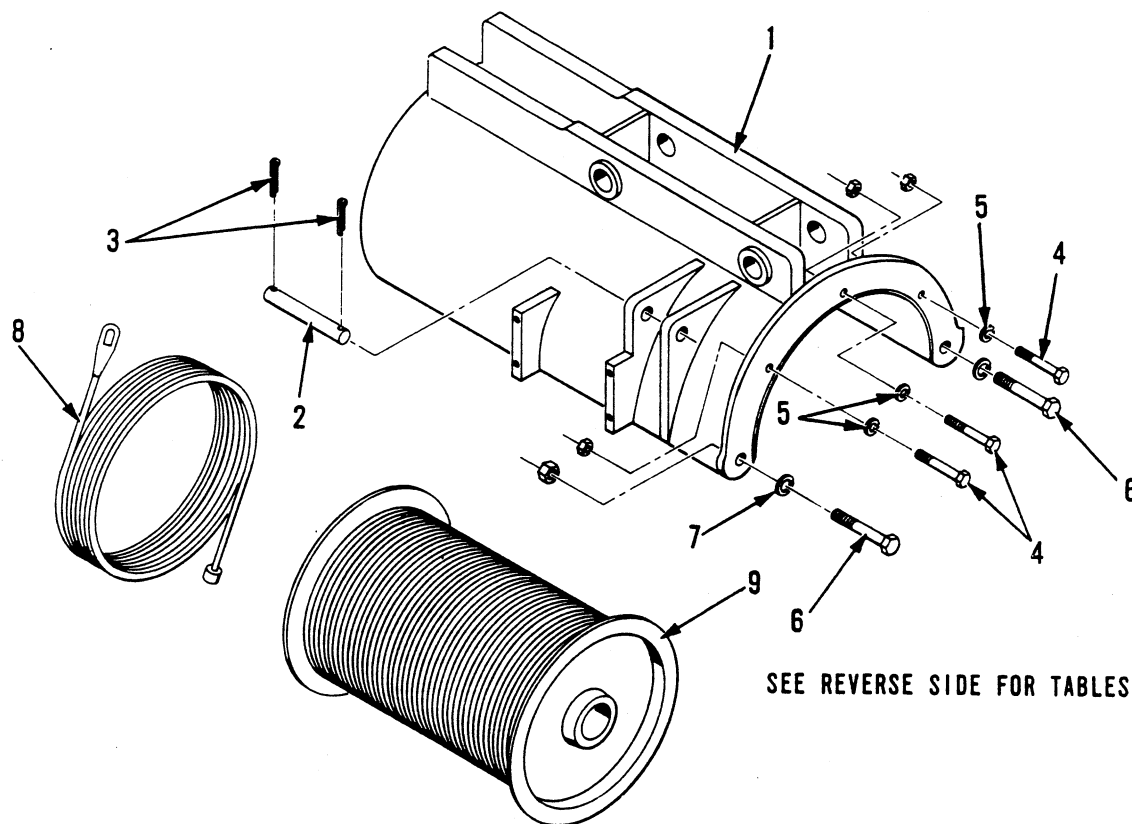

SEE REVERSE SIDE FOR TABLES 1, 2 and 3.

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	SEE TABLE 1	SUSPENSION FRAME	1
2	0106881-00	DEAD END PIN, ROPE	1
3	0154214-00	COTTER PIN	2
4	0596946-00	CAP SCREW, 1/2 x 1 1/2	6
5	0150266-00	LOCKWASHER, 1/2 INCH	6
6	2031579-00	CAP SCREW, 3/4 x 2 1/4	4
7	0114149-00	LOCKWASHER, 3/4 INCH	4
8	SEE TABLE 2	WIRE ROPE ASSEMBLY	1
9	SEE TABLE 3	DRUM	1

YD-0409

165-903-J15

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

MAY 1973

SUSPENSION PARTS

SECTION F

SUSPENSION FRAME, DRUM
AND ROPE ASSEMBLY



(800) 713-0101 • www.gohispeed.com

CE Series Suspension Parts

PD CHASSIS

TABLE 1. PD CHASSIS SUSPENSION FRAME

CAPACITY	LIFT IN FEET	PART NUMBER
2	18	6400447-00
2	35	6400457-00
2	50	5003406-00
2	75	5003426-00
3	18	6400447-00
3	35	6400457-00
3	50	5003406-00
3	75	5003426-00
5	16	6400447-00
5	17	6400447-00
5	30	6400457-00
5	44	5003406-00
5	67	5003426-00

TABLE 2. PD CHASSIS WIRE ROPE ASSEMBLY

CAPACITY	LIFT IN FEET	PART NUMBER
2	18	5019420-03
2	35	5019420-04
2	50	5019420-05
2	75	5019420-06
3	18	5019450-01
3	35	5019450-02
3	50	5019450-03
3	75	5019450-04
5	16	5019490-01
5	17	6419160-01
5	30	5019490-02
5	44	5019490-03
5	67	5019490-04

TABLE 3. PD CHASSIS DRUMS

CAPACITY	LIFT IN FEET	PART NUMBER
2	18	0103353-00
2	35	0103357-00
2	50	0103401-00
2	75	0103456-00
3	18	0103353-00
3	35	0103357-00
3	50	0103401-00
3	75	0103456-00
5	16	0500515-00
5	17	0103353-00
5	30	0500516-00
5	44	0605796-00
5	67	0612682-00


When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts




SECTION F
SUSPENSION FRAME, DRUM
AND ROPE ASSEMBLY

CE Series Suspension Parts


DECK & TROLLEY MOUNTED
FABRICATED FRAME

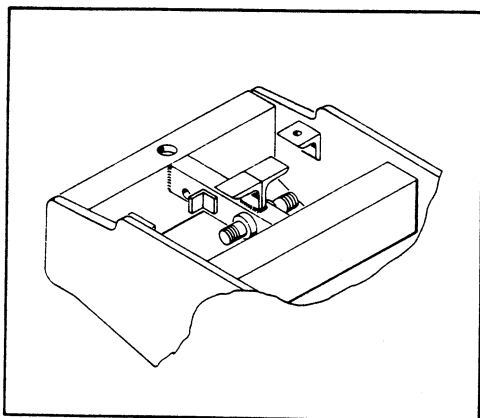


TDL 3 PART DOUBLE
6 & 7 1/2-TON
SEE TABLE 1

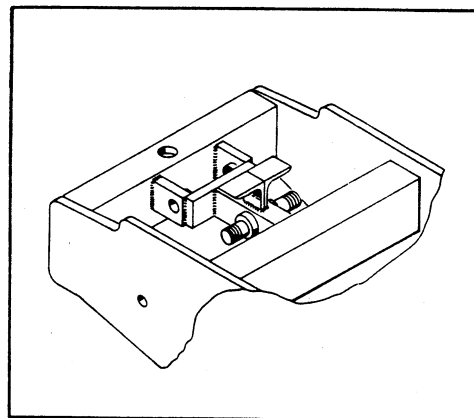


FDL 4 PART DOUBLE
10-TON
SEE TABLE 2

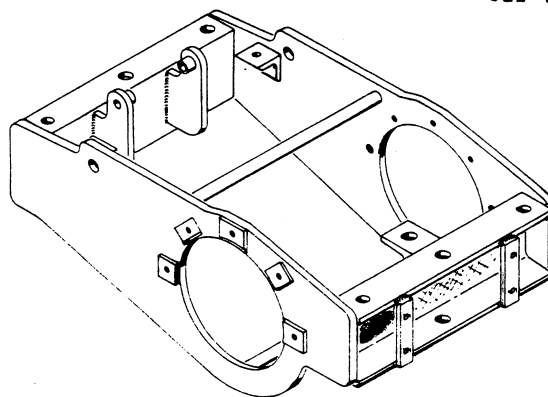

LD 2 PART DOUBLE
2-5 TON
SEE TABLE 3

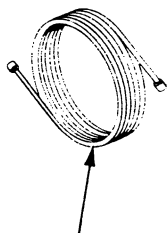

SEE TABLE 4, 5 & 6

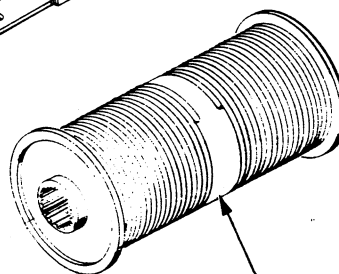

SEE TABLE 7, 8 & 9

YE-0399

165-903-011

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

CE-SERIES



SECTION F

SUSPENSION FRAME, DRUM
AND ROPE ASSEMBLY

CE Series

Suspension Parts DECK & TROLLEY MOUNTED

TABLE 1 - TDL CHASSIS

SUSPENSION FRAME PART NUMBER	TROLLEY TYPE		DECK TYPE	
	CAPACITY		CAPACITY	
	6	7 1/2	6	7 1/2
	LIFT IN FEET			
6405797-03	17	19	17	19
6405797-04	27	24	27	24

TABLE 2 - FDL CHASSIS

SUSPENSION FRAME PART NUMBER	TROLLEY TYPE	DECK TYPE
	CAPACITY	CAPACITY
	10	10
	LIFT IN FEET	
6405907-03	11	11
6405907-04	17	17
6405907-04	22	22

TABLE 3 - LD CHASSIS

SUSPENSION FRAME PART NUMBER	TROLLEY TYPE			DECK TYPE	
	CAPACITY			CAPACITY	
	2	3	5	3	5
	LIFT IN FEET				
6405717-02	18	15	14		14
6405717-02			16.5		
6405717-03	30	25	22		22
6405717-03			25	25	
6405717-04	48	40	35		35
6405717-04			44		

TABLE 4 - LD CHASSIS

ROPE ASSY PART NUMBER	CAPACITY		
	2	3	5
	LIFT IN FEET		
5018350-01	18		
5018350-02	30		
5018350-10	48		
5019400-01		15	
5019400-02		25	
5019400-03		40	
5019430-01			14
6411310-03			16.5
5019430-02			22
6411310-02			25
5019430-35			35
6411310-23			44

TABLE 5 - TDL CHASSIS

ROPE ASSY PART NUMBER	CAPACITY	
	6	7 1/2
	LIFT IN FEET	
5019410-01	17	
5019410-02	27	
6411310-45		19
5019430-08		24

TABLE 6 - FDL CHASSIS

ROPE ASSY PART NUMBER	CAPACITY	
	10	
	LIFT IN FEET	
5019430-36	11	
5019430-34	17	
6411310-47	22	

TABLE 7 - LD CHASSIS

DRUM PART NUMBER	CAPACITY		
	2	3	5
	LIFT IN FEET		
0103359-00	18		
0103399-00	30		
0103458-00	48		
0103372-00		15	
0103400-00		25	
0103460-00		40	
0333647-00			14
6403646-00			16.5
0333648-00			22
0103400-00			25
0589634-00			35
6414096-00			44

TABLE 8 - FDL CHASSIS

DRUM PART NUMBER	CAPACITY	
	10	
	LIFT IN FEET	
0333648-00	11	
0589634-00	17	
6414096-00	22	

TABLE 9 - TDL CHASSIS

DRUM PART NUMBER	CAPACITY	
	6	7 1/2
	LIFT IN FEET	
0103400-00	17	
0103460-00	27	
6405406-00		24
0589634-00		


When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

CE-SERIES



SECTION F
SUSPENSION FRAME, DRUM
AND ROPE ASSEMBLY

C E Series
Suspension Parts DECK & TROLLEY MOUNTED
LD, TDL & FDL

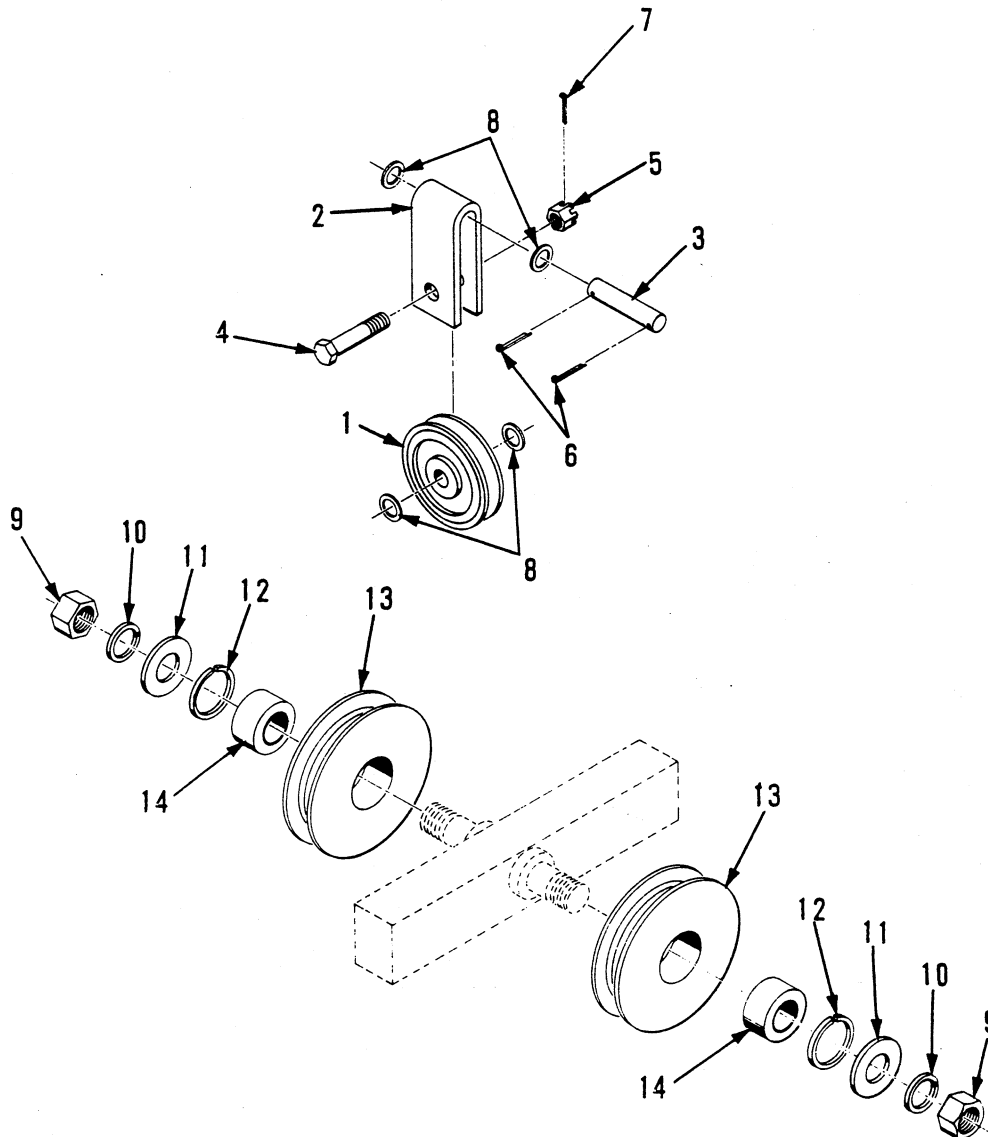

Note: LD USES ITEMS 1 THRU 8
TDL USES ITEMS 9 THRU 14
FDL USES ITEMS 1 THRU 14
SEE REVERSE SIDE FOR PARTS LISTING

YE-0400

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

CE-SERIES

SECTION F

SUSPENSION FRAME, DRUM
AND ROPE ASSEMBLY



CE Series Suspension Parts

DECK & TROLLEY MOUNTED

LD EQUALIZER SHEAVE (2 PART DOUBLE)

ITEM	PART NUMBER	DESCRIPTION	QTY
1	0332478-00	SHEAVE	1
2	6433663-00	EQUALIZER YOKE	1
3	6451708-00	YOKE PIN	1
4	0109387-00	HEX BOLT	1
5	0106703-00	SLOTTED NUT	1
6	0102831-00	COTTER PIN	2
7	0102796-00	COTTER PIN	1
8	0114184-00	WASHER	4

TDL IDLER SHEAVE (3 PART DOUBLE)

ITEM	PART NUMBER	DESCRIPTION	QTY
9	0149720-00	NUT	2
10	0150376-00	LOCKWASHER	2
11	0114203-00	WASHER	2
12	0110023-00	RETAINING RING	2
13	0616652-00	SHEAVE	2
14	0100822-00	BEARING	2

FDL IDLER & EQUALIZER SHEAVE (4 PART DOUBLE)

Note: Use Part Numbers Given Above Except Add The Following Numbers For FDL Units.

ITEM	PART NUMBER	DESCRIPTION	QTY
1	0332478-00	SHEAVE	1
2	6437343-00	EQUALIZER YOKE	1
3	6437333-00	YOKE PIN	1
4	0109394-00	HEX BOLT	1
5	0629014-00	SLOTTED NUT	1

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

CE-SERIES




SECTION G

GEAR TRAIN AND
LOAD BRAKE ASSEMBLY

CE Series D CHASSIS

Gear Train And Load Brake Assembly

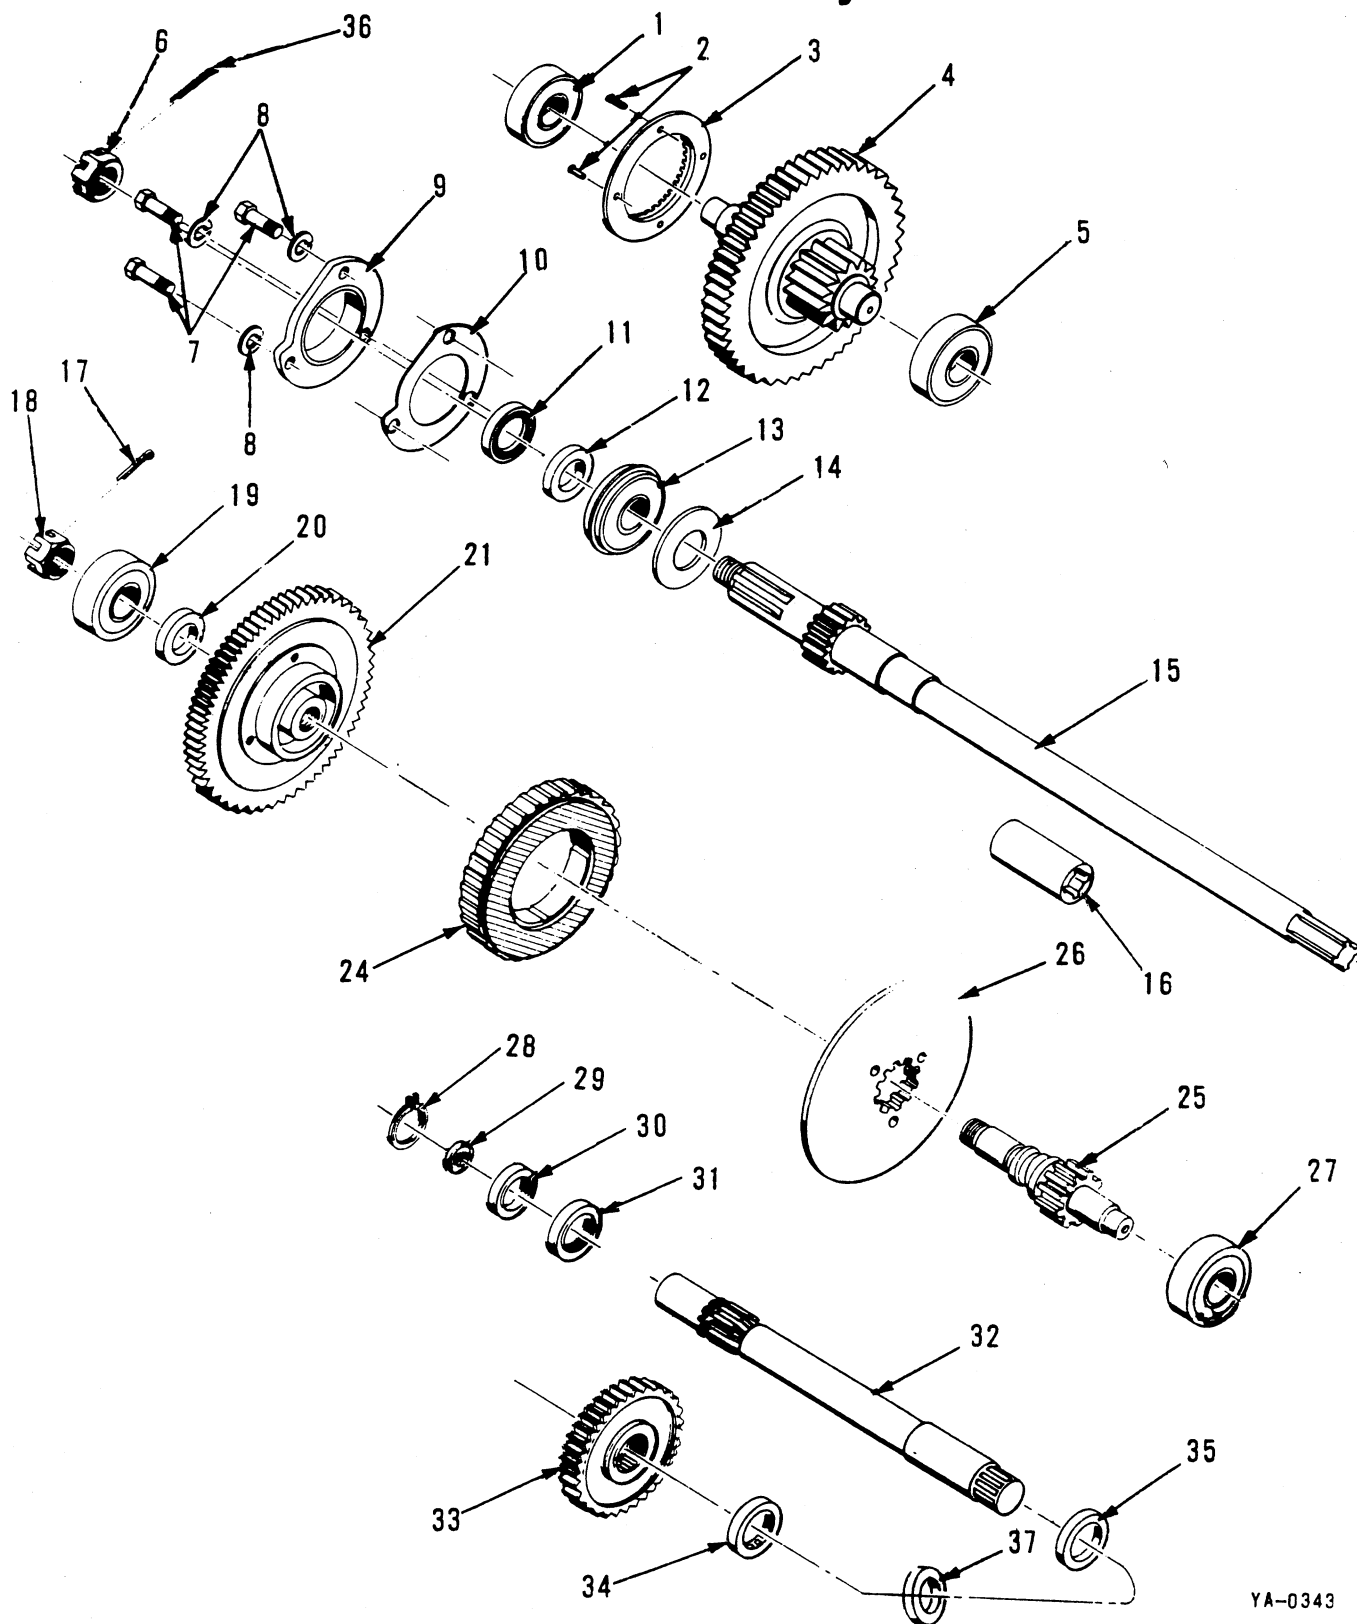

YA-0343

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

SECTION G

 GEAR TRAIN AND
 LOAD BRAKE ASSEMBLY

CE Series D CHASSIS

Gear Train And Load Brake Assembly

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	0567048-00	BEARING	1
2	6400329-07	RIVET	4
3	6410123-00	FACE GEAR	1
4	SEE TABLE 1	GEAR AND PINION	1
5	0573890-00	BEARING	1
6	0106697-00	SLOTTED NUT (7/8" - 14)	1
7	0622328-00	CAP SCREW	3
8	0401004-00	LOCKWASHER	3
9*	0107946-00	RETAINER	1
10*	6441833-00	GASKET	1
11*	0116128-00	OIL SEAL	1
12*	6443543-00	SPACER	1
13*	0329259-00	BEARING	1
14*	6418361-03	OIL SLINGER	1
15		DRIVING PINION	1
16	0116169-00	COUPLING (1 5/8" DIA. X 3" LONG)	1
	0116179-00	COUPLING (1 5/8" DIA. X 4 11/16" LONG) (WINCHES)	1
17	0154219-00	COTTER PIN (3/16" X 2 1/2")	1
18	0106712-00	SLOTTED NUT (1 1/8" X 12)	1
19	0567048-00	BEARING	1
20	6411161-00	SPACER	1
21	SEE TABLE 2	HIGH SPEED GEAR	1
24	6416643-00	RATCHET W/LINING	1
25	SEE TABLE 3	INTERMEDIATE PINION	1
26	SEE TABLE 3	RATCHET DISC	1
27	0567048-00	BEARING	1
28	0110009-00	SNAP RING	1
29	0116120-00	SEAL	1
30	0116132-00	SEAL	1
31	0100885-00	BEARING	1
32	SEE TABLE 4	DRUM SHAFT	1
33	SEE TABLE 4	DRUM GEAR (SLOW SPEED GEAR)	1
34	0100891-00	BEARING	1
35	0116136-00	SEAL	1
36	0102805-00	COTTER PIN (5/32" X 2")	1
37	0643023-00	DRUM SPACER (3 3/4" O.D. X 5/32" THICK) STD. H/R	1
	0653005-00	DRUM SPACER (WINCH & H SERIES LOW H/R) (3 3/4" O.D. X 1" THICK)	1
*	6444830-00	BEARING & RETAINER KIT	

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts



SECTION G

GEAR TRAIN AND
LOAD BRAKE ASSEMBLY



CE Series D CHASSIS

Gear Train And Load Brake Assembly

TABLE 1 - GEAR AND PINION ASSEMBLY

	ASSEMBLY NUMBER	NUMBER OF TEETH		OLD PART NUMBER
		GEAR	PINION	
☐	* 6454904-06	52	11	0104441-00
☐	* 6454904-07	48	11	0104443-00

* Includes Items 2 & 3 (Rivet And Face Gear).

TABLE 2 - HIGH SPEED GEAR

	ITEM NUMBER	PART NUMBER	NUMBER OF TEETH	GEAR RATIO
☐	21	6439834-00	70	86.6
☐	21	6421286-00	68	73.5 & 51.0

TABLE 3 - INTERMEDIATE PINION AND RATCHET DISC

	PINION ASSEMBLY	NUMBER OF TEETH	INTERMEDIATE PINION	RATCHET DISC	GEAR RATIO
☐	*6440154-00	12	6439774-00	6419514-00	86.6-1 & 73.5-1
☐	*6440144-00	16	6439784-00	6419514-00	51.0-1

* Includes Items 25 & 26.

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

SECTION G

GEAR TRAIN AND
LOAD BRAKE ASSEMBLY



CE Series

D CHASSIS

Gear Train And Load Brake Assembly

TABLE 4 - SLOW SPEED GEAR
(FURNISHED AS AN ASSEMBLY ONLY)

ASSEMBLY NUMBER	DRUM GEAR	LENGTH INCHES	DRUM SHAFT
☐ 6454754-17	0104458-00	12 5/16	0103620-00
☐ 6454754-18	0104458-00	18 9/16	0103617-00
☐ 6454754-19	0104458-00	24 9/16	0103629-00
☐ 6454754-20	0104458-00	34 1/16	0103632-00
☐ 6454754-25	0104458-00	14	0103642-00
☐ 6454754-26	0104458-00	20 1/4	0103643-00
☐ 6454754-27	0104458-00	26 1/4	0103644-00
☐ 6454754-28	0104458-00	35 3/4	0103645-00
☐ 6454754-29	0104458-00		0103658-00

165-904-006



SECTION G

GEAR TRAIN AND LOAD BRAKE ASSEMBLY


Operation Description And Maintenance Of YALE Load Brake

Purpose

The main purpose of the Yale 'Weston Screw and Disc Type' load brake is to control the lowering speed of the hoist. Its secondary purpose is to act as an auxiliary brake.

Operation

The load brake functions regardless of whether the current is on or off when lowering. When the current is off the load pulls in a counter-clockwise direction on the slow speed gear and screws the brake up tight locking all the parts of the load brake together. A pawl engages the ratchet gear and disc assembly holding the load stationary when the pull is in this direction. The greater the load, the more definite the locking action.

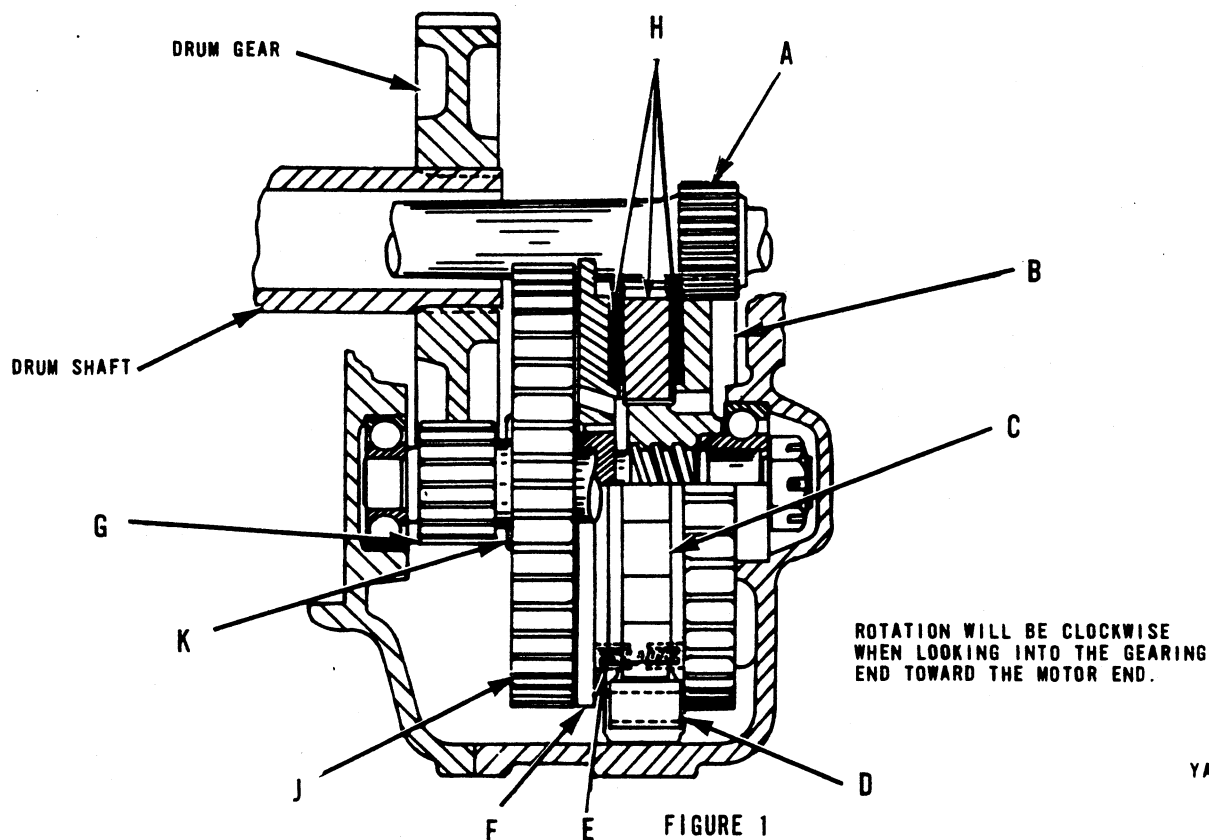

YA-0246

When hoisting in the up direction, power from the motor is applied through the driving pinion A to the high speed gear B. This gear with its threaded hub screws clockwise and all of the brake parts become tight and move as a unit in the clockwise direction.

NOTE: ROTATION WILL BE CLOCKWISE WHEN LOOKING INTO THE GEARING END TOWARD THE MOTOR END.

165-904-003

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

REVISED NOVEMBER 1976

CE SERIES

SECTION G**GEAR TRAIN AND
LOAD BRAKE ASSEMBLY****Yale**

Movement is free because the ratchet gear and disc assembly C is moving clockwise and it can rotate without its teeth engaging the pawl D. In this direction of rotation, the pawl is held away from the ratchet by a spring loaded friction button E which is part of the pawl assembly and presses outward simultaneously on the ratchet disc F and the high speed gear B. As the load brake rotates in this direction it tends to drag the spring loaded button with it causing the pawl to ride over the ratchet teeth ready to catch and hold the pawl the instant the load starts to lower. The load brake is completely locked when operating in this direction.

When lowering the driving pinion reverses the direction of the high speed gear, turning it counter-clockwise. This unscrews the high speed gear and loosens the load brake. At the same time the load is pulling through the gear train in a clockwise direction on the intermediate pinion K trying to tighten the brake. This interaction is constantly going on when the hoist is lowering. In a smoothly operating load brake the motor uses about one-third to one-half of its rated horsepower to drive the load down by keeping a satisfactory adjustment on the brake between the open and closed position. This operation must be just fast enough to keep the pull of the load from getting ahead and closing the brake. The load is always under control as it is the drive of the motor which lowers it while its own weight always works to close the brake.

In this lowering operation friction holds the load as the brake is just slightly open. The ratchet gear and disc assembly is held stationary by the ratchet pawl, while the high speed gear revolves. The brake discs H are bonded to the ratchet gear to form the ratchet gear and disc assembly C. The friction of the high speed gear B and reaction disc F against the stationary ratchet gear and disc assembly, with the aid of oil lubrication, produces a positive hold action permitting easy and gradual lowering.

The instant the down button is released, the high speed gear becomes stationary because the motor brake holds the driving pinion stationary and the pull of the load closes the brake as it is held by the ratchet pawl.

When the hoist lowers without a load, the high speed gear opens the brake and drives the hook down directly through the gear train. Only the friction of the normally operating gears interferes with free action and therefore such lowering is usually slightly faster than lowering with a load.

The operation of the load brake is separate from the hoisting mechanism, therefore, there is no loss of power in overcoming friction holding the load.

Load Brake Maintenance

The operation of the load brake provides automatic adjustment for wear of the brake discs. The only maintenance normally necessary is infrequent replacement of the ratchet gear and disc assembly. To check operation of load brake, See instructions in paragraphs on daily, monthly and annual inspection in preventive maintenance schedule (Section B).

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts




SECTION G
GEAR TRAIN AND
LOAD BRAKE ASSEMBLY

Load Brake Removal

- 1- Remove load.
- 2- Disconnect hoist at power supply.
- 3- Disconnect the two solenoid wires that lead to the motor brake solenoid.
- 4- Remove the drain plug at the bottom of the gear case cover and drain the oil into a can or bucket (two quart size is sufficient). **CAUTION - DO NOT REMOVE PAWL PLUG AT THIS TIME.**
- 5- Remove the eight hex head cap screws and two dowel bolt nuts holding the gear case cover to the gear case. Drive a sharp instrument between these two parts and pry the gear case cover off.

The intermediate gear J and the slow speed pinion G can now be lifted out. On all hoists that do not have a cotter pin through the pawl and ratchet pawl pin, the pawl may be removed by removing the ratchet pawl pin L and then the pawl with spring loaded friction buttons E, keeping a hand over the buttons so they will not spring out.

On all hoists that do have a cotter pin through the ratchet pawl pin and pawl, the pawl need not be removed. On these hoists remove the pawl stop spring and pull pawl away from between the ratchet disc and gear with the flat of hand over the friction buttons as they will spring out when disengaged.

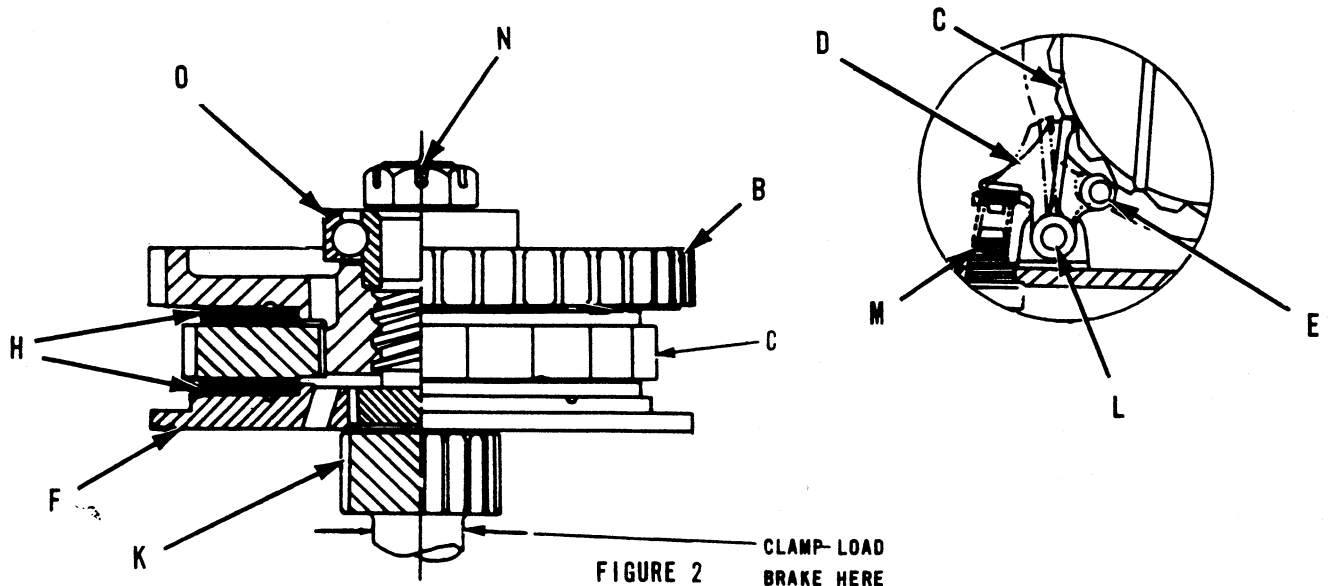


YA-0247

165-904-004

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

REVISED NOVEMBER 1976

CE SERIES



Load Brake Disassembly

After either one of the two preceding operations has been accomplished it is now possible to lift out the complete load brake. Place the load brake in a vise and tighten jaws over the shoulder below the intermediate pinion K. Load brake is now ready for disassembly in the following manner.

- 1- Remove the cotter pin from the castellated nut and remove nut.
- 2- Remove the high speed gear B.
- 3- Take off ratchet gear and disc assembly noting the direction the ratchet teeth are facing.

Before replacing the Ratchet Gear and Disc assembly and the high speed gear, make sure all dirt or foreign material is cleaned off.

Load Brake Re-assembly

- 1- Place the ratchet gear and disc assembly on the shaft, then thread the gear on tight.
 - 2- Place spacer and bearing on the end of the shaft and press it down into the ground recess in the gear.
 - 3- Tighten the castellated nut down on the bearing. Then back the nut off slowly until the first castellation lines up with the hole drilled in the shaft and slip cotter pin through this hole. Open the brake and check the adjustment by turning the ratchet gear and disc assembly. If properly adjusted it should turn freely. Bend the cotter pin around nut and cut off any excess.
- The assembled load brake can now be put back into gear case cover.

Load Brake Installation

- 1- Insert the load brake in the gear case cover.
- 2- On all hoists that have a cotter pin through the pawl and ratchet pawl pin, take one button, then the spring, then the second button and slide them through the pawl in that order holding a finger over the bottom of the pawl so the buttons will not slide out. Press hard on buttons so as to compress the spring sufficiently enough to be able to slide the complete pawl in between ratchet disc and high speed gear. Replace the pawl stop spring.

On all hoists that do not have a cotter pin through the pawl and ratchet pawl pin, assemble the pawl with buttons and friction spring. Spin the load brake around so that when installed the pawl will engage a ratchet tooth. Line up pawl between the lugs and slide in ratchet pawl pin. Press hard on the buttons so as to compress the spring sufficiently enough to be able to slide the complete pawl in between the ratchet disc and high speed gear. Replace the pawl stop spring.

Lubrication

SEE SECTION B

When Replacement Parts Are Needed, Order Only YALE[®] Factory Engineered Parts

CE SERIES

REVISED NOVEMBER 1976




Yale

SECTION H

GEAR CASE, COVER
AND HOIST END COVER

Gear Case, Cover and Hoist End Cover

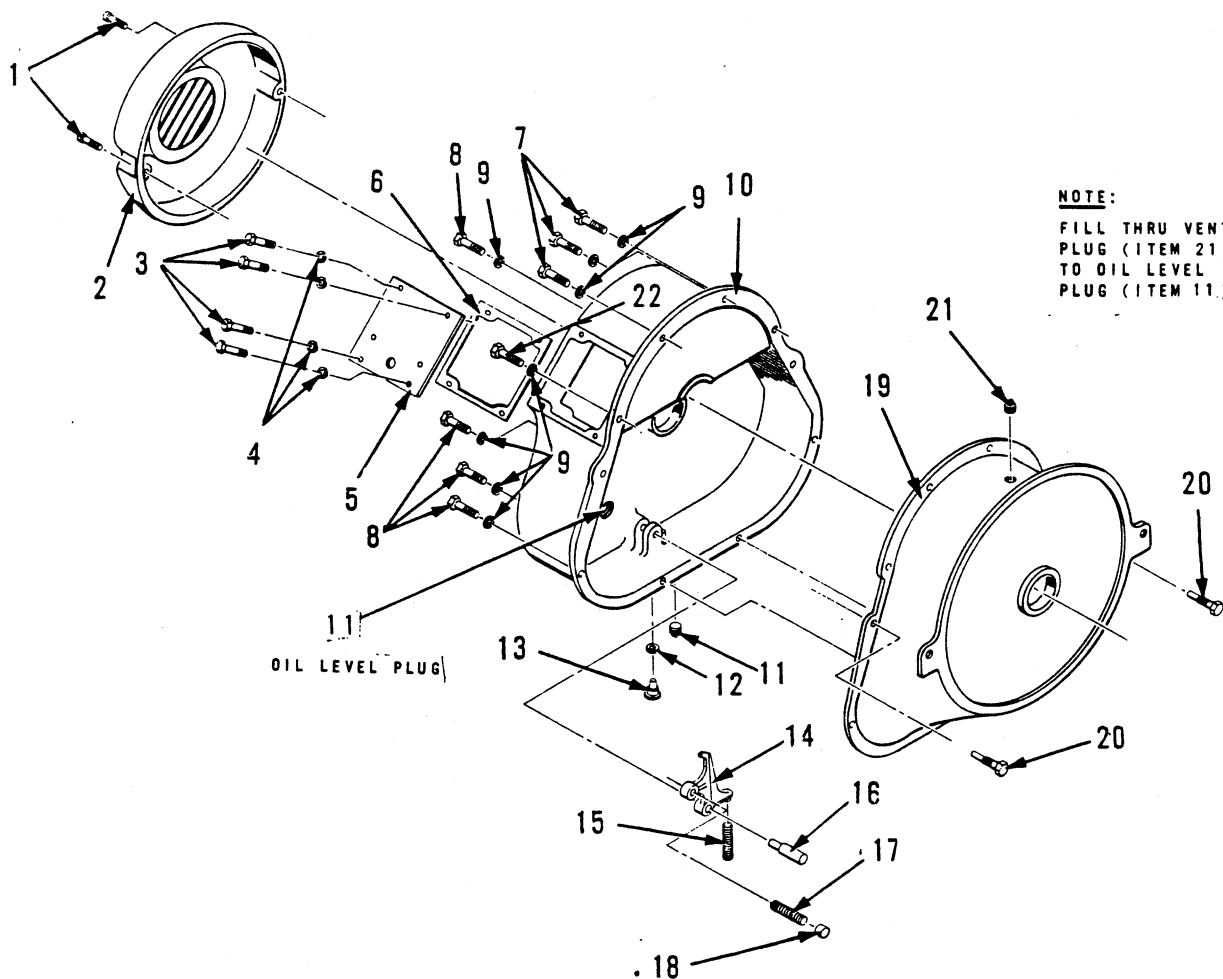

NOTE:
FILL THRU VENT
PLUG (ITEM 21)
TO OIL LEVEL
PLUG (ITEM 11).

YE-0248

165-905-002

When Replacement Parts Are Needed, Order Only YALE[®] Factory Engineered Parts

REVISED NOVEMBER 1976

D CHASSIS

SECTION HGEAR CASE, COVER
AND HOIST END COVER**Yale**

(800) 713-0101 • www.gohispeed.com

Gear Case, Cover and Hoist End Cover

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	0146371-00	SCREW	2
2	0225007-00	HOIST END COVER (Cast Iron)	1
	0225010-00	HOIST END COVER (Aluminum)	1
3	0622328-00	CAP SCREW	4
4	0401004-00	LOCKWASHER	4
5	5004473-00	SOLENOID BRACKET	1
6	0104041-00	GASKET	1
7	0596946-00	CAP SCREW	3
8	0600569-00	CAP SCREW	4
9	0150266-00	LOCKWASHER	8
10	6432836-00	GEAR CASE COVER	1
11	0230808-00	FILL AND DRAIN PLUG	2
12	0104013-00	GASKET	1
13	0106849-00	PAWL STOP	1
14	0106818-00	PAWL	1
15	0110562-00	SPRING	1
16	0106877-00	PAWL PIN	1
17	0110553-00	SPRING	1
18	0107989-00	PAWL SPRING RETAINER	2
19	6423746-00	GEAR CASE	1
20	0116521-00	DOWEL BOLT	2
21	0107182-00	VENT PLUG	1
22	0554850-00	HEX HEAD SCREW	1
23	0401004-00	LOCKWASHER FOR HOIST END COVER (Not Shown)	2
24	0106643-00	DOWEL BOLT NUT (Not Shown)	2
25	0109649-00	LEVER, SOLENOID (Not Shown)	1
26	0110598-00	SPRING, SOLENOID PLUNGER (Not Shown)	1
27	0110541-00	SPRING GUIDE, SOLENOID (Not Shown)	1


When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

Yale Hoisting Equipment

CE Series

Solenoid And Linkage Assembly

1

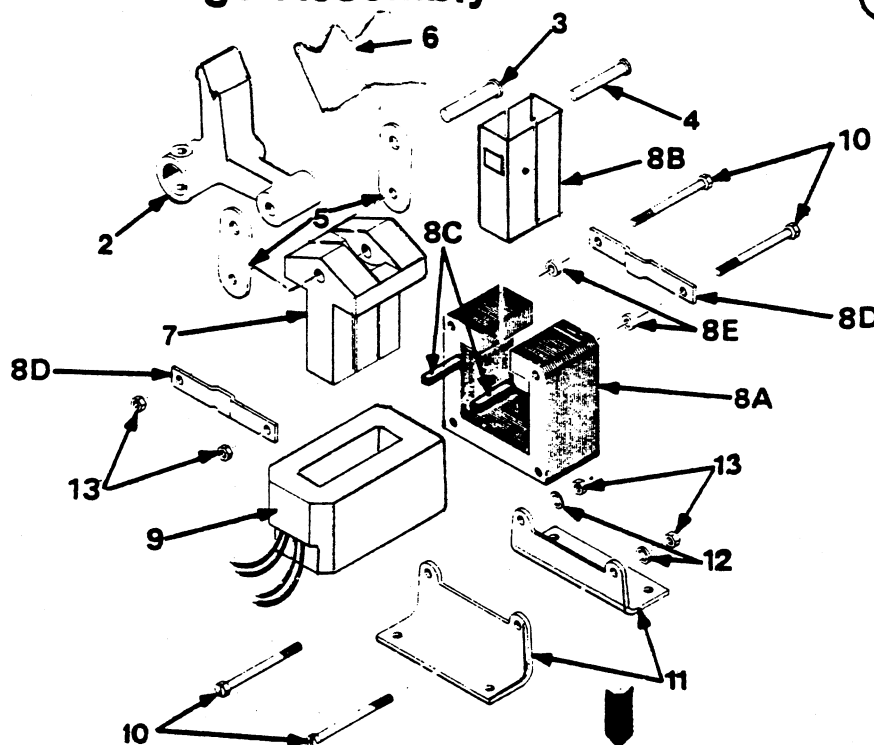

YA-0294

THE FOLLOWING PARTS ARE COMMON TO THE ASSEMBLIES LISTED ON BACK SIDE OF THIS PAGE.

ITEM NUMBER	DESCRIPTION	B CHASSIS	C CHASSIS	D CHASSIS	E CHASSIS	QTY.
1*	PLUNGER & LINKAGE ASSY.	6437533-00	6424243-00	6424263-00	6424253-00	1
2	SOLENOID LEVER	0105172-00	0105230-00	0105230-00	0227065-00	1
3	PIN, SOL. LEVER	0106982-00	6415211-01	6415211-02	6415211-02	1
4	PIN, SOL. PLUNGER	0106982-00	0106982-00	6415191-00	6415191-00	1
5	LINK	6415241-01	6415241-02	6415241-02	6415241-03	2
6	SPRING		6437378-01	6437378-02	6450798-00	1
7	PLUNGER	6443088-00	6443088-00	6443098-00	6443098-00	1
8*	FRAME	6424223-00	6424223-00	6424233-00	6424233-00	1
8A	CORE	6458991-07	6458991-07	6458991-08	6458991-08	1
8B	COIL LINER	6458991-01	6458991-01	6458991-02	6458991-02	2
8C	COIL WEDGE	6458991-03	6458991-03	6458991-04	6458991-04	2
8D	LINER BRACKET	6458991-06	6458991-06	6458991-06	6458991-06	2
8E	BRACKET WASHER	6458991-05	6458991-05	6458991-05	6458991-05	4
9	COIL	SEE TABLE	SEE TABLE	SEE TABLE	SEE TABLE	1
10	HEX BOLT	2032094-00	2032094-00	2032097-00	2032097-00	2
11	MTG. BRACKET				6434584-01	1
	MTG. BRACKET				6434584-02	1
	MTG. BRACKET		6426473-02			2
	MTG. BRACKET	6426473-01		6426473-01		2
12	FLAT WASHER	0161035-00	0161035-00	0161035-00	0161035-00	2
13	STOVER NUT	5020979-08	5020979-08	5020979-08	5020979-08	2

*We Recommend Replacing The Frame With The Plunger And Linkage Assembly, Should Either Part Need Replacement.

183-305-001

When Replacement Parts Are Needed, Order Only Yale® Factory Engineered Parts

REVISED JANUARY 1980

CE SERIES

CE Series Solenoid And Linkage Assembly


☐ B CHASSIS
 ☐ C CHASSIS
 ☒ D CHASSIS
 ☐ E CHASSIS

COMPLETE SOLENOID INCLUDING COIL	COMPLETE SOLENOID INCLUDING COIL	COMPLETE SOLENOID INCLUDING COIL	COMPLETE SOLENOID INCLUDING COIL	OPERATING CURRENT	INSUL	COIL TABLE	
						B & C CHASSIS COIL ONLY	D & E CHASSIS COIL ONLY
6440634-01	6439644-01	6439654-01	6439664-01	115-60	B	6430314-01	6430334-01
02	02	02	02	200-60	B	02	02
03	03	03	03	230-60	B	03	03
04	04	04	04	460-60	B	04	04
05	05	05	05	230/460-60	B	05	05
06	06	06	06	575-60	B	06	06
07	07	07	07	110-50	B	07	07
08	08	08	08	220-50	B	08	08
09	09	09	09	440-50	B	09	09
10	10	10	10	110-25	B	10	10
11	11	11	11	220-25	B	11	11
12	12	12	12	440-25	B	12	12
13	13	13	13	120-DC	B	13	13
14	14	14	14	240-DC	B	14	14
15	15	15	15	480-60	B	15	15
16	16	16	16	115-60	H	16	16
17	17	17	17	200-60	H	17	17
18	18	18	18	230-60	H	18	18
19	19	19	19	460-60	H	19	19
20	20	20	20	230/460-60	H	20	20
21	21	21	21	575-60	H	21	21
22	22	22	22	110-50	H	22	22
23	23	23	23	220-50	H	23	23
24	24	24	24	440-50	H	24	24
25	25	25	25	110-25	H	25	25
26	26	26	26	220-25	H	26	26
27	27	27	27	440-25	H	27	27
28	28	28	28	120-DC	H	28	28
29	29	29	29	240-DC	H	29	29
30	30	30	30	480-60	H	30	30
31	31	31	31	500-60	B	31	31
32	32	32	32	500-60	H	32	32

ALL D.C. SOLENOIDS - IN ADDITION TO THE ABOVE FURNISH "B" CHASSIS ONLY - B/M 6485110-00
 CONSISTING OF (1) 6427713-00 BRKT.
 (1) 0105873-00 SWITCH CONTACT

C, D & E CHASIS - B/M 6480710-00 CONSISTING OF (1) 0101721-00 BRKT.
 (1) 0105873-00 SWITCH CONTACT
 (2) 0150308-00 WASHER
 (3) 0653541-00 TERMINAL
 (2) 2031426-00 SCREW

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

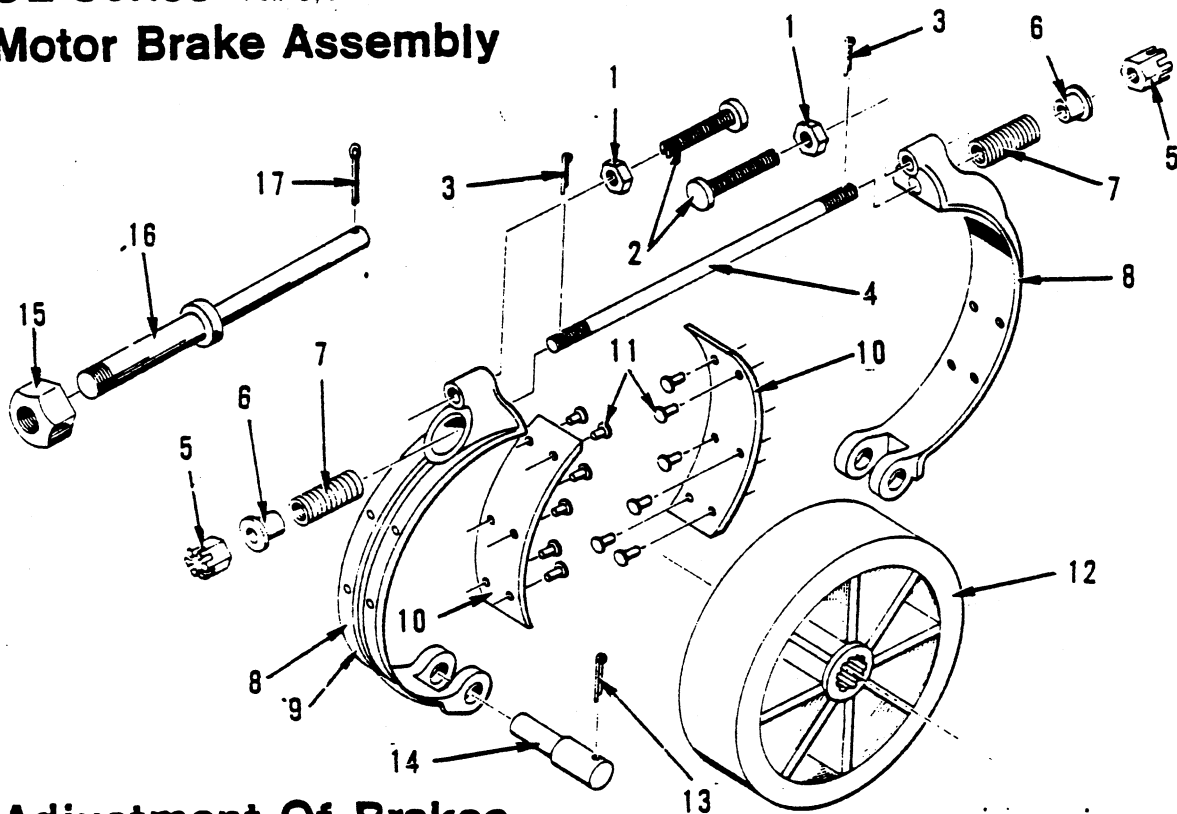
SECTION J
MOTOR BRAKE ASSEMBLY
CE Series FOR B, C AND D CHASSIS
Motor Brake Assembly


YA-0331

Adjustment Of Brakes

If the load block does not come to a quick stop, the solenoid brake should be adjusted as follows:

- (1) Remove the lower Louvered cover on the gear end.
- (2) Loosen both jam nuts with an open end wrench.
- (3) With the open end wrench hold the motor brake shaft in the position it would take if the solenoid was energized and the brake was open.
- (4) Using a screw driver turn the adjusting screws until the brake lining just makes contact with the brake drum.
- (5) Remove wrench from the motor brake shaft and retighten jam nuts while holding brake adjusting screws stationary with the screw driver.

If greater braking is desired tighten the spring tension, but make sure that the spring does not bottom when the brake is fully released. When the hoist is operated the solenoid should immediately snap into the released position.

If the solenoid action is sluggish or does not release, check the action of the plunger for rust or other conditions that might cause a bind. The solenoid may be removed for inspection by taking out four bolts and pulling the solenoid straight out. The plunger will remain in the hoist.

The oil immersed load brake inside the gear housing is automatic in its action and does not require adjustment.

Silver electrical contacts should not be lubricated and should not be filed or dressed for normal operation even though they may become darkened in appearance, because silvered surfaces remain good conductors. The greatest normal life will be obtained if the contacts are not touched until replacement is required.

165-907-007

When Replacement Parts Are Needed, Order Only YALE[®] Factory Engineered Parts

REVISED MARCH 1977

CE SERIES

SECTION J
MOTOR BRAKE ASSEMBLY


CE Series FOR B,C AND D CHASSIS

Motor Brake Assembly

☐ * B CHASSIS PARTS LISTING - COMPLETE BRAKE SHOE ASM 0588184-00 ***

ITEM NUMBER	PART NUMBER	DESCRIPTION	ITEM NUMBER	PART NUMBER	DESCRIPTION
1	0106628-00	JAM NUT	9	****	BRAKE SHOE
2	0109532-00	ADJUSTING SCREW	10	0102516-00	BRAKE LINING
3	0102775-00	COTTER PIN	11	0521576-00	RIVET
4	0100951-00	DOUBLE END STUD	12	0568265-00	BRAKE DRUM
5	0106612-00	SLOTTED NUT	13	0102806-00	COTTER PIN
6	0107986-00	SPRING RETAINER	14	0110691-00	BRAKE SHOE STUD
7	0301031-00	BRAKE SPRING	15	0106648-00	HEX NUT
8**	0102593-00	BRAKE SHOE ASSEMBLY	16	0110697-00	OPERATING LEVER STUD
		17 0102782-00			COTTER PIN

☐ * C CHASSIS PARTS LISTING - COMPLETE BRAKE SHOE ASM 0102586-00 ***

ITEM NUMBER	PART NUMBER	DESCRIPTION	ITEM NUMBER	PART NUMBER	DESCRIPTION
1	B106646-00	JAM NUT	8**	0102594-00	BRAKE SHOE ASSEMBLY
2	0109529-00	ADJUSTING SCREW	9	****	BRAKE SHOE
3	0102782-00	COTTER PIN	10	0102511-00	BRAKE LINING
4	0100949-00	DOUBLE END STUD	11	0521576-00	RIVET
5	0106626-00	SLOTTED NUT	12	0568266-00	BRAKE DRUM
6	0107984-00	SPRING RETAINER	13	0102821-00	COTTER PIN
7	0110570-00	SPRING	14	0110694-00	BRAKE SHOE STUD

☒ * D CHASSIS PARTS LISTING - COMPLETE BRAKE SHOE ASM 0589633-00 ***

ITEM NUMBER	PART NUMBER	DESCRIPTION	ITEM NUMBER	PART NUMBER	DESCRIPTION
1	B106646-00	JAM NUT		0110652-00	BRAKE SPRING (Special)
2	0109529-00	ADJUSTING SCREW			
3	0102782-00	COTTER PIN	8**	0102595-00	BRAKE SHOE ASSEMBLY
4	0100942-00	DOUBLE END STUD	9	****	BRAKE SHOE
5	0106626-00	SLOTTED NUT	10	0102506-00	BRAKE LINING
6	0107984-00	SPRING RETAINER	11	0149722-00	RIVET
7	0110570-00	BRAKE SPRING (Standard)	12	0102419-00	BRAKE DRUM
		14 0110694-00	13	0102821-00	COTTER PIN
					BRAKE SHOE STUD

* Use Parts Group Checked And Quantities As Required.

** Item 8 Includes Items 9,10 and 11.

*** INCLUDES ITEMS 1, 2, 3, 4, 5, 6, 7, AND 8

**** Item #9 available as part of item #8

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts


CE SERIES

REVISED MARCH 1977



SECTION K
LIMIT SWITCH ASSEMBLIES

CE Series, Weight Type Limit Switch Assembly

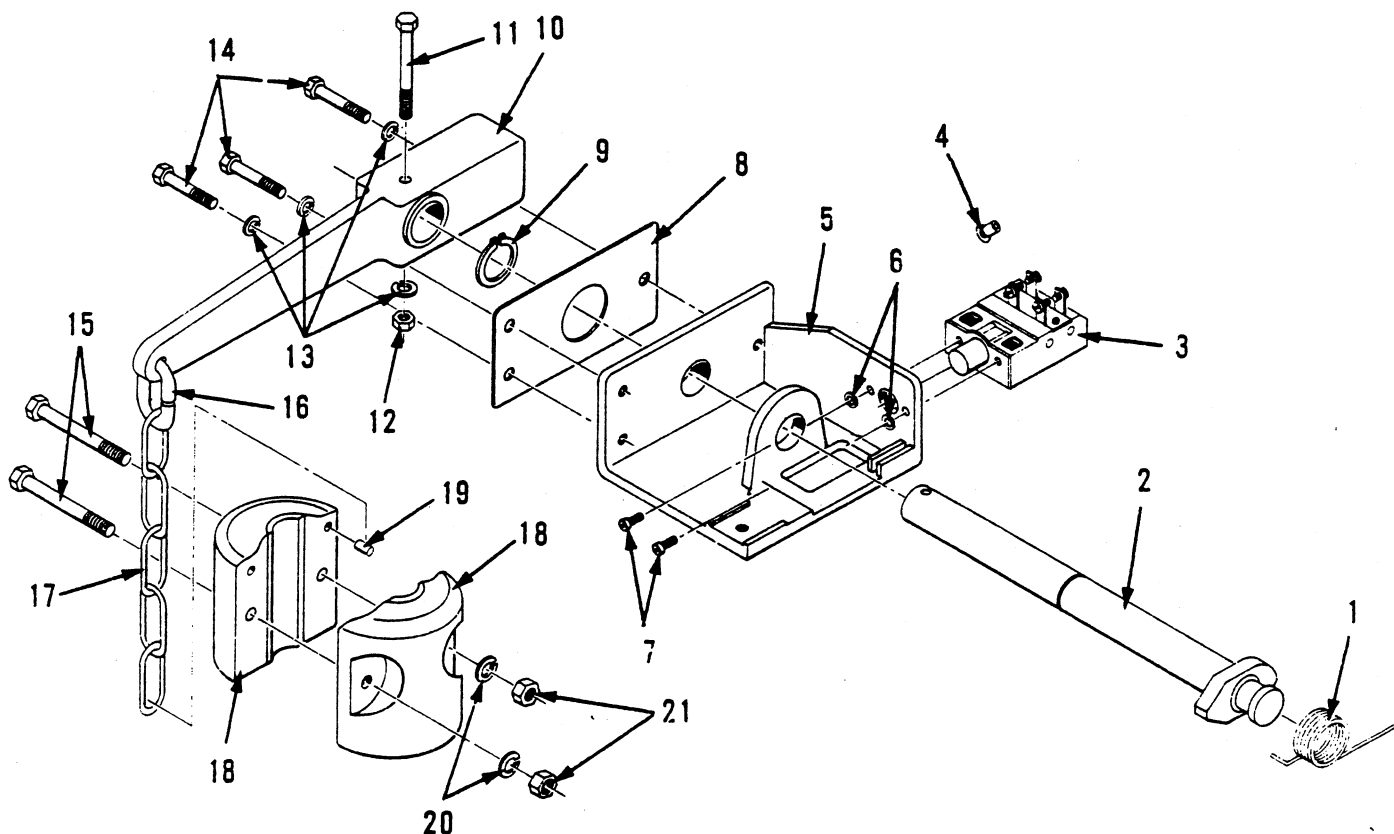

Operation

YD-0252

After the hoist is determined to be running in the proper direction, check the limit switch by running the hook upward and lifting the weight by hand. When the weight is lifted the hoist should cut off. Any further lifting of the weight will close the lowering circuit and cause the hook to lower.

SECTION K

LIMIT SWITCH ASSEMBLIES



CE Series, Weight Type

Limit Switch Assembly

☐

* LIMIT SWITCH ASSEMBLY NUMBER 6468240-00

ITEM NUMBER	PART NUMBER	DESCRIPTION	ITEM NUMBER	PART NUMBER	DESCRIPTION
	6468240-00	LIMIT SWITCH ASSEMBLY	11	0619485-00	SCREW
1	5000591-00	SPRING	12	0106620-00	HEX NUT
2	6417431-00	CAM AND SHAFT	13	0114121-00	LOCKWASHER
3	0105904-00	CONTACT SWITCH	14	0597163-00	HEX SCREW
4	0103893-00	WIRE TERMINAL	15	0109484-00	HEX SCREW
5	5000653-00	LIMIT SWITCH BASE	16	0219672-00	OPEN LINK
6	0150256-00	LOCKWASHERS	17	0107222-00	ANCHOR CHAIN (12 LINKS)
7	0109445-00	ROUND HEAD SCREW	18	0105751-00	WEIGHT HALF
8	0601039-00	GASKET	19	0105760-00	PIN
9	0159149-00	RETAINING RING	20	0150308-00	LOCKWASHER
10	5000651-00	LEVER	21	0149707-00	JAM NUT

☐

* LIMIT SWITCH ASSEMBLY NUMBER 5002900-00

ITEM NUMBER	PART NUMBER	DESCRIPTION	ITEM NUMBER	PART NUMBER	DESCRIPTION
	5002900-00	LIMIT SWITCH ASSEMBLY	11	0619485-00	HEX SCREW
1	5000591-00	SPRING	12	0106620-00	HEX NUT
2	5000641-00	CAM AND SHAFT	13	0114121-00	LOCKWASHER
3	0105904-00	CONTACT SWITCH	14	0597163-00	HEX SCREW
4	0653541-00	WIRE TERMINAL	15	0109484-00	HEX SCREW
5	5000653-00	LIMIT SWITCH BASE	16	0219672-00	LINK (12 LINKS)
6	0150256-00	LOCKWASHER	17	0107222-00	ANCHOR CHAIN
7	0109445-00	ROUND HEAD SCREW	18	0105751-00	WEIGHT HALF
8	0601039-00	GASKET	19	0105760-00	PIN
9		NONE	20	0150308-00	WASHER
10	5000651-00	LEVER	21	0106606-00	JAM NUT

☐

* LIMIT SWITCH ASSEMBLY NUMBER 5002910-00

ITEM NUMBER	PART NUMBER	DESCRIPTION	ITEM NUMBER	PART NUMBER	DESCRIPTION
	5002910-00	LIMIT SWITCH ASSEMBLY	11	0619485-00	SCREW
1	5000591-00	SPRING	12	0106620-00	HEX NUT
2	5000641-00	CAM AND SHAFT	13	0114121-00	LOCKWASHER
3	0105904-00	CONTACT SWITCH	14	0597163-00	HEX SCREW
4	0653541-00	WIRE TERMINAL	15	0597163-00	SCREW
5	5000653-00	LIMIT SWITCH BASE	16	0219672-00	LINK
6	0150256-00	LOCKWASHER	17	0107222-00	ANCHOR CHAIN (12 LINKS)
7	0109445-00	ROUND HEAD SCREW	18	0105751-00	WEIGHT HALF
8	0601039-00	GASKET	19	0105760-00	PIN
9		NONE	20	0150308-00	LOCKWASHER
10	5000651-00	LEVER	21	0106606-00	JAM NUT

* Use Parts Group Checked And State Quantity Required.

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts




SECTION K

LIMIT SWITCH ASSEMBLIES

CE Series Limit Switch Assembly

FOR LD CHASSIS, DESIGN SERIES H (BOX FRAME)

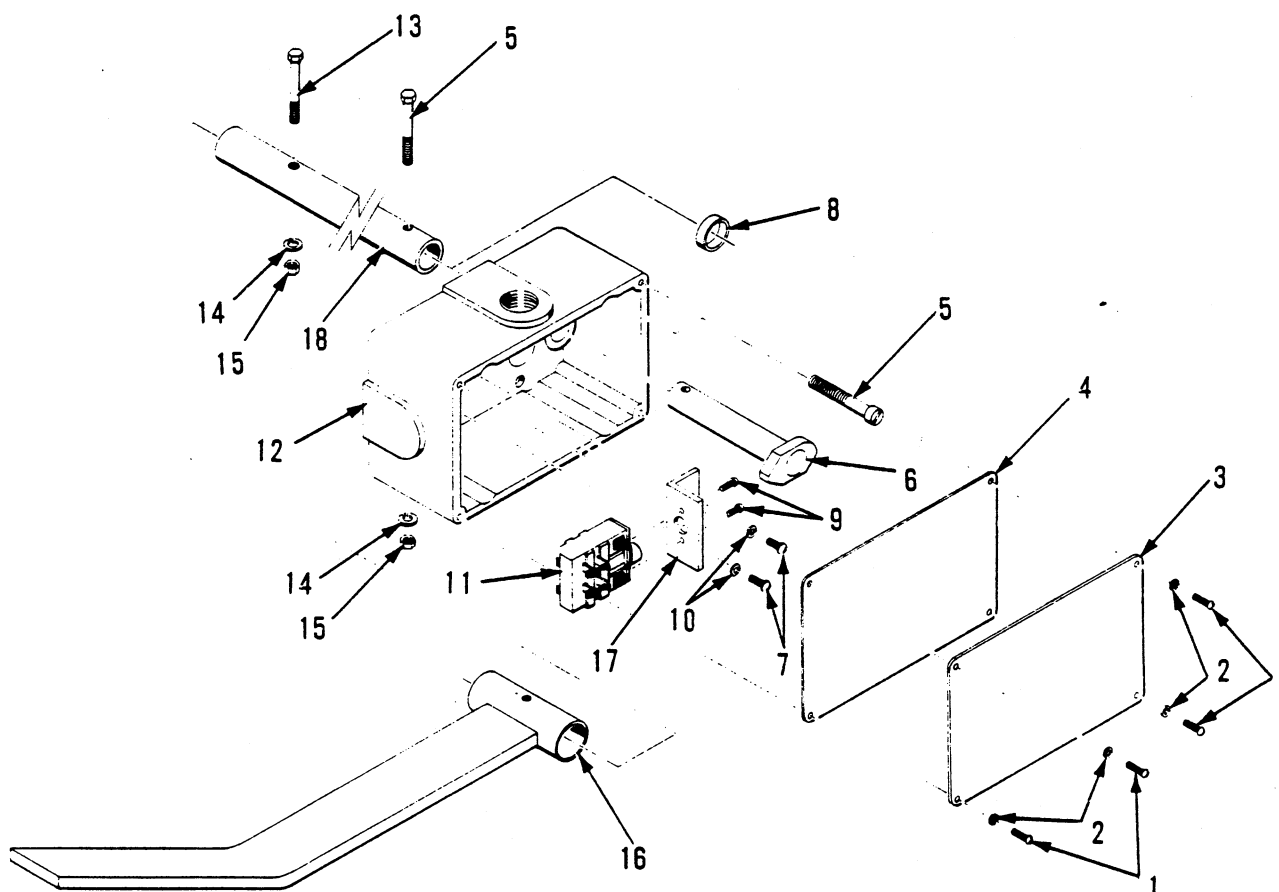

YE-0384

165-908-016

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

REVISED NOVEMBER 1979

CE-SERIES

SECTION K

LIMIT SWITCH ASSEMBLIES



CE Series Limit Switch Assembly

FOR LD CHASSIS, DESIGN SERIES H (BOX FRAME)

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	0109451-00	COVER SCREW	4
2	0150256-00	LOCKWASHER	6
3	0102901-00	COVER	1
4	0104117-00	INSULATING COVER	1
5	0655759-00	5/16 ROUND HEAD SCREW	6
6	SEE TABLE 1	CAM AND SHAFT	1
7	0109482-00	1/4 SCREW	2
8	0117744-00	BUSHING	1
9	0109445-00	8/32 ROUND HEAD SCREW	2
10	0150308-00	LOCKWASHER	2
11	0105904-00	CONTACT BUTTON	1
12	0105826-00	LIMIT SWITCH HOUSING	1
13	0623073-00	HEX HEAD SCREW	1
14	0401004-00	WASHER	8
15	0106620-00	5/16 - 18 HEX NUT	2
16	6445404-00	OPERATING LEVER	1
17	0105707-00	BRACKET	1
18	SEE TABLE 2	CONNECTOR SHAFT	1
*19	6431271-81	4 COND. #14 WIRE	1
20	0103711-00	BUSHING (Not Shown)	1
21	0629135-00	SCREW (Not Shown)	1
22	0653541-00	TERMINAL (Not Shown)	9
23	6451588-00	SUPPORT PLATE	1

* Specify Length.

TABLE 1

SPEED	CAPACITY	CAM & SHAFT	LIMIT SWITCH ASSEMBLY
HIGH SPEED	2-3	6440733-00	6494980-00
STANDARD SPEED	2-5	6436433-00	6483300-00


TABLE 2

CONNECTOR SHAFT	LENGTH
6436423-02	16 INCHES
6436423-03	22 INCHES
6436423-04	31 1/2 INCHES

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts


SECTION K
LIMIT SWITCH ASSEMBLIES

CE Series Traveling Nut Limit Switch Assembly

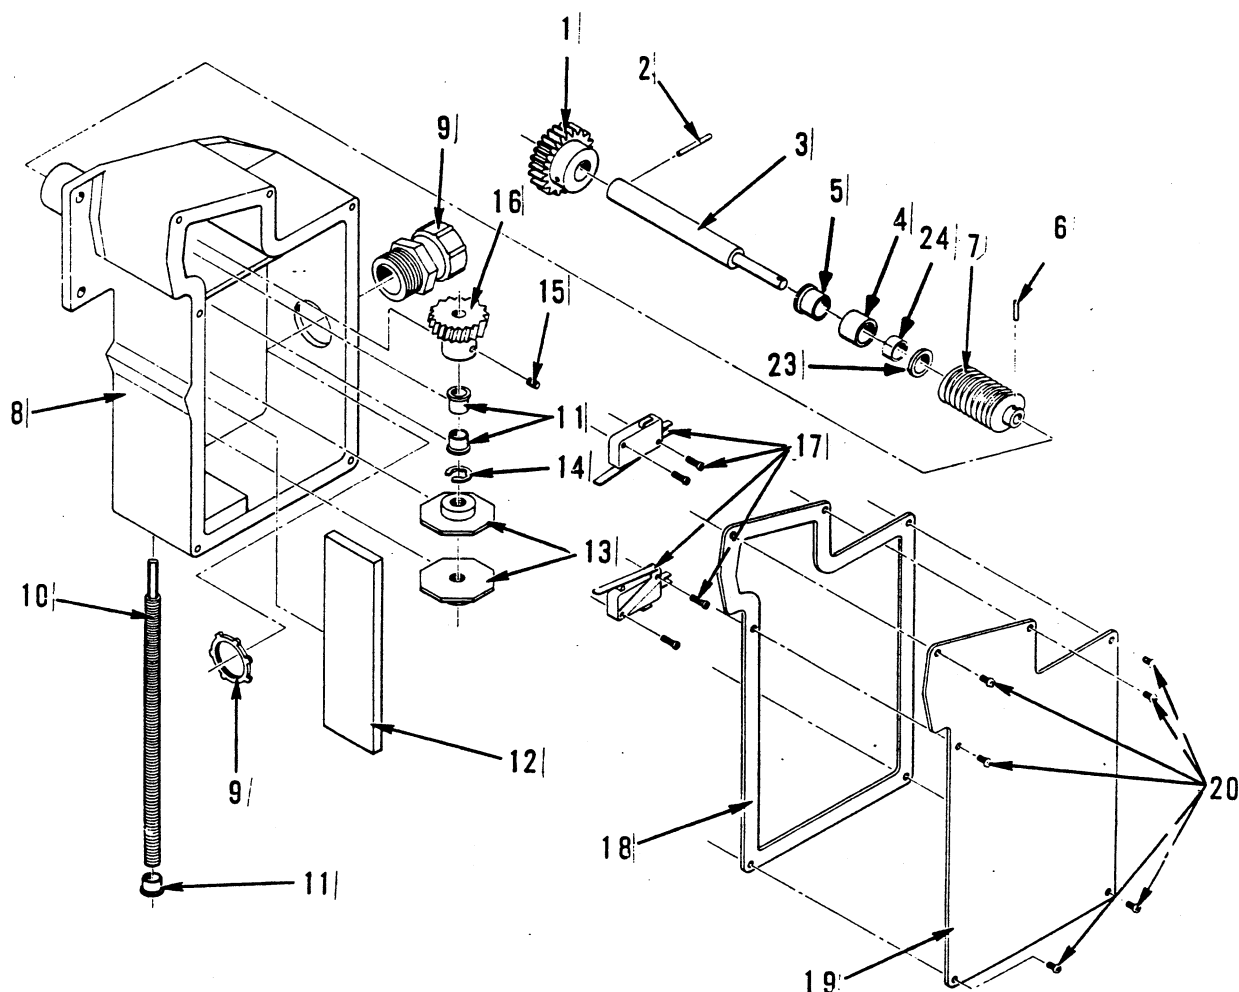

Adjustment

To adjust the limit switches or to set them at other desired levels remove the limit switch cover. Run the unit down noticing the switch toward which the nut travels. Stop the bottom block at the desired lower limit. Remove the flat bar under the traveling nuts. Move the nut nearest the switch until the switch can be heard to trip. Replace the flat bar under the traveling nuts. Repeat the above to set the upper limit switch.

YD-0251

165-908-007

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

REVISED FEBRUARY 1977

CE SERIES-D CHASSIS

SECTION K

LIMIT SWITCH ASSEMBLIES



(800) 713-0101 • www.gohispeed.com

CE Series**Traveling Nut Limit Switch Assembly**

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	6452350-00	TRAVELING NUT UPPER AND LOWER LIMIT SWITCH ASSEMBLY	1
	6452370-00	TRAVELING NUT UPPER OR LOWER LIMIT SWITCH ASSEMBLY	1
	6452360-00	TRAVELING NUT UPPER AND LOWER LIMIT SWITCH ASSEMBLY	1
	6452380-00	TRAVELING NUT UPPER OR LOWER LIMIT SWITCH ASSEMBLY	1
	6412881-00	HELICAL GEAR (Used On Assembly Number 6452350-00 And 6452370-00)	1
	6412941-00	HELICAL GEAR (Used On Assembly Number 6452360-00 And 6452380-00)	1
	0230207-00	ROLL PIN	1
2	0109744-00	SHAFT	1
3	6413361-03	SPACER	1
4	6412861-00	FLANGE BEARING	1
5	0318061-00	ROLL PIN	1
6	6412921-00	WORM GEAR (Used On Assembly Number 6452350-00 And 6452370-00)	1
7	6412931-00	WORM GEAR (Used On Assembly Number 6452360-00 And 6452380-00)	1
8	6426304-00	HOUSING	1
9	0103721-00	WATERTIGHT CONNECTOR	2
10	6412891-00	SHAFT	1
11	6412871-00	FLANGE BEARING	3
12	6412901-00	CAM RETAINER	1
13	6412911-00	CAM	2
14	6409191-00	RETAINING RING	1
15	0109562-00	SET SCREW	1
16	6412951-00	PINION	1
17	6402058-00	SWITCH AND ACTUATOR	2
18	6422173-00	GASKET	1
19	6422143-00	COVER	1
20	6400869-02	SCREW	6
21	5003839-03	WIRE TERMINAL (Not Shown)	2
22	0116783-00	WIRE (5 Feet)	1
23	0114291-00	FLAT WASHER	1
24	6453718-00	SEAL	1


When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

CE SERIES-D CHASSIS

Yale Hoisting Equipment

SECTION L

EW SERIES PUSH BUTTON ASSEMBLY FOR ALL HOISTS

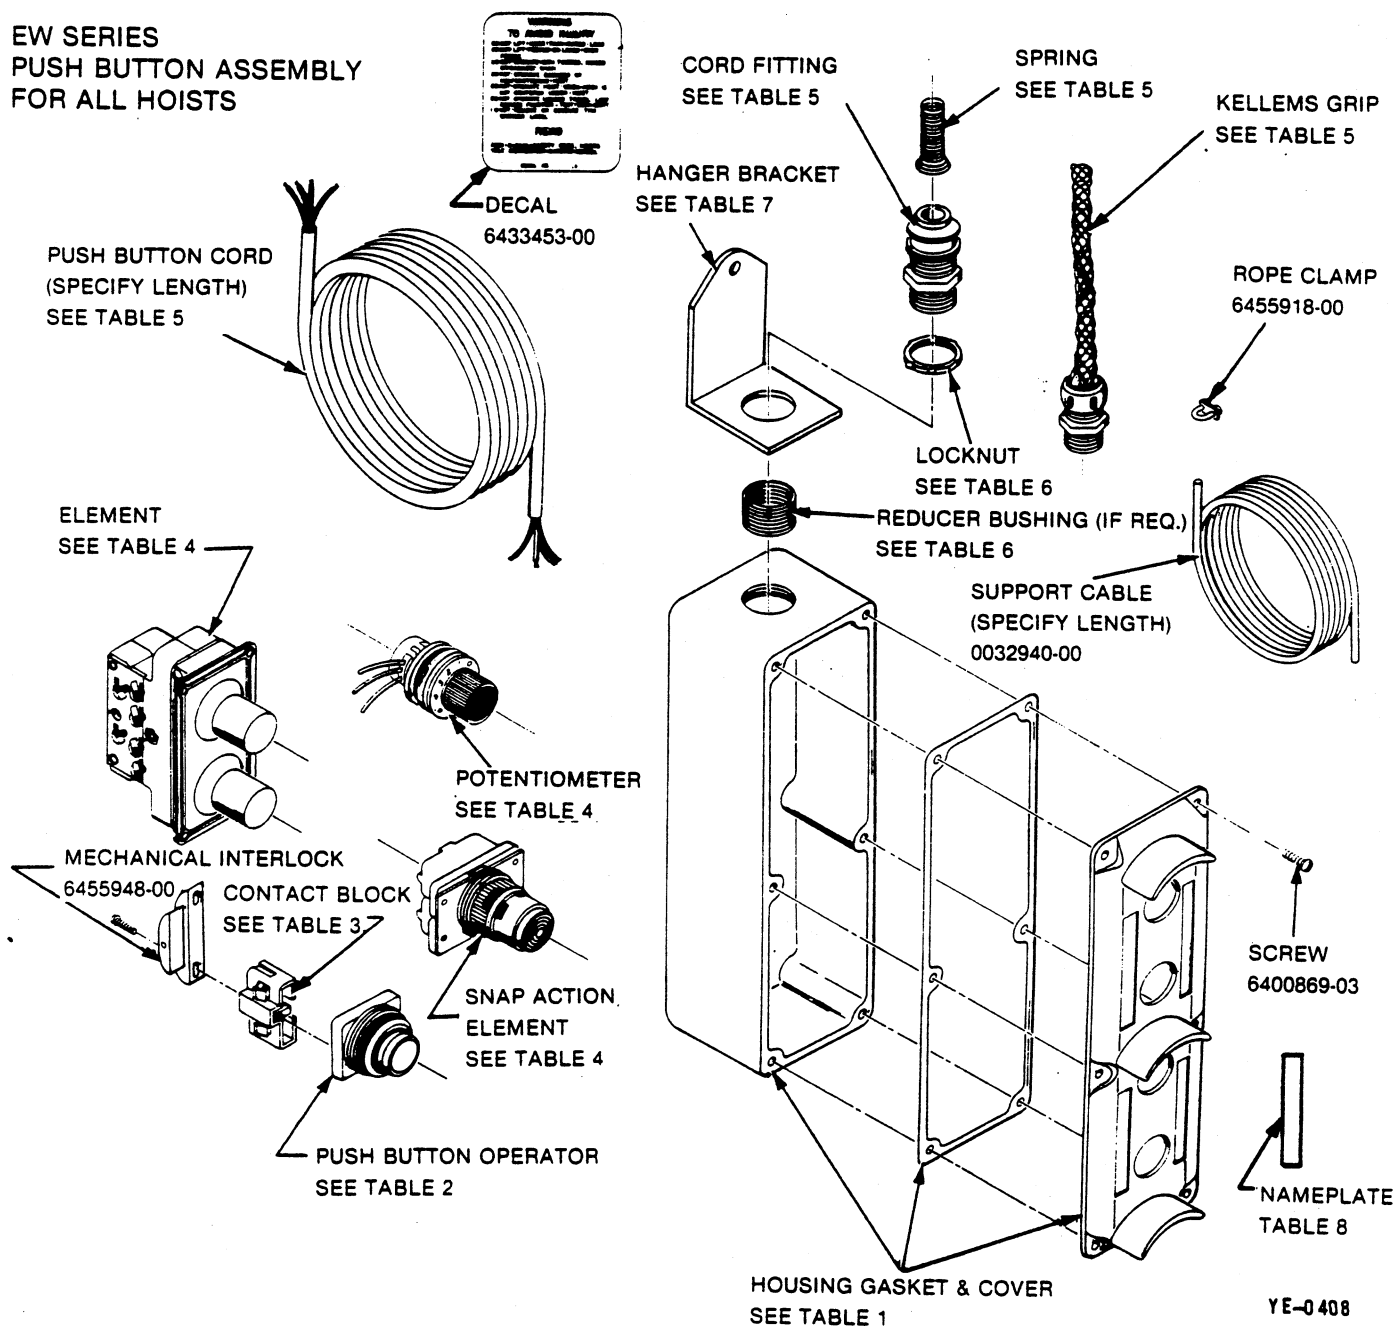

HOOK TRAVEL MUST AGREE WITH
PUSHBUTTON MARKING. TO REVERSE
ROTATION OF MOTOR INTERCHANGE
ANY TWO LINE WIRES. DO NOT
REVERSE "PUSHBUTTON" WIRES.

DECAL
6413738-00

Note: The Push Buttons
Illustrated Above May Not
Exactly Represent The Actual
Appearance Of Your Push
Button. However, It Is Typical.

YE - 0408
FORM NO. 165-909-017

When Replacement Parts Are Needed, Order Only Yale® Factory Engineered Parts

JUNE 1981

EW SERIES

EW SERIES PUSH BUTTON ASSEMBLY FOR ALL HOISTS

TABLE 1

CAST ALUMINUM ENCLOSURE

No. Of Buttons	Cover 1 In. Holes	Cover 1 7/32 IN. Hole	Housing	Gasket
2	0107253-00*	6440664-00	6440654-00	6437853-00
4	6420903-00	6430516-00	6420913-00	6423363-00
6	6426154-00	6430526-00	6426164-00	6423393-00
8	6428491-00*	6427561-00*	-	-
10	Consult Factory			
12	Consult Factory			

*Complete Enclosure - Components Not Available

TABLE 2

PUSH BUTTON OPERATOR

Type	Part Number
Extended Head (Black)	6455798-00
Extended Head (Red)	6455838-00
Ext. Head W/Full Shroud (Black)	6455718-00
Mushroom Head (Red)	6455848-00
Flush Head (Black)	6455878-00
Selector Switch (3 Position)	6450328-00
Selector Switch (2 Position)	6450338-00
Selector Switch (2 Position Key Operated)	6450318-00
Toggle Switch Operated	6458068-00
Push - Lock Operator	6463178-00

TABLE 3

CONTACT BLOCKS & ACCESSORIES

Description	Part Number
Type A Normally Open	6455788-00
Type B Normally Closed	6455778-00
Type A Normally Open, Early Make	6455768-00
Type B Normally Closed, Late Break	6455758-00
Mechanical Interlock	6455948-00
Maintained Contact Latch	6455748-00
Hole Plug	6450358-00

TABLE 4

COMPLETE ELEMENT

Description	Part Number
1 Speed Element (2 Button)	0107356-00
2 Speed Element (2 Button)	6465498-00
5 Speed Element (2 Button)	0107357-00
Stop - Start Element Momentary (2 Button)	0545407-00
Stop - Start Element Maintained (2 Button)	0599192-00
2 Speed Element (Snap Action)	0512271-00
1 Speed Element (Snap Action)	6415482-00
Potentiometer Asm. 1000 Ohm	6451821-01
Pilot Light Red 115 Volt	6455858-00

TABLE 5

PB CORD, SPRING AND KELLEMS GRIP

PB Cord 16 AWG Type SO		Cord Fitting	Spring	Kellems Grip
16 - 4	6431251-81	6401569-07	6417911-01	6430038-00
16 - 6	0116606-00	6401569-10	6417911-02	6465478-00
16 - 7	6432161-81	6401569-10	6417911-02	6465478-00
16 - 8	0116604-00	6401569-20	6417911-02	6423138-00
16 - 10	6400119-81	6401569-26	6417911-03	6439088-00
16 - 12	6400129-81	6401569-26	6417911-03	6439088-00
16 - 14	6400139-81	6401569-26	6417911-03	6435578-00
16 - 16	6400149-81	•	•	6435578-00
16 - 18	6400159-81	•	•	6435578-00
16 - 20	6400169-81	•	•	6435578-00
16 - 22	6400179-81	•	•	6435578-00

*Fittings & Springs Not Available On This Size P.B. Cord.
Use Kellems Grips.

TABLE 6

REDUCER BUSHINGS

LOCKNUT

Size Inch	Part Number	Size Inch	Part Number
3/4 To 1/2	0103811-00	1/2	0103739-00
1 To 1/2	0103812-00	3/4	0103740-00
1 To 3/4	0103813-00	1	0103741-00
1 1/4 To 3/4	0103814-00	1 1/4	0103742-00
1 1/2 To 1	0103815-00		

TABLE 7

HANGER BRACKET

Description	Part Number
Bracket For 1/2 Inch Fitting	6444884-00
Bracket For 3/4 Inch Fitting	6441674-00
Bracket For 1 Inch Fitting	6441624-01
Bracket For 1 1/4 Inch Fitting	6441624-02

TABLE 8


SELF - ADHESIVE NAME PLATES

Part Number	Marking
6456468-00	Hoist
6456478-00	Trolley
6456488-00	Bridge
6456498-00	Crane
6456508-00	Up - Down
6456518-00	FWD - REV.
6456528-00	North - South
6456538-00	East - West
6456548-00	On - Off
6456558-00	Start - Stop
6456568-00	Right - Left
6456578-00	Reset - Stop
6456588-00	In - Out
6456598-00	Power

Reversing Contactors SQUARE D

AC, TYPE R - SERIES A, B AND C, THROUGH 3 HORSE POWER

ADJUSTMENT INSTRUCTIONS-If armature solenoid is removed, it should be adjusted when reassembled by screwing armature within 13/64 (Series A) or 15/64 (Series B and C) of magnet core and locking with slotted nut to 20 in.-lbs. torque.

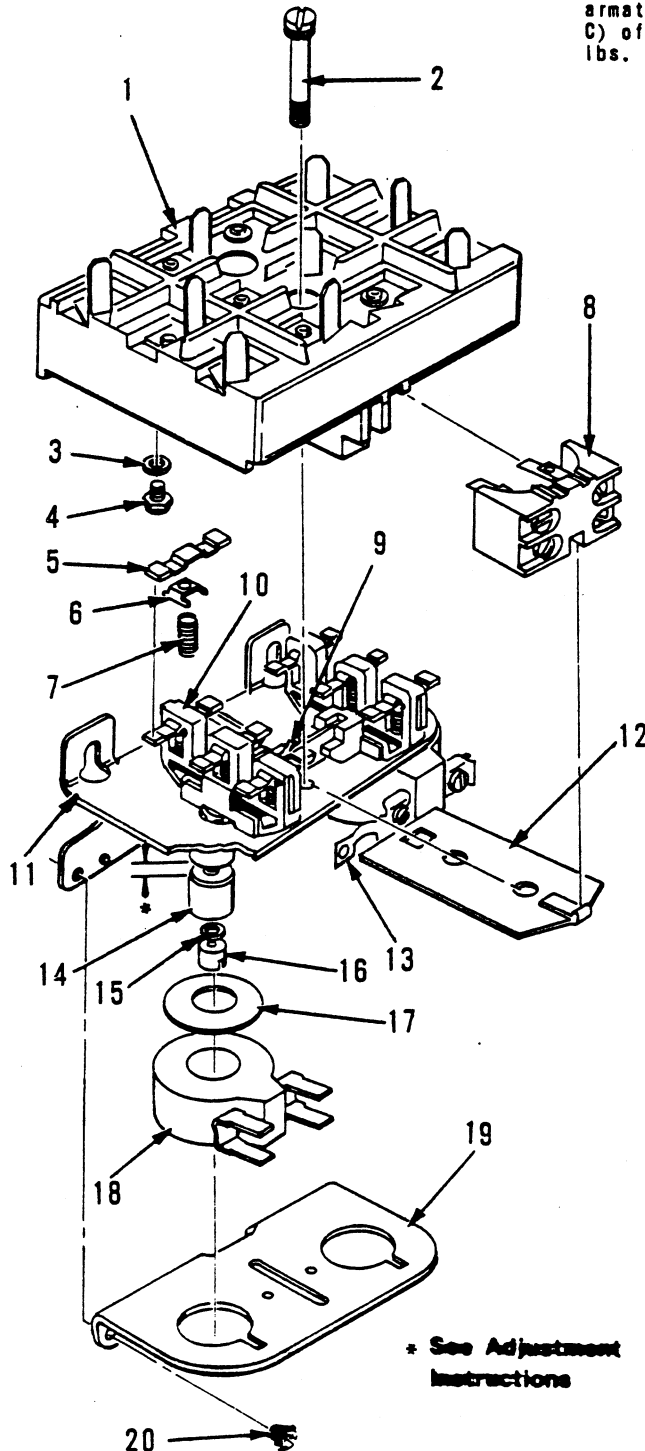

* See Adjustment Instructions

CONTACTS-To inspect the contacts, remove contact block 1. All contacts are silver alloy and are not harmed by discoloration and slight pitting. **DO NOT FILE THEM**; replace only when silver has worn thin. Movable contact finger 5 is removed by pulling straight out. To release stationary contacts 4, unscrew from underside of contact block 1.

When contacts are replaced, contact springs 6 should also be replaced.

A complete set of replacement contacts may be obtained by ordering part number 6400028-00 contact parts kit.

MAGNET COILS-To replace magnet coil 18, first disconnect coil leads. Next, remove coil jumper 13 connecting the two coils together. Remove screws 20 which release the bottom plate 19. Slide the coil from the magnet frame.

BOTH ARMATURE ASSEMBLIES MUST BE COMPLETELY DROPPED OUT WHEN THE ELECTRICAL INTERLOCK IS INSTALLED.

COMPLETE CONTACTOR WITH FAST ON TYPE TERMINALS AND MECHANICAL INTERLOCKS-WITHOUT JUMPERS

COIL VOLTAGE	HERTZ	PART NUMBER
24	50/60	6401559-01
110	50/60	6401559-02
24	25	6401559-03
440	50/60	6401559-04
230	50/60	6401559-05

IF JUMPERS AND TERMINALS ARE REQUIRED ORDER JUMPERS PART NUMBER 6436708-01 AND WIRE TERMINAL PART NUMBER 6443028-01

COMPLETE CONTACTOR WITH FAST ON TYPE TERMINALS AND MECHANICAL INTERLOCKS-WITH JUMPERS AND WIRE TERMINALS.

COIL VOLTAGE	HERTZ	PART NUMBER
24	50/60	5037490-00
110	50/60	5037500-00

YC-0403

165-909-008

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

REVISED APRIL 1973

REVERSING CONTACTOR

SECTION L

CONTROLS



(800) 713-0101 • www.gohispeed.com

Reversing Contactors SQUARE D

AC, TYPE R - SERIES A, B AND C, THROUGH 3 HORSE POWER

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	6457328-01	CONTACT BLOCK ONLY (With Slip On Connectors)	*1
2	6409218-00	SCREW, 10-24 x 1 1/4	2
3	0150254-00	LOCKWASHER	*12
4	6400038-00	STATIONARY CONTACT SCREW	*12
5	6400048-00	MOVABLE CONTACT	*6
6	6400058-00	RETAINER	*6
7	6409208-00	CONTACT SPRING	6
8	6446608-01	ELECTRICAL INTERLOCK N.O.	1
	6446608-02	ELECTRICAL INTERLOCK N.C.	1
9	6409248-00	MECHANICAL INTERLOCK	1
10	6409238-00	CONTACT CARRIER	**2
11	6409228-00	BASE ASSEMBLY	1
12	6409308-00	INTERLOCK LATCH	1
13	6409298-00	COIL JUMPER	1
14	6409258-00	ARMATURE ASSEMBLY	***2
15	0150256-00	LOCKWASHER	2
16	6409268-00	SLOTTED NUT, 10-32	2
17	6409278-00	WASHER	2
18	SEE TABLE	MAGNETIC COIL	2
19	6409318-00	BOTTOM PLATE	1
20	6409328-00	SCREW ASSEMBLY, 8-32 x 1/4	2
21	6457328-02	SLIP ON CONNECTOR	4
22	6457328-03	CONTACT BLOCK ASSEMBLY (Includes Items 1,3 and 4)	1

* Included In Parts Kit 6400028-00.

** Both The Contact Block Item 1 And Contact Contact Carrier Item 10 Must Be Ordered When Replacing Either Of These Items.

*** When Replacing Armature Assembly Item 14, A Slotted Nut Item 16 And Lockwasher Item 15 Must Be Ordered.

MAGNETIC COIL TABLE

HERTZ	24 VOLT	115 VOLT	230 VOLT	460 VOLT	575 VOLT
60	5030618-00	5030628-00	5030638-00	5030648-00	5030658-00
50	5030618-00	5030628-00	5030638-00	5030648-00	5030658-00
25	5030668-00	5030638-00	5030678-00		

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

REVERSING CONTACTOR

REVISED APRIL 1973





Yale

Reversing Contactor, Size 1

SECTION L

CONTROLS

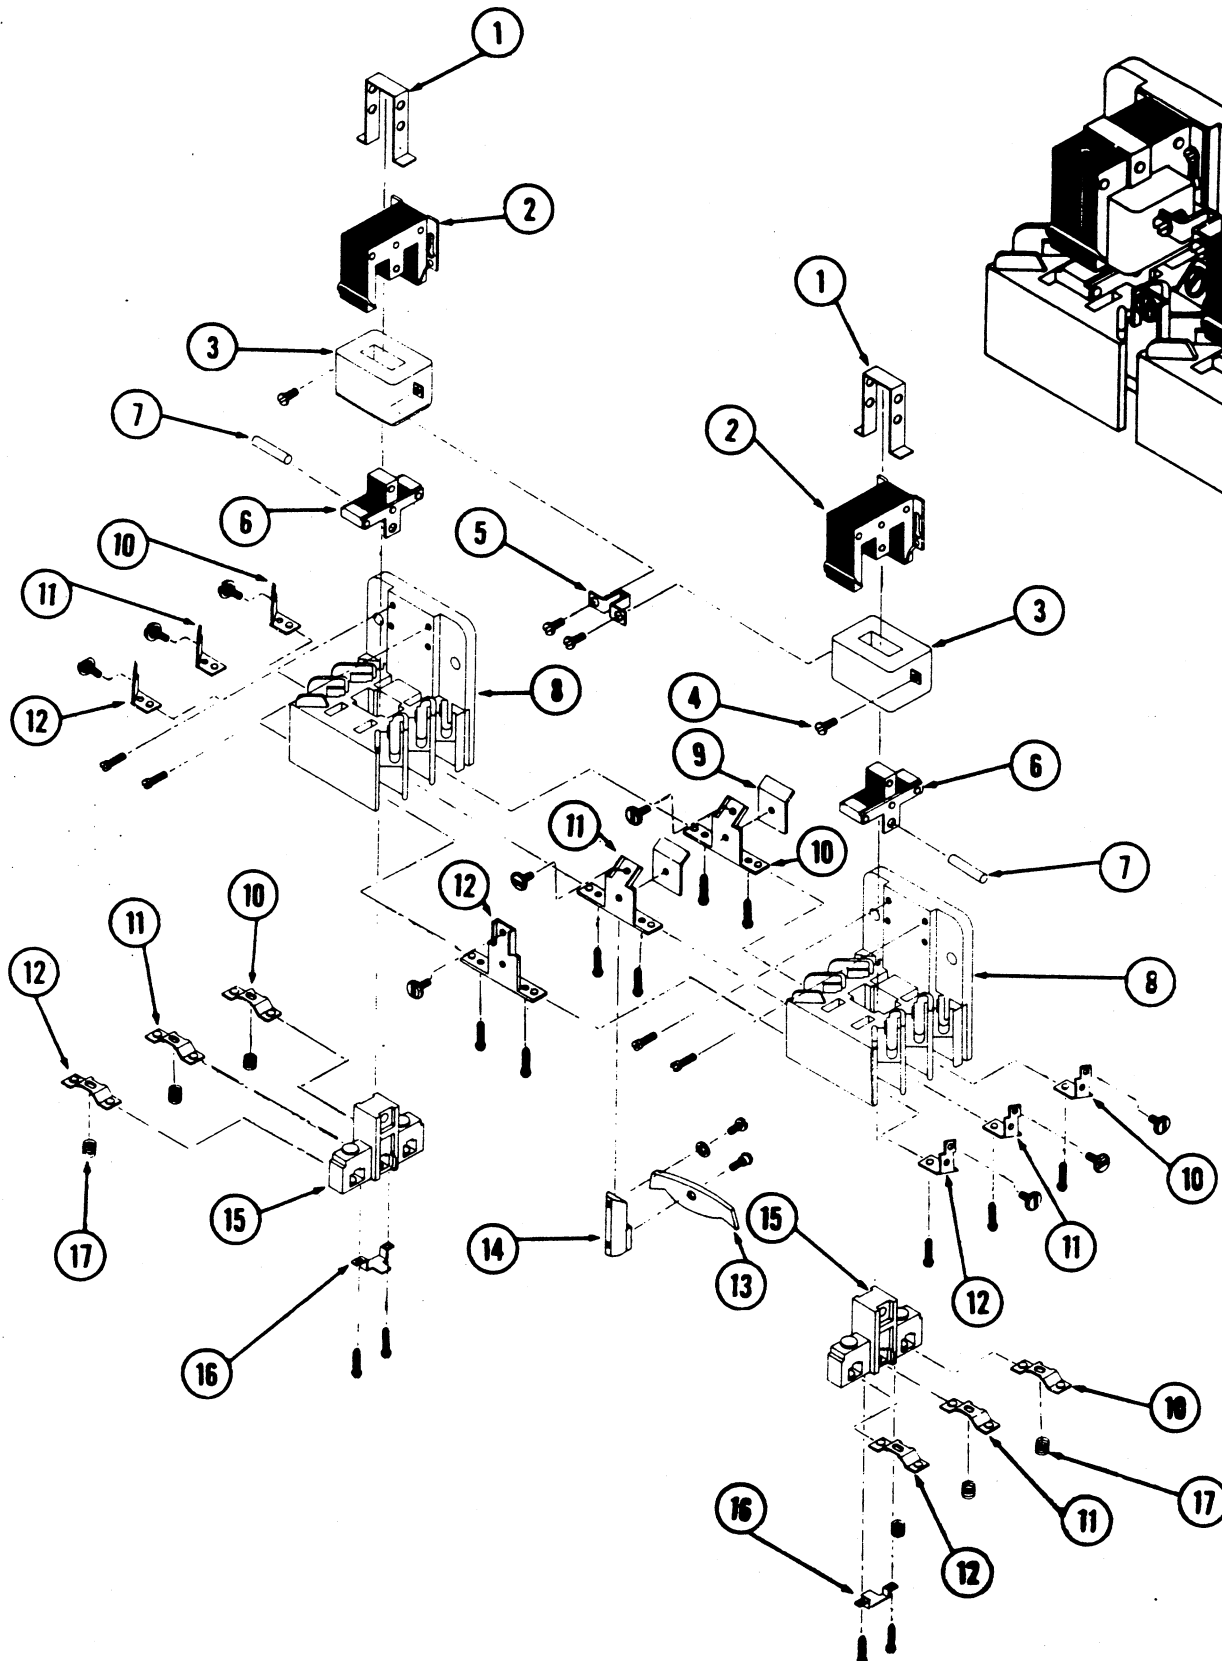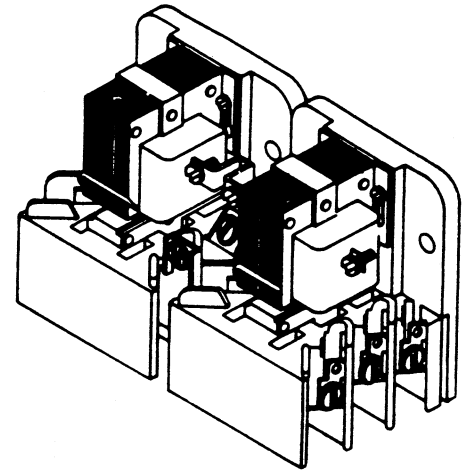

YA-0317
165-909-009

When Replacement Parts Are Needed, Order Only YALE[®] Factory Engineered Parts

AUGUST 1972

REVERSING CONTACTORS



Reversing Contactors, Size 1

COMPLETE SWITCH WITH INTERLOCKS

PILOT VOLTS	REV. SWITCH	2 SPD. SWITCH
24V 60 HZ	6428010-00	6428060-00
110V 60 HZ	6428020-00	6428070-00
230V 60 HZ	6428030-00	6428080-00
460V 60 HZ	6428040-00	6428090-00
575V 60 HZ	6428050-00	6428100-00
24V 25 HZ	6429070-00	6429120-00
110V 25 HZ	6429080-00	6429130-00
230V 25 HZ	6429090-00	6429140-00
460V 25 HZ	6429100-00	6429150-00
575V 25 HZ	6429110-00	6429160-00

COMPLETE SWITCH WITHOUT INTERLOCKS

PILOT VOLTS	REV. SWITCH	2 SPD. SW.
24V 60 HZ	6400219-01	6400219-06
110V 60 HZ	6400219-02	6400219-07
230V 60 HZ	6400219-03	6400219-08
460V 60 HZ	6400219-04	6400219-09
575V 60 HZ	6400219-05	6400219-10
24V 25 HZ		6400219-19
110V 25 HZ	6400219-11	6400219-15
230V 25 HZ	6400219-12	6400219-16
460V 25 HZ	6400219-13	6400219-17
575V 25 HZ	6400219-14	6400219-18

ITEM	PART NUMBER	DESCRIPTION	QUANTITY
1	6417518-06	COIL RETAINER.....	*2
2	6417518-04	MAGNET.....	**2
3	SEE TABLE	MAGNET COIL.....	*2
4		SCREWS.....	4
5		METAL JUMPER.....	1
6	6417518-05	ARMATURE ASSY.....	**2
7	6417518-03	PUSHER PIN.....	**2
8	6417518-08	CONTACT BLOCK.....	2
9		PAPER INSULATOR.....	2
10	6417518-12	CONTACT PARTS KIT.....	*** 1
11	6417518-11	" " ".....	*** 1
12	6417518-10	" " ".....	*** 1
13	6417518-01	INTERLOCK BAR.....	1
14	6417518-02	INTERLOCK BAR SUPPORT.....	1
15	6417518-07	CROSS ARM.....	2
16		INTERLOCK STOP.....	2
17		SPRINGS (INCLUDED WITH ITEMS 10, 11, 12).....	6

*WHEN REPLACING MAGNETIC COIL THE COIL RETAINER, ITEM 1, MUST BE ORDERED.

** THE ARMATURE, ITEM 6, MAGNET, ITEM 2, AND PUSHER PIN, ITEM 7, MUST BE ORDERED AS A UNIT WHEN REPLACING.

*** 6406188-00 PARTS KIT (CONSISTS OF ITEMS 10, 11, AND 12.

MAGNETIC COIL TABLE

FREQUENCY	24 VOLTS	115 VOLTS	230 VOLTS	460 VOLTS	575 VOLTS
25 HZ.	6417518-21	6417518-18	6417518-19	6417518-20	6417518-22
50 HZ.	6417518-13	6417518-14	6417518-15	6417518-16	6417518-17
60 HZ.	6417518-13	6417518-14	6417518-15	6417518-16	6417518-17


When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts




SECTION L

CONTROLS

Transformers

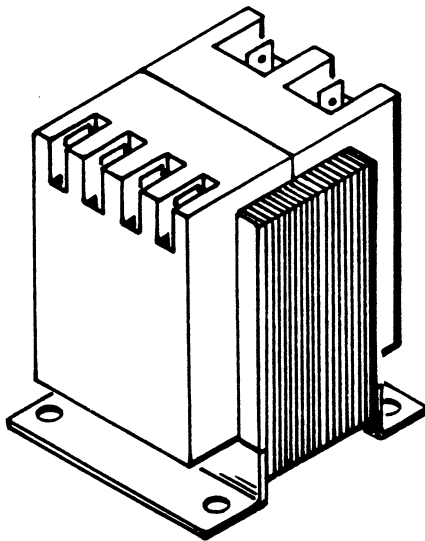

GROUP A

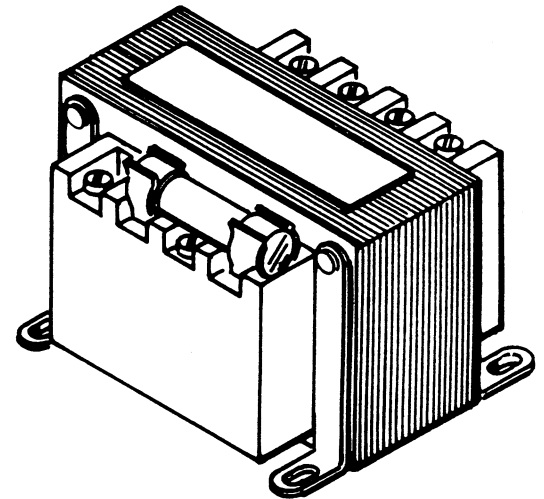

GROUP B

VA	PRIMARY VOLTS	SECONDARY VOLTS	HERTZ	PART NUMBER
25	115/230	24	50/60	6437393-01
	230/460	24	50/60	6437393-02
	115/230	110	50/60	6437393-03
	230/460	110	50/60	6437393-04
	200	24	50/60	6437393-05
	200	110	50/60	6437393-06
	575	24	50/60	6437393-07
	575	110	50/60	6437393-08

GROUP B (Including Fuse)

50	200	115	50/60	6437373-01
	230/460	115	50/60	6437373-02
	575	115	50/60	6437373-03
	200	24	50/60	6437373-04
	230/460	24	50/60	6437373-05
	575	24	50/60	6437373-06
150	200	115	50/60	6437373-07
	230/460	115	50/60	6437373-08
	575	115	50/60	6437373-09
	200	24	50/60	6437373-10
	230/460	24	50/60	6437373-11
	575	24	50/60	6437373-12

GROUP A Replaces Transformer Series 6424213.

GROUP B Replaces Transformer Series 5003119.

YA-0383

165-303-006

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

REVISED APRIL 1973


TRANSFORMERS



SECTION L

CONTROLS

Control Box

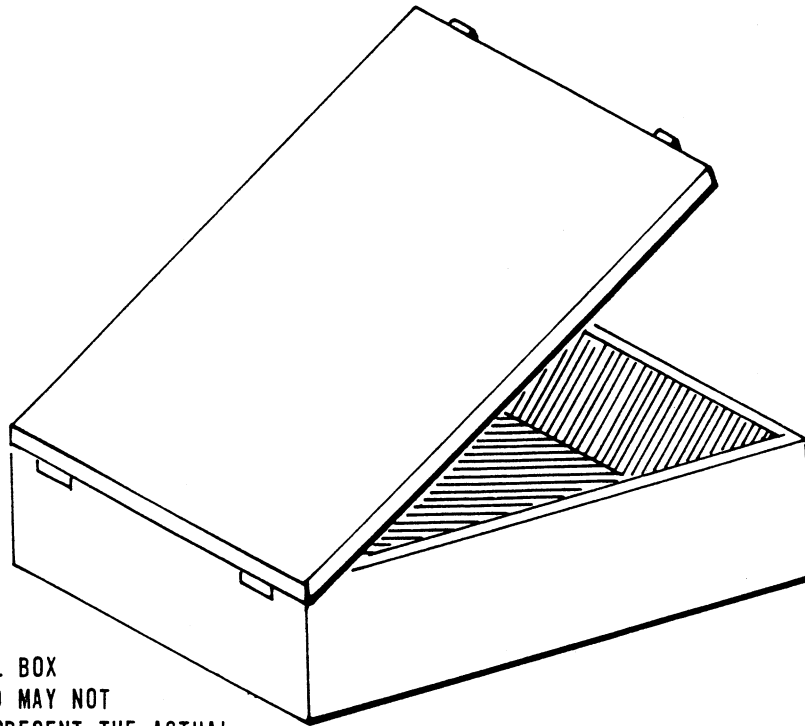

NOTE: THE CONTROL BOX ILLUSTRATED MAY NOT EXACTLY REPRESENT THE ACTUAL APPEARANCE OF YOUR CONTROL BOX. HOWEVER, IT IS TYPICAL.

YA-0269

CE Series

ITEM NUMBER	PART NUMBER	DESCRIPTION	QUANTITY
Use Item Checked			
☐ 1	0113880-00	CONTROL BOX.....	1
☐ 2	5000646-00	CONTROL BOX.....	1
☐ 3	5017306-00	CONTROL BOX.....	1
☐ 4	5019816-00	CONTROL BOX.....	1
☐ 5	5019826-00	CONTROL BOX.....	1
☐ 6	5019836-00	CONTROL BOX.....	1
☐ 7	5027026-00	CONTROL BOX.....	1
☐ 8	6400426-00	CONTROL BOX.....	1
☐ 9	_____	CONTROL BOX.....	1


TT Series

ITEM NUMBER	PART NUMBER	DESCRIPTION	QUANTITY
Use Item Checked			
☐ 1	6441846-00	CONTROL BOX.....	1
☐ 2	0542518-00	CONTROL BOX WITH 0542563-00 ADAPTER.....	1
☐ 3	_____	CONTROL BOX.....	1

1EE-909-001

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

Motors

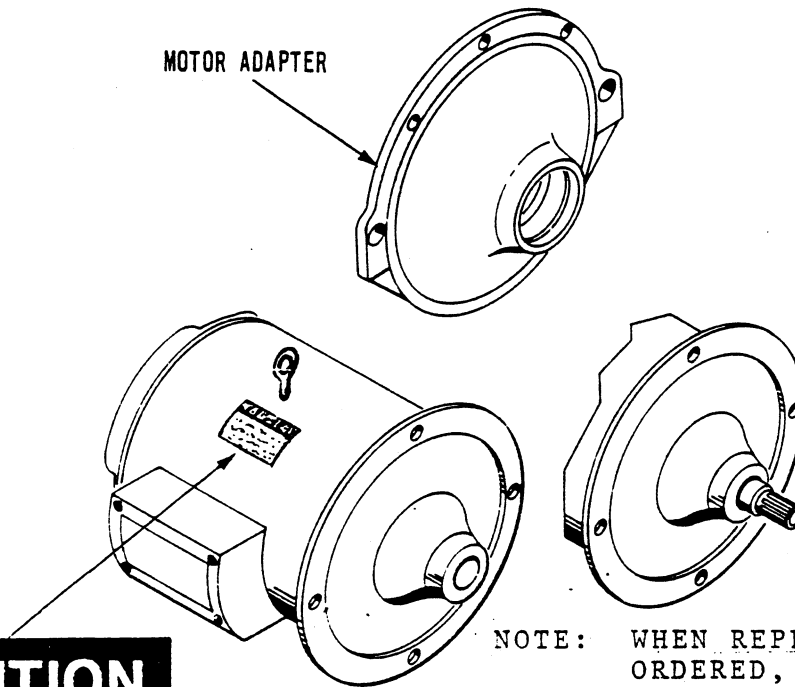

CAUTION

EYEBOLTS FOR LIFTING WEIGHT OF MOTOR ONLY. TO AVOID SERIOUS INJURY, DO NOT USE IF MOTOR IS ATTACHED TO OTHER EQUIPMENT.

DECAL NO. 642805100

NOTE: WHEN REPLACEMENT MOTOR IS ORDERED, ALSO ORDER (1) CAUTION DECAL 642805100

YA-0270

THE MOTOR ILLUSTRATED ABOVE MAY NOT EXACTLY REPRESENT THE ACTUAL APPEARANCE OF THE MOTOR. HOWEVER, IT IS TYPICAL

IMPORTANT:

When Ordering Motor Parts it is imperative that complete motor name plate reading and serial number of hoist be furnished.

Hoist Serial Number _____


MOTOR NUMBER _____

MOTOR ADAPTER

CHASSIS	MOTOR FRAME	CAST PART NUMBER	FABRICATED PART NUMBER
B	56	6421956-00	N/A
B	140-210	6421966-00	0656373-00
C	140-210	6442436-00	N/A
C	250	6409557-00	6442456-00
D	140-210	6409547-00	6409567-00
D	250-280	6409537-00	6409527-00
E	140-210	6400137-02	N/A
E	250-280	6400137-01	0658331-00
E	320	6400147-00	5000396-00

CE Series 2 PART SINGLE Bottom Block Assembly

ASSEMBLIES 0500878-00
6407040-00

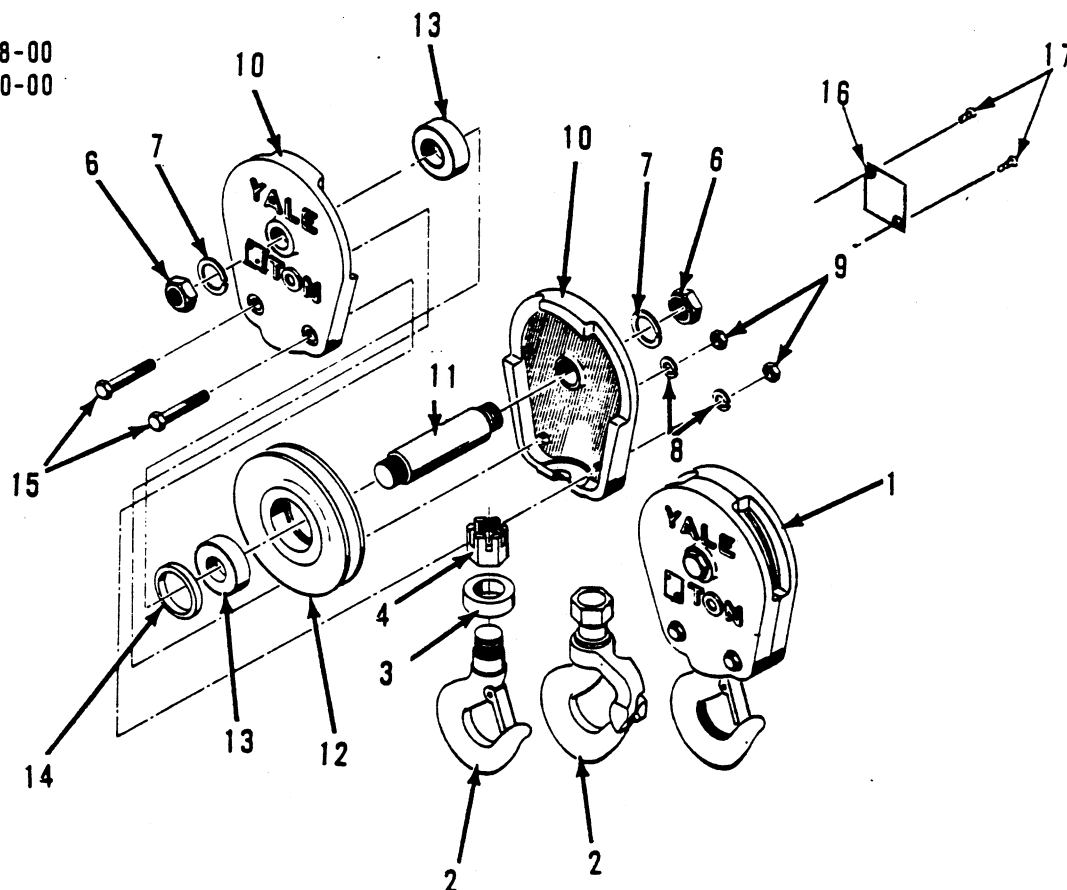

NOTE: When Ordering Repair Parts For Spark Resistant Bottom Blocks, Always Reference The Assembly Number Listed Below, Give Part Number And Quantity Required.

SPARK RESISTANT BOTTOM BLOCK ASSEMBLY _____

REEVING	MODEL	CAP	ROPE SIZE	ASSEMBLY NBR
S2	PD & PE	5 TON	9/16"	0500878-00
S2	PD	5 TON	1/2"	6407040-00

YD-0338

195-311-313

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

REVISED MARCH 1977

CE SERIES



CE Series Bottom Block Assembly

* 0500878-00 5 TON PARTS LISTING

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	0500878-00	BOTTOM BLOCK ASSEMBLY (Includes Items 2 Through 18) BOTTOM BLOCK ASSEMBLY WITH BULLARD HOOK (Includes Items 2 Through 17)	1
2	6479080-00	HOOK AND LATCH ASSEMBLY	1
	6447694-00	BULLARD BURNHAM HOOK ASSEMBLY	1
3	0334120-00	HOOK BEARING	1
4	6401379-03	SLOTTED NUT	1
5	0616475-00	ROLL PIN	1
6	0149720-00	HEX NUT FOR SHAFT	2
7	0150266-00	WASHER	2
8	0150376-00	LOCKWASHER	2
9	0106647-00	HEX NUT	2
10	0666656-00	BLOCK HALF	2
11	0500865-00	SHAFT	1
12	0109930-00	SHEAVE	1
13	0100822-00	BEARING	1
14	0116322-00	SPACER	1
15	0622399-00	CAP SCREW	2
16	5000381-00	NUMERAL 5	2
17	0149896-00	DRIVE SCREW	4
18	0669406-00	LATCH KIT (Includes Latch, Spring And Rivet)	1

* 6407040-00 5 TON PARTS LISTING

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	6407040-00	BOTTOM BLOCK ASSEMBLY (Includes Items 2 Through 18) BOTTOM BLOCK ASSEMBLY WITH BULLARD HOOK (Includes Items 2 Through 17)	1
2	6479080-00	HOOK AND LATCH ASSEMBLY	1
	6447694-00	BULLARD BURNHAM HOOK ASSEMBLY	1
3	0334120-00	HOOK BEARING	1
4	6401379-03	SLOTTED NUT	1
5	0616475-00	ROLL PIN	1
6	0149720-00	HEX NUT FOR SHAFT	2
7	0150266-00	WASHER	2
8	0150376-00	LOCKWASHER	2
9	0106647-00	HEX NUT	2
10	0666656-00	BLOCK HALF	2
11	0500865-00	SHAFT	1
12	6401593-00	SHEAVE	1
13	0100822-00	BEARING	2
14	0116322-00	SPACER	1
15	0576997-00	CAP SCREW	2
16	5000381-00	NUMERAL 5	2
17	0149896-00	DRIVE SCREW	4
18	0669406-00	LATCH KIT (Includes Latch, Spring And Rivet)	1

* Use Parts Group Checked And State Quantity Required.


When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

CE SERIES

REVISED MARCH 1977

CE Series FOR 4 AND 5 TON LOW HEADROOM CE SERIES HOISTS

Bottom Block Assembly 2 PART DOUBLE AND 4 PART SINGLE

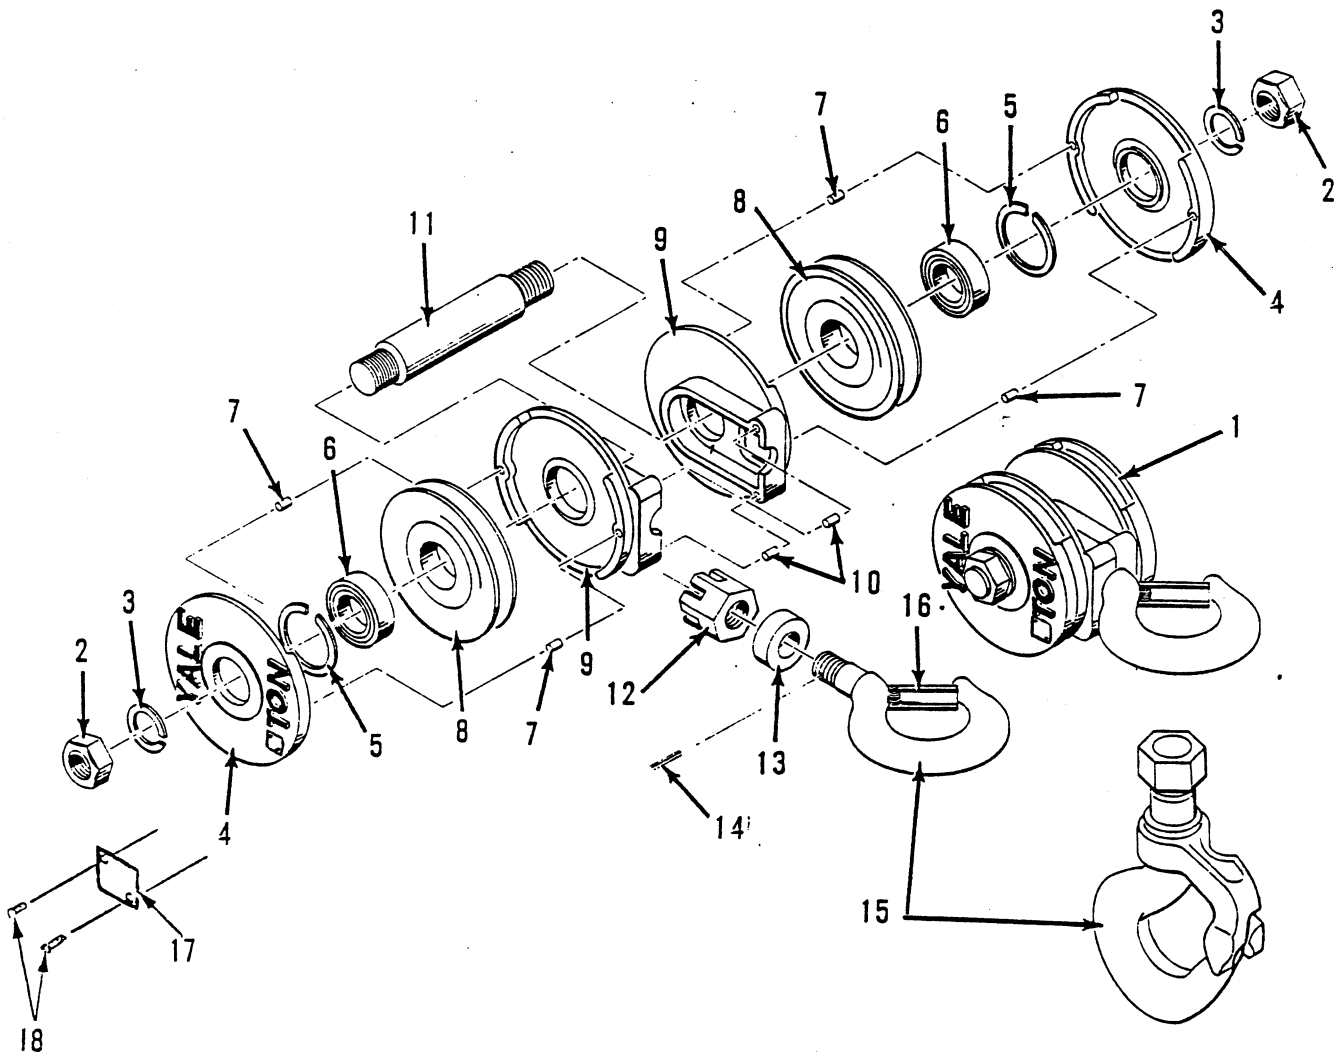

NOTE: When Ordering Repair Parts For Spark Resistant Bottom Blocks, Always Reference The Assembly Number Listed Below, Give Part Number And Quantity Required.

SPARK RESISTANT BOTTOM BLOCK ASSEMBLY _____

REEVING	MODEL	CAP	ROPE SIZE	ASSEMBLY NBR
D2	LD & LE	5 TON	7/16"	0334116-00
S4	XC5	5 TON	3/8	6404470-00
D2	LD5	5 TON	3/8	6404470-00

YE-0334

165-911-010

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

SECTION N

BOTTOM BLOCKS



Yale

CE Series FOR 4 AND 5 TON LOW HEADROOM CE SERIES HOISTS

Bottom Block Assembly 2 PART DOUBLE AND 4 PART SINGLE

☐ * 4 TON PARTS LISTING

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	0334115-00	BOTTOM BLOCK ASSEMBLY (Includes Items 2 Through 18)	1
		BOTTOM BLOCK ASSEMBLY, WITH BULLARD HOOK (Includes Items 2 Through 15 Plus 17 And 18)	1
2	0149720-00	JAM NUT	2
3	0150376-00	LOCKWASHER	2
4	0666657-00	BOTTOM BLOCK COVER	2
5	5003439-15	RETAINING RING	2
6	0100822-00	BALL BEARING	2
7	0116531-00	DOWEL PIN	4
8	0109913-00	SHEAVE	2
9	0332481-00	BOTTOM BLOCK CENTER	2
10	0116531-00	DOWEL PIN	2
11	0334121-00	SHAFT	1
12	6401379-03	SLOTTED NUT	1
13	0334120-00	HOOK BEARING	1
14	0616475-00	ROLL PIN	1
15	6479080-00	HOOK AND LATCH ASSEMBLY	1
		BULLARD HOOK AND LATCH ASSEMBLY	1
16	0669406-00	LATCH KIT	1
17	5000371-00	NUMERAL 4	2
18	0149896-00	DRIVE SCREW	4

☐ * 5 TON PARTS LISTING

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	0334116-00	BOTTOM BLOCK ASSEMBLY (Includes Items 2 Through 18)	1
	0644833-00	BOTTOM BLOCK ASSEMBLY, WITH BULLARD HOOK (Includes Items 2 Through 15 Plus 17 And 18)	1
2	0149720-00	JAM NUT-1 1/2"-6	2
3	0150376-00	LOCKWASHER-1 1/2"	2
4	0666657-00	BOTTOM BLOCK COVER	2
5	5003439-15	RETAINING RING	2
6	0100822-00	BALL BEARING	2
7	0116531-00	DOWEL PIN	4
8	0109913-00	SHEAVE	2
9	0332481-00	BOTTOM BLOCK CENTER	2
10	0116531-00	DOWEL PIN	2
11	0334121-00	SHAFT	1
12	6401379-03	SLOTTED NUT 1 1/4"-12	1
13	0334120-00	HOOK BEARING	1
14	0616475-00	ROLL PIN	1
15	6479080-00	HOOK AND LATCH ASSEMBLY	1
	6447694-00	BULLARD HOOK AND LATCH ASSEMBLY	1
16	0669406-00	LATCH KIT	1
17	5000381-00	NUMERAL 5	2
18	0149896-00	DRIVE SCREW	4

☐ * 5 TON PARTS LISTING

ITEM NUMBER	PART NUMBER	DESCRIPTION	QTY
1	6404470-00	BOTTOM BLOCK ASSEMBLY (Includes Items 2 Through 18)	1
	6454000-00	BOTTOM BLOCK ASSEMBLY, WITH BULLARD HOOK (Includes Items 2 Through 15 Plus 17 And 18)	1
2	0149720-00	JAM NUT 1 1/2"-6	2
3	0150376-00	LOCKWASHER 1 1/2"	2
4	0666657-00	BOTTOM BLOCK COVER	2
5	5003439-15	RETAINING RING	2
6	0100822-00	BALL BEARING	2
7	0116531-00	DOWEL PIN	4
8	6401373-00	SHEAVE	2
9	0332481-00	BOTTOM BLOCK CENTER	2
10	0116531-00	DOWEL PIN	2
11	0334121-00	SHAFT	1
12	6401379-03	SLOTTED NUT 1 1/4"-12	1
13	0334120-00	HOOK BEARING	1
14	0616475-00	ROLL PIN	1
15	6479080-00	HOOK AND LATCH ASSEMBLY	1
	6447694-00	BULLARD HOOK AND LATCH ASSEMBLY	1
16	0669406-00	LATCH KIT	1
17	5000381-00	NUMERAL 5	2
18	0149896-00	DRIVE SCREWS	4

* Use Parts Group Checked. ☒

When Replacement Parts Are Needed, Order Only YALE® Factory Engineered Parts

POWERED HOIST INSPECTION CHECK LIST

SEE PREVENTIVE MAINTENANCE SECTION OF INSTRUCTION MANUAL FOR DETAILS.

CHECK ONLY COMPONENTS APPLICABLE FOR SPECIFIC EQUIPMENT AND INSPECTION TYPE.

HOIST MODEL _____

HOIST S/N _____

HOOKS		CABLE		CHAINS	
YES	NO	YES	NO	YES	NO
HARDWARE LOOSE	☐	☐	☐	BINDING	☐
CRACKS	☐	☐	☐	CRACKED	☐
EXCESSIVE WEAR	☐	☐	☐	TWISTED	☐
BENT	☐	☐	☐	DISTORTED	☐
SPREADING	☐	☐	☐	CORRODED	☐
FREELY ROTATE	☐	☐	☐	EXCESSIVE WEAR	☐
LATCH DAMAGED	☐	☐	☐	WORN CHAIN GUIDES	☐
				POCKET WHEELS WORN	☐
BRAKES		WIRING		DRUM & SHEAVES	
MOTOR BRAKE WORN OR NOT OPERATING	☐	LOOSE CONNECTIONS	☐	WORN EXCESSIVELY	☐
EXCESSIVE LOADBRAKE DRIFT OR BLACKLASH	☐	FRAYED	☐	CRACKED OR SCORED	☐
EXCESSIVE DISC WEAR	☐	DAMAGED	☐		
		PROPER GROUNDING	☐		
LIMIT SWITCHES		LOAD LIMITING DEVICE		COLLECTORS	
OPERATING PROPERLY	☐	OPERATING PROPERLY	☐	BINDING	☐
				EXCESSIVE WEAR	☐
HOUSING		OPERATION CONTROLS		LUBRICATION	
DISTORTED	☐	CONTACTOR PITTING	☐	ALL POINTS LUBRICATED AS GIVEN IN LUB CHART	☐
CRACKS	☐	OPERATING PROPERLY	☐	OIL DARK OR LOW	☐
LOOSE HARDWARE	☐	DAMAGED PUSH BUTTON	☐	OIL LEAKS	☐
BEARING NOISE	☐	HOUSING	☐		
SUPPORTING STRUCTURE		AIR SYSTEM		WARNING LABELS	
CONTINUED ABILITY TO SUPPORT IMPOSED LOADS	☐	LEAKING	☐	MISSING	☐
WORN OR DISTORTED TROLLEY PARTS	☐	LOOSE CONNECTIONS	☐	ILLEGIBLE	☐
		BROKEN CONTROL PENDANT	☐		

NOTE: IF ANY () IS CHECKED DO NOT OPERATE THE HOIST UNTIL REPAIRS HAVE BEEN MADE.

REMARKS AND REPAIRS MADE _____

SIGNATURE _____ DATE _____ CLOCK NUMBER _____

DATE 3/79 FORM 165-905-101

POWERED HOIST INSPECTION CHECK LIST

SEE PREVENTIVE MAINTENANCE SECTION OF INSTRUCTION MANUAL FOR DETAILS.

CHECK ONLY COMPONENTS APPLICABLE FOR SPECIFIC EQUIPMENT AND INSPECTION TYPE.

HOIST MODEL _____

HOIST S/N _____

HOOKS	YES	NO	CABLE	YES	NO	CHAINS	YES	NO
HARDWARE LOOSE	☐	☐	BROKEN WIRES AT ENDS	☐	☐	BINDING	☐	☐
CRACKS	☐	☐	BROKEN WIRES EXCESSIVE	☐	☐	CRACKED	☐	☐
EXCESSIVE WEAR	☐	☐	EXCESSIVE WEAR	☐	☐	TWISTED	☐	☐
BENT	☐	☐	KINKED OR DISTORTED	☐	☐	DISTORTED	☐	☐
SPREADING	☐	☐	CORROSION	☐	☐	CORRODED	☐	☐
FREELY ROTATE	☐	☐	HEAT DAMAGED	☐	☐	EXCESSIVE WEAR	☐	☐
LATCH DAMAGED	☐	☐				WORN CHAIN GUIDES	☐	☐
						POCKET WHEELS WORN	☐	☐
BRAKES	YES	NO	WIRING	YES	NO	DRUM & SHEAVES	YES	NO
MOTOR BRAKE WORN OR NOT OPERATING	☐	☐	LOOSE CONNECTIONS	☐	☐	WORN EXCESSIVELY	☐	☐
EXCESSIVE LOADBRAKE DRIFT OR BLACKLASH	☐	☐	FRAYED	☐	☐	CRACKED OR SCORED	☐	☐
EXCESSIVE DISC WEAR	☐	☐	DAMAGED	☐	☐			
			PROPER GROUNDING	☐	☐			
LIMIT SWITCHES	YES	NO	LOAD LIMITING DEVICE	YES	NO	COLLECTORS	YES	NO
OPERATING PROPERLY	☐	☐	OPERATING PROPERLY	☐	☐	BINDING	☐	☐
						EXCESSIVE WEAR	☐	☐
HOUSING	YES	NO	OPERATION CONTROLS	YES	NO	LUBRICATION	YES	NO
DISTORTED	☐	☐	CONTACTOR PITTING	☐	☐	ALL POINTS LUBRICATED AS GIVEN IN LUB CHART	☐	☐
CRACKS	☐	☐	OPERATING PROPERLY	☐	☐	OIL DARK OR LOW	☐	☐
LOOSE HARDWARE	☐	☐	DAMAGED PUSH BUTTON	☐	☐	OIL LEAKS	☐	☐
BEARING NOISE	☐	☐	HOUSING	☐	☐			
SUPPORTING STRUCTURE	YES	NO	AIR SYSTEM	YES	NO	WARNING LABELS	YES	NO
CONTINUED ABILITY TO SUPPORT IMPOSED LOADS	☐	☐	LEAKING	☐	☐	MISSING	☐	☐
WORN OR DISTORTED TROLLEY PARTS	☐	☐	LOOSE CONNECTIONS	☐	☐	ILLEGIBLE	☐	☐
			BROKEN CONTROL PENDANT	☐	☐			

NOTE: IF ANY () IS CHECKED DO NOT OPERATE THE HOIST UNTIL REPAIRS HAVE BEEN MADE.

REMARKS AND REPAIRS MADE _____

SIGNATURE _____ DATE _____ CLOCK NUMBER _____

DATE 3/79 FORM 165-805-101

Yale®

HOISTS

WARRANTY

Every hoist is thoroughly inspected and tested prior to shipment from the factory. Should any problems develop, return the complete hoist prepaid to your nearest Yale Hoists Authorized Warranty Repair Station.

This warranty does not apply where: (1) deterioration is caused by normal wear, abuse, improper or inadequate power supply, eccentric or side loading, overloading, chemical or abrasive actions, improper maintenance or excessive heat; (2) problems resulted from repairs, modifications or

alterations made by persons other than factory or Yale Hoists personnel; (3) the hoist has been abused or damaged as a result of an accident; (4) repair parts or accessories other than those supplied by Yale Hoists are used on the hoist. Equipment and accessories not of the seller's manufacture are warranted only to the extent that they are warranted by the manufacturer. EXCEPT AS STATED HEREIN, YALE HOISTS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Improvements:

Yale Hoists is constantly striving to improve its product. Changes in design and improvements will be made whenever manufacturer believes the efficiency of the product will be improved without incurring any obligation to incorporate such improvements in any products which have been shipped or are in service.

Important Notice:

Use of chain, wire rope or replacement parts other than as supplied as original equipment on Yale hoists may lead to dangerous operation. Accordingly, Yale Hoists cannot be responsible in such cases and our warranty will be voided.

For more information, write Yale Hoists, Forrest City, Arkansas 72335.

Yale® HOISTS
3105 N. Washington
P. O. Box 1000
Forrest City, Arkansas 72335
Customer Service (800) 999-6318
FAX (800) 766-0223